

**ROYAL
ENFIELD
OWNER'S
MANUAL**

HIMALAYAN

FOREWORD

Thank you for choosing the Royal Enfield Himalayan motorcycle. Your new motorcycle is the product born from Royal Enfield's vast experience of riding in the Himalayas since decades, from exhaustive testing in all conditions, and our continuous striving for superior reliability and performance.

Please read this Owner's Manual carefully before riding so that you will be thoroughly familiar with the proper operation of the Himalayan's controls, its features and capabilities.

To ensure a long and trouble-free life for your motorcycle, give it the proper care and maintenance described in this manual. This Owner's Manual should be considered a permanent part of your motorcycle and should remain with it even if your motorcycle is subsequently sold.

TALK TO ROYAL ENFIELD:

Our relationship with you does not end with the purchase of your Himalayan. Your feedback on the buying and ownership experience is very important in helping us better develop our products and services for you. Please help us by registering your email address at your dealership. You will then receive an online customer satisfaction survey invitation to your email address where you can give us this feedback.

Finally, welcome to the Royal Enfield community! Log on to the exciting world of Royal Enfield on www.royalenfield.com to know more about the company, the community and the next big ride on your Himalayan. We look forward to sharing your adventures.

—Team Royal Enfield

NOTICE

All information in this manual is based on the latest product information available at the time of publication. Due to continuous improvements, there may be discrepancies between the information in this manual and your motorcycle. Royal Enfield reserves the right to make production changes at any time without prior notice and without incurring any obligation to make the same or similar changes to motorcycles previously built or sold.

All images shown are for reference to explain and need not to be exactly the same on the model you own. Technical specifications are subject to change without prior notice.

“© Copyright 2016 Royal Enfield (A unit of Eicher Motors Ltd.). All Rights Reserved. No part of this manual shall be copied, distributed or otherwise dealt without the express permission in writing of Royal Enfield”.

NOTE:

This motorcycle meets Bharat Emission Norms - Bharat Stage - III

SERVICE HEAD QUARTERS

Royal Enfield, A Unit of Eicher Motors Limited,
Thiruvottiyur High Road, Thiruvottiyur, Chennai - 600 019.
Phone : 044 - 4223 0400, Fax : 044 - 42011719
E-mail : customerservice@royalenfield.com
Website : www.royalenfield.com

Disclaimer

1. Wash the motorcycle only with plain water. Do not use any cleaning agents or detergents, especially on painted surfaces, as it will cause discoloration and damage to the paint.
2. Do not polish your motorcycle as it will increase the gloss level and damage the paint
3. Scratches or marks on painted / plastic surfaces cannot be removed OR touched up
4. Warranty is not applicable for discoloration of the Silencer & Exhaust pipe, as it is a natural process that will happen during usage.

Part No. 587969/A / Qty. 2000 / Jan. '16

CONTENTS

Personal and Motorcycle Information	4	Minor Maintenance Tips	35
Technical Specifications	5	Long Trip Precautions	49
Recommended Lubricants	8	Washing Procedure	50
Safety Definitions	9	Storage Precautions	51
Motorcycle Identification Numbers	10	Trouble Shooting	52
Location of Key Parts	11	Warranty Terms & Conditions	53
Operation of Controls	14	Emission Warranty	55
Pre-Operational Checks	24	Free Service coupons	58
Safe & Happy Riding	25	Paid Service & Maintenance Record	67
Running in Period	26	Regional Offices	71
Starting	27	Authorised Dealers	72
Gear Shifting, Riding & Stopping	28	Notes	94
Parking	29	Annexures	
Periodical Maintenance Chart	30	Form 22	
Tools & First Aid kit	34		

TECHNICAL SPECIFICATIONS

ENGINE

Engine Type	Single Cylinder, 4 Stroke SOHC, Air cooled
Bore	78 mm
Stroke	86 mm
Displacement	411 cc
Compression ratio	9.5:1
Max Power @ RPM	24.5 bhp (18.02 KW) @ 6500 rpm
Max Torque @ RPM	32 Nm @ 4250±250 rpm
Idle rpm	1150 -1500 rpm
Starting System	Electric Start
Air filter element	Paper element
Lubrication	Forced Lubrication, Wet sump
Engine oil capacity	2.3 L (Initial fill only) 2.0 L (Subsequent Refills)
Engine oil grade	SAE 15W 50 API SL Grade JASO MA 2
Cooling	Air cooled with Oil cooler

IGNITION SYSTEM

Ignition system	Digital Spark Ignition, TCI System
Spark plug	Bosch - UR5CC
Spark plug gap	0.7 to 0.8 mm

TRANSMISSION

Clutch	Wet Multi Plate
Primary drive	Gear
Primary ratio	2.31:1
Gear box	5 Speed, Constant Mesh

Gear Ratios

1st Gear	1 st 2.916:1
2nd Gear	2 nd 1.833:1
3rd Gear	3 rd 1.428:1
4th Gear	4 th 1.173:1
5th Gear	5 th 1:1
Secondary Drive	5/8" Chain & Sprocket
Secondary Ratio	2.533:1
Drive Chain links	110 links

TECHNICAL SPECIFICATIONS

CHASSIS

Frame	Half duplex split cradle
Suspension	
Front	Telescopic, Hydraulic Damping, Front wheel travel: 200 mm
Rear	Swing arm with Linkage type Hydraulic damping Mono shock, Rear wheel travel: 180 mm
Brakes	
Front Disc	300mm Dia disc.
Rear Disc	240mm Dia disc.
Tyre size	
Front	90 / 90 - 21
Rear	120 / 90 - 17
Tyre Pressures	
Solo	
Front	25 PSI / 1.75 Kg/cm ²
Rear	32 PSI / 2.25 Kg/cm ²

With Pillion

Front	27 PSI / 1.89 Kg/cm ²
Rear	34 PSI / 2.39 Kg/cm ²
Steering lock	In built
Fuel tank capacity*	15±0.5 litres approx.*
Reserve	3.0 + 0.5 Litres approx.
Low fuel warning	Fuel Gauge (Red zone) 5.5±0.50 litres approx.
Dead stock	0.5 litre approx.
(unusable fuel)	

* The above values are approximate and the actual capacity may vary with each fuel tank .

ELECTRICALS

Generation	Alternator
System	12V - DC
Battery	12V - 8 AH MF

TECHNICAL SPECIFICATIONS

Head lamp	BULB - H4 12V 60/55W
Tail lamp / Brake lamp ...	2V- 4/1W LED
Licence Plate illuminator	12V- LED
Front position lamp	12V - LED
Speedometer lamp	12V - LED
Hi beam indicator	12V - LED
Neutral lamp telltale	12V - LED
Turn signal telltale	12V - LED
Turn signal	12V, 10W
Horn	12V, 2.5 Amp
Starter Motor	12V, 0.7 KW
Instrument Cluster	Digital cluster with LCD panel
Side Stand indicator	LCD Indication

■ Values / Dimensions mentioned above are for reference only.

■ In view of continuous improvements being done on our motorcycles, the specifications are subject to change without prior notice.



WARNING

Using bulbs/ electrical gadgets other than specified rating may lead to overloading/ erratic behaviour / premature failure of electrical system.

Modifications or fitments which are not approved by Royal Enfield, will seriously affect the performance of the vehicle and will render the warranty void.

DIMENSIONS

Length	2190 mm
Width	840 mm
Height	1360 mm
Wheel base	1465 mm
Ground clearance.	220 mm
Saddle Height	800 mm

WEIGHTS

Kerb weight (90% fuel&oil)	182 kgs.
Max. permissible load	183 kgs.

RECOMMENDED LUBRICANTS

ENGINE OIL	
Grade	SAE 15W 50 API SL Grade JASO MA 2
Capacity	2.3 Ltrs. (First Fill only) 2.0 Ltrs. Approx. (during oil & filter element replacement in periodical maintenance)

FRONT FORK OIL		BRAKE FLUID	
Grade	2W/35	Grade	DOT 3 or DOT 4
Capacity	455 ml/leg	Capacity	Fr./Rr. 50ml

DO NOT Mix DOT 3 & DOT 4 brake fluid together.

CAUTION

Using Non Recommended/ In-Correct oils, can cause serious damage to the moving parts, affect performance of the motorcycle AND void the warranty.

NOTE

Recommendation subject to change without notice.

ISO 14001 OPERATION CONTROL PROCESS

As per the guidelines in the ISO 14001 Environmental Management System, customers are advised to carry out timely replacement of Engine, Front Fork and Brake oils, ONLY through a Royal Enfield Authorised Dealer / Service Center for the safe disposal of the used oils to prevent Environmental pollution.

In case the oils are replaced privately, it is advised to ensure the old/ removed oils are collected carefully and reached to a certified disposal agency, nearest to you to safely disposing the oils.

Similarly, hazardous wastes such as old/discarded Batteries, Tyres, Tubes, Cables, Gaskets, Oil filters etc. should also be disposed off carefully and properly only through a certified disposal agency.

SAFETY DEFINITIONS

The information given under the titles : Warning, Caution and Note are for your safety and for the care and safety to your motorcycle and others. Please read these carefully and if disregarded may result in injury to yourself or others and damages to the motorcycle.



WARNING

Indicates a potentially hazardous situation. Disregarding this message may result in injury to rider or other persons.

CAUTION


This message if disregarded may result in damage to the motorcycle.

NOTE

Indicates important and useful messages for clearer understanding.

All Images shown in subsequent pages are for reference to explain and need not to be exactly the same on the model you own.

LOCATION OF KEY PARTS - TOP VIEW

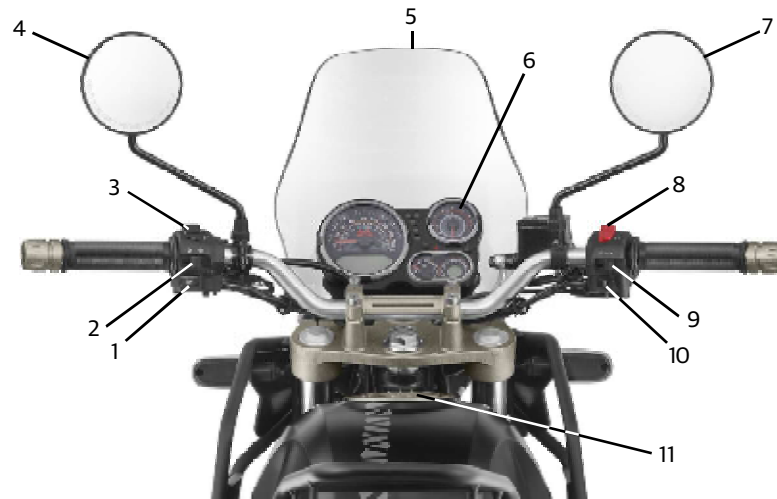

1. Horn Button
2. Turn Signal Switch
3. Head Lamp Dip Switch
4. Rear View Mirror Left Side
5. Wind Shield
6. Instrument Cluster
7. Rear View Mirror Right Side
8. Engine Stop Switch
9. Head Lamp Switch
10. Electric Start Switch
11. Fuel Tank Cap

LOCATION OF KEY PARTS - RIGHT SIDE VIEW



1. Front Trafficator Right Side
2. Horn
3. Oil Level Window
4. Rear Brake Pedal
5. Rider Foot rest Right Side
6. Pillion Foot rest Right Side
7. Rear Trafficator Right Side

LOCATION OF KEY PARTS - LEFT SIDE VIEW



1. Front Trafficator Left Side
2. Head Lamp
3. Fuel Tap
4. Tail Lamp
5. Rear Trafficator Left Side
6. Licence plate illuminator
7. Pillion Foot rest Left Side
8. Side Stand
9. Rider Foot rest Left Side
10. Gear Change Lever

OPERATION OF CONTROLS

STEERING LOCK

- Turn the handle bar to extreme left or right position.
- Switch "OFF" ignition, depress key and turn.
 - Anticlockwise to Lock
 - Clockwise to unlock.



FUEL TANK CAP

- Turn key clockwise to open.
- Press cap to lock with key in position.



IGNITION SWITCH

- ⊗ OFF
- ON



NOTE

- Key is common for Ignition, steering lock, fuel tank cap & seat.
- Key can be removed only when Ignition is switched "OFF" / fuel tank cap is locked.
- Ensure handle bar is turned to extreme left position for locking steering.

ENGINE STOP SWITCH

- ⊗ Engine OFF
- Engine ON



E-START SWITCH

- ⊗ Depress & hold till engine starts





OPERATION OF CONTROLS

HORN

 Press

HEAD LIGHT SWITCH

 Head Lamp ON
 Position Lamp ON
● OFF

DIMMER SWITCH

 High beam  Low beam

DAY FLASH

Press for Head Light Flash



TURN SIGNAL SWITCH

← Left turn signal ON
↑ OFF (Push to cancel)
→ Right turn signal ON

CHOKE


ON OFF

CAUTION

- Chokes should be used only to start engine in cold climates (less than 20°C) or first time in the morning. Riding with the Choke "ON" will result in Engine Misfiring, Erratic behaviour, High fuel consumption, and increased Emission values.

FUEL TAP

← OFF

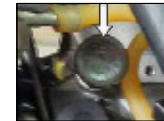

OPERATION OF CONTROLS

⇓
Main
ON



⇑
Reserve
ON



RIDER & PILLION SEAT LOCK

- Locate key on left side & turn clock wise to release pillion seat. Lift pillion seat and remove.
- Lift front seat from rear & remove.




DOCUMENT HOLDER

- Useful for storing motorcycle documents and owners manual.
- Remove the pillion Seat.
- Gently press on top to release the tabs from the frame and open slightly.
- To completely remove, release the bottom tabs from the frame by pulling out gently.



DIGITAL INSTRUMENT CLUSTER

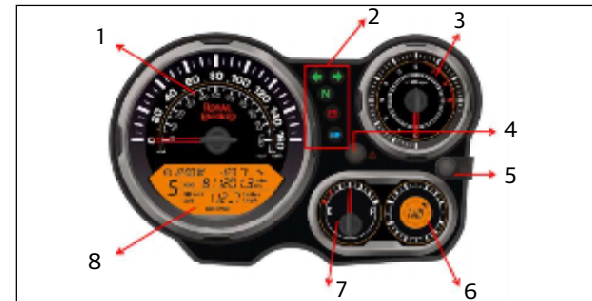

1. Speedometer

2. Telltales

3. Tachometer

4. Hazard Button

5. Select / Re-set Button

6. Compass LCD


7. Fuel Gauge

8. Main Display LCD

OPERATION OF CONTROLS

TELL TALES

- Turn Left, Turn Right - Green
- Neutral - Green
- Battery Indication - Red
- High Beam - Blue

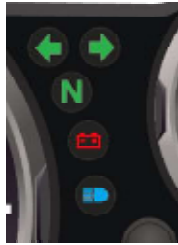

HAZARD BUTTON

- To indicate a hazardous condition in case of vehicle breakdown, safety related issues on the road etc.
- Depress button once to switch "ON" hazard warning.
- Depress button again to switch "OFF" hazard warning



SELECT/RE-SET BUTTON

- Used for the following operations.
 - i) Trip meter
 - ii) Clock setting
 - iii) Temperature unit change over
- Refer tables in subsequent pages for correct usage.



COMPASS LCD

- Useful for Navigation during riding
- Text indicates heading direction of vehicle. (N, S, E, W, NE, NW, SE, SW)
- Arrow will always point to North.
- Eg. if heading Northwest, text will display NW and arrow **will be in top right corner to indicate North.**



CAUTION

1. Avoid using magnetic key chains, magnetic/ferrous materials or electronic components with interference around cockpit area to avoid malfunctioning of digital compass

OPERATION OF CONTROLS

2. If compass LCD enters into calibration mode ("CA" flashing) ride vehicle in "8" direction slowly to calibrate the compass or approach nearest authorized service center for assistance and proper calibration.
3. Indication fluctuation during riding is normal operation due to impact of road irregularities.
4. Compass indication tolerance is $\pm 45^\circ$

WARNING

Do not concentrate on compass indication while riding as it can distract you and result in an accident.

FUEL GAUGE

- Indicates fuel level in tank.



MAIN LCD



1. Clock
2. Ambient Temperature Indication
3. Service Reminder
4. Odometer

5. Trip A/B AVG Speed Trip A/B Trip F
6. Side Stand Indicator
7. Gear Position Indication

OPERATION OF CONTROLS

CLOCK



- Display in 12 hour format with AM/PM indication.
- Will reset to 12:00 AM when battery is disconnected.

CLOCK SETTING

Function	Switch	Pressure time (sec)	Action
CLOCK SETTING MODE	SELECT & HAZARD pressed with No Speed input	≥ 3 sec	In ignition key ON position Enters into clock setting mode and hour digits starts to blink
	SELECT	< 1 sec	Hours value shall increment by 1 accordingly for no of press
	SELECT	≥ 3 sec	Hour value saved and minute digits starts to blink
	SELECT	< 1 sec	Minutes value will increase by 1 by each press of the "Select" button
	SELECT	≥ 3 sec	Minute value save and PM/ AM digits starts to blink
	SELECT	< 1 sec	PM / AM is interchangeable by each press of the "Select" button
	SELECT	≥ 3 sec	PM / AM save and exit from clock set mode
	NO ACTION	20 sec	Auto exit without saving changes and continue with previous setting

OPERATION OF CONTROLS

AMBIENT TEMPERATURE INDICATION



- Ambient temperature display can be changed from Celsius to Fahrenheit and vice versa.
- The temperature indication may increase during vehicle riding/engine ON condition due to increase of engine temperature.
- Ambient temperature indication tolerance is $\pm 2^{\circ}\text{C}$

CAUTION

Refer to ambient temperature indication only when vehicle is stationary and engine is switched OFF.

TEMPERATURE UNIT CHANGEOVER

Temperature sensor push button management.

Required button

1. Hazard



Function	Button	Pressure time (sec)	Action
TEMPERATURE UNIT CHANGE OVER	HAZARD	≥ 10 secs	In ignition key ON position, long press and hold HAZARD button for period ≥ 10 secs to re-set temperature units from degree Celsius to Fahrenheit and vice versa.

OPERATION OF CONTROLS

SERVICE REMINDER



- Service reminder is provided to remind about service due.
- Spanner symbol will flash till vehicle is serviced at service center
- Service reminder can be reset ONLY by authorized personnel at service center after service is completed
- Service reminder symbol will flash on as per below distance input from odometer.
 - i) 1st service - 450 kms
 - ii) 2nd service - 4900 kms
 - iii) from there on for every 5000 kms from previous value (ex: 9900,14900 etc.)

TRIP A/B & AVG SPEED A/B



- Trip A/B indicates distance travelled in particular trip.
- Avg A/B indicates average speed of vehicle in particular trip mode.

OPERATION OF CONTROLS

Function	Switch	Pressure time (sec)	Action
TRIP A	SELECT	< 1 sec	In ignition key ON position, Move to: AVA A
	SELECT	> 2.5 sec	TRIP A/AVG A RESET
AVG A	SELECT	< 1 sec	Move to: TRIP B
	SELECT	> 2.5 sec	TRIP A/AVG A RESET
TRIP B	SELECT	< 1 sec	Move to: AVG B
	SELECT	> 2.5 sec	TRIP B/AVG B RESET
AVG B	SELECT	< 1 sec	Move to: TRIP A
	SELECT	> 2.5 sec	TRIP B/AVG B RESET

TRIP "F" MODE



- The word, Trip "F" will flash when the Trip "F" mode is active
- Trip "F" is provided to measure distance travelled by the vehicle when fuel level in the vehicle is 5.5 ± 0.5 lts. in the fuel tank so that the rider can plan fuel filling accordingly based on his trip requirements, Trip "F" will get activated when needle on fuel gauge enters the red zone.
- Trip F mode would come into function automatically.
- Trip F mode would de-activate automatically if fuel is filled above 5.5 ± 0.5 lts.
- During Trip F mode rider can toggle between Trip A/B but mode will return automatically to Trip "F" after 25 ± 5 secs.

NOTE

- Trip "F" will stop displaying at approximately 90 ± 5 seconds AFTER fuel level in tank is above 5 ± 0.5 litres, side stand is fully retracted AND Ignition is switched ON
- Trip "F" is not linked to actual fuel tap knob position and does not indicate the actual reserve fuel in the fuel tank.

OPERATION OF CONTROLS

SIDE STAND INDICATOR



- "SideStand" will be displayed when sidestand is not retracted.


GEAR POSITION INDICATION



- Displays the gear position in which the vehicle is traveling.
- When in neutral the indication will be "0"
- When in gear the appropriate number between 1 to 5 will be displayed.

BATTERY INDICATION

- Type : LED
- Color : Red
- Battery indication will glow continuous:
- If Ignition key is ON and engine not running.
- When the battery charge is low/ discharging.

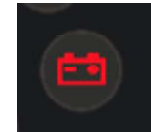

PRE OPERATIONAL CHECKS

A careful check of the following must be carried out every time before riding and specially after long periods of storage to determine if any additional maintenance is necessary.

1. Tyres for correct pressure, abrasions or cuts.
2. Rear chain for proper tension and sufficient lubrication.
3. Brakes, steering and throttle for proper responsiveness.
4. Cables for fraying or crimping and free operation.
5. Engine oil level.
6. Wheel spokes for proper tightness and no breakage.
7. Headlamp, tail lamp, brake lamp and indicator lamps for proper functioning.



WARNING

For your personal welfare and safety, these pre-operational checks should be performed periodically. Failure to do so may affect safe operation, damage your motorcycle and could result in an accident causing serious injury.

SAFE & HAPPY RIDING

RIDING GEAR

- Motorcycle riding pants and jacket fitted with certified Armour.
- Motorcycle riding boots.
- Motorcycle riding gloves.
- ISI, DOT or SNELL certified helmet as applicable for rider and pillion.

NOTE

Bright colored and reflective garments enable greater visibility to other road users especially at night.

CAUTION

Loose clothing may get caught on moving parts of the motorcycle. It might not allow the armour to be in the proper place for maximum protection. Excessive flapping might also cause discomfort and greater fatigue.

SITTING POSTURE

Correct sitting posture is a must for stable and safe riding.

- Sit with your shoulders completely relaxed.
- Do not lock your elbows and retain a slight bend to enable maneuvering.
- Hold the handle grip close to its inner end.
- Lightly grip the fuel tank with your knees.
- Keep your toes in "straight ahead" direction.
- Before turning, look extensively in the rear view mirror, without turning your head.

BRAKING

- Use both front and rear brakes simultaneously for maximum braking efficiency.
- While riding on wet or bad road conditions use brakes cautiously.



WARNING

Applying any one or both brakes suddenly may cause the motorcycle to skid.

RUNNING IN PERIOD

The Himalayan Motorcycle is capable of consistent high speeds. However as with any new motorcycle, a "RUNNING-IN" procedure is essential to help in proper "Bedding-In" of the various moving parts in your motorcycle and to achieve optimum performance subsequently.

1. During the first 2000 Kms of run, do not exceed the speed limits as shown in the table below.
2. Do not exceed maximum specified payload.
3. Warm up the engine for a few minutes at idling speed to allow engine oil to lubricate all the moving parts in the engine before riding the motorcycle.
4. Avoid full throttle operation and do not ride at constant throttle continuously. Vary the speed by 10% while riding.
5. Avoid sudden accelerations and racing starts.
6. Avoid prolonged full-throttle operation. Vary speed occasionally

Gear \ Motorcycle Speed	First 500 kms	501 - 2000 kms
1	15 KMPH	20 KMPH
2	25 KMPH	30 KMPH
3	30 KMPH	40 KMPH
4	45 KMPH	55 KMPH
5	60 KMPH	80 KMPH


STARTING

- Ensure Gear is in Neutral position and the Neutral lamp is glowing in the Instrument Cluster. To shift into neutral, move the motorcycle back and forth gently, while simultaneously shifting the gear.

CAUTION

Do not attempt to shift gears without moving the motorcycle back and forth as it will damage the gears mechanism.

- Turn fuel tap to 'ON' / "RESERVE" position as applicable.
- Use choke if required in cold climatic conditions (below 20°C)

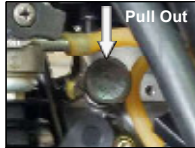

- Switch "ON" ignition and the Stop Switch to "RUN" Position.



- Depress and Hold the Clutch Lever.



- Press Starter Button and hold till Engine starts. **Do not release the button before Engine starts.**



CAUTION

In case engine does not start, do not keep pressing starter button continuously as it will drain the battery.

GEAR SHIFTING, RIDING & STOPPING

- Warm up engine for 2 minutes
- till idling is consistent/stable

GEAR SHIFT PATTERN
1 — N — 2 — 3 — 4 — 5




- Press clutch lever towards the hand grip.
- Press gear pedal with toe towards down to engage 1st gear.
- Gently open throttle and release clutch simultaneously. If clutch is released suddenly, the engine may stall and cause a jerky start.

CAUTION

The clutch must be fully disengaged before attempting a gear shift. Failure to fully disengage the clutch may cause a jerky start OR stalling the engine besides causing damage to transmission parts.

- Lift gear lever with toe to engage 2nd and subsequent gears.

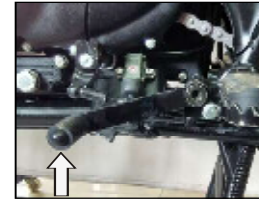

NOTE

Always start the engine with gear in neutral position.


Always move the motorcycle in first gear position only.

When engine speed decreases or while climbing a gradient or running at a reduced speed, shift to the appropriate lower gear to prevent the engine from stalling or straining to pull.

PARKING

PARKING MOTORCYCLE ON SIDE STAND

- Select a firm, flat surface.
- Extend side stand. Tilt the motorcycle to the left, till it is supported firmly.

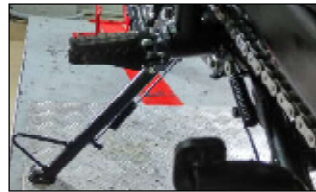

WARNING

Ensure side stand is retracted fully before riding the motorcycle.
Please exercise extreme care while parking and ensure it is parked firmly to avoid the motorcycle from falling over and causing injury to you or to others and damage to the motorcycle parts.

PERIODICAL MAINTENANCE

The Periodical maintenance schedule detailed below is based upon average riding conditions and indicates the Intervals at which regular inspections, adjustments, replacements and lubrications must be carried out to help maintain your Himalayan motorcycle meticulously. If in case the motorcycle is used frequently in very dusty environment / severe climatic conditions / Poor Roads / stagnant water etc., the maintenance will need to be done earlier as may be required.

Contact a nearest Royal Enfield Authorised Dealer / Service Center to carry out the periodical maintenance and for any expert advice.

Sl. No.	DESCRIPTION	FREE SERVICE				PAID SERVICE							
		whichever is earlier				whichever is earlier							
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50	
	Months	1.5	6	12	18	24	30	36	42	48	54	60	
1	Engine Oil (Level check / Replace)	R	I	R	I	R	I	R	I	R	I	R	
		Check level at every 1000 Kms or earlier as required											
2	Oil Filter Element	R		R		R		R		R		R	
3	Engine oil strainer on crankcase LH	C		C		C		C		C		C	
4	Inlet / Exhaust Tappet setting	I & A	I & A	I & A	I & A	I & A	I & A	I & A	I & A	I & A	I & A	I & A	
5	Carburetor (C.V. Type)	* Clean, Inspect and Tune											

A : Adjust C : Clean I : Inspect L : Lubricate R : Replace

* Refer Service Manual. # Check every time after vehicle is used for off road riding

For maintenance after 50,000 Kms., please repeat same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Center.

PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE					PAID SERVICE					
		whichever is earlier					whichever is earlier					
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50
	Months	1.5	6	12	18	24	30	36	42	48	54	60
6	Rubber hose, Air filter to Carburetor *	I	I	R	I	R	I	R	I	R	I	R
7	Rubber hose, Inlet manifold *	I	I	R	I	R	I	R	I	R	I	R
8	Oil cooler inlet & outlet pipes *	I	I	I	R	I	I	R	I	I	I	R
9	Spark plug	C&A	C&A	C&A	R	C&A	C&A	R	C&A	C&A	R	C&A
10	HT leads for crack	I	I	I	I	I	I	R	I	I	I	I
11	Air filter element	C	C	R	C	R	C	R	C	R	C	R
		Clean/ Replace more Frequently if motorcycle always used in dusty / off Road conditions.										
12	Accelerator Cable	I	I	R	I	R	I	R	I	R	I	R
13	Clutch Cable	I	I	R	I	R	I	R	I	R	I	R
14	Clutch free play	Adjust every 1000 Kms or earlier as required										
15	Clutch no slippage	I	I	I	I	I	I	I	I	I	I	I

A : Adjust C : Clean I : Inspect L : Lubricate R : Replace

* Refer Service Manual. # Check every time after vehicle is used for off road riding

For maintenance after 50,000 Kms. , please repeat same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Center.

PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE				PAID SERVICE							
		whichever is earlier				whichever is earlier							
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50	
	Months	1.5	6	12	18	24	30	36	42	48	54	60	
16	Clutch Plates				R			R			R		
17	Cam Chain / Chain Pads / Auto chain Tensioner	I	I	I	I	I	I	I	I	I	I	I & R	
18	Inlet / Exhaust valve seating (compression test) *						I					I	
19	Steering ball races #	I & A	I & A	L & A	I & A	L & A	I & R	I & A	L & A	I & A	L & A	I & R	
20	Front Fork oil	I	I	I	R	I	I	R	I	I	R	I	
21	Fuel Filter in Fuel Tap	C		C		C		C		C		C	
22	Fuel Pipe	I	I	R	I	R	I	R	I	R	I	R	
23	Battery terminals (apply petroleum jelly)	C	C	C	C	C	C	C	C	C	C	C	
24	Earth wire eyelet Tightness			I		I		I		I		I	
25	Hydraulic Brake Fluid - Front & Rear #	I	I	R	I	R	I	R	I	R	I	R	
26	Hydraulic brake hose & Washers - Front & Rear #	I	I	I	I	R	I	I	I	R	I	I	

A : Adjust C : Clean I : Inspect L : Lubricate R : Replace

* Refer Service Manual.

Check every time after vehicle is used for off road riding

For maintenance after 50,000 Kms. , please repeat same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Center.

PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE					PAID SERVICE					
		whichever is earlier					whichever is earlier					
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50
	Months	1.5	6	12	18	24	30	36	42	48	54	60
27	Brake Pads - Front & Rear #	I	I	R	I	R	I	R	I	R	I	R
28	Tyre wear pattern (Front & Rear)#	I	I	I	I	I	R	I	I	I	I	R
29	Spokes tightness / Wheel rim run out front & rear #	I	I	I	I	I	I	I	I	I	I	I
30	Front & Rear wheel bearings for play #	I	I	I	I	I	I & R	I	I	I	I	I & R
31	Swing arm Pivot bearings #	I	I	I & L	I	I & L	I & R	I	I & L	I	I & L	I & R
32	Rear Suspension Linkages #	I	I & L	I & L	I & R	I & L	I & L	I & R	I & L	I & L	I & R	I & L
33	Rear Drive Chain #	Clean, Lubricate & Adjust every 1000 Kms or earlier as required										
34	Drive chain & Sprockets set #	I	I	R	I	R	I	R	I	R	I	R
35	Rear wheel cush drive rubbers #	I	I	R	I	R	I	R	I	R	I	R
36	All Mounting Fasteners in vehicle for tightness #	I	I	I	I	I	I	I	I	I	I	I
37	Hand levers, side stand, Rider & Pillion foot rest Pivots	Lubricate every 1000 Kms or earlier as required										


A : Adjust C : Clean I : Inspect L : Lubricate R : Replace

* Refer Service Manual. # Check every time after vehicle is used for off road riding

For maintenance after 50,000 Kms. , please repeat same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Center.

TOOLS & FIRST AID KIT


The tool kit is strapped underneath the Pillion seat.

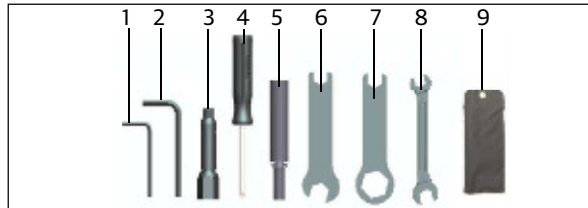

S.No.	Description	Qty.
1.	Allen Key 4 mm	1
2.	Allen Key 6 mm	1
3.	Tool Spark Plug	1
4.	Screw Driver	1
5.	Extension Tube	1
6.	Combination Spanner Open End 17 X 13 mm	1
7.	Combination Ring Spanner 24 X 14 mm	1
8.	D.E. Spanner 10 X 12 mm	1
9.	Tool Wallet	1

A first aid kit is provided with the motorcycle for any emergency requirements.

Please inspect the kit regularly and replace materials upon expiry.

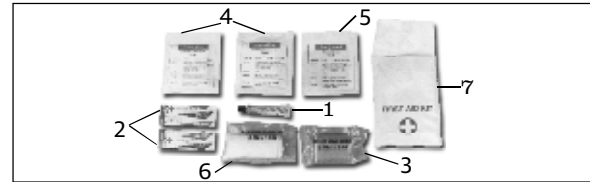

S.No.	Description	Qty.
1.	Antiseptic cream 5 gms	1
2.	Wash proof plaster 1.9 cm x 7.2 cm	2
3.	Gauze bandage 5 cm x 2 cm	1
4.	Sterilized Gauze Swab 5 cm x 5 cm	2
5.	Sterilized elastic plaster 7 cm x 6 cm	1
6.	Elastic Gauze bandage 8 cm x 1 mtr.	1
7.	First aid kit pouch	1

* Please familiarise yourself with the minor maintenance of the motorcycle before attempting to carry out the same.

MINOR MAINTENANCE TIPS

The following simple maintenance activities will help in maintaining your motorcycle. However for an elaborate maintenance, we recommend you to get in touch with a Royal Enfield Authorised Dealer / Service Center.

HAND LEVER PIVOTS

Wipe the area free of dirt / grease.

Apply a few drops of oil on the pivots.



SIDE STAND PIVOTS

Apply a few drops of oil on the pivots after cleaning the area of dirt.




DRIVE CHAIN

Clean the drive chain carefully. Apply chain lubricant while simultaneously rotating the rear wheel. Wipe off the excess lubricant.

OIL LEVEL INSPECTION

- Place motorcycle on its center stand on a firm surface.
- Warm up engine for a few minutes & switch off before checking oil level.
- The level is correct if the oil level is in the middle of the oil level window.
- Top up only with recommended Engine oil.

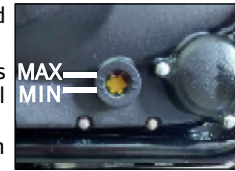

CAUTION


Using Non Recommended/ In-Correct oils, can cause serious damage to the moving parts, affect performance of the motorcycle AND void the warranty.

MINOR MAINTENANCE TIPS

SPARK PLUG

CLEANING AND ADJUSTING PLUG GAP

- Remove spark plug using the plug spanner and tommy bar.
- Clean the insulator tip and electrodes of the plug carefully.
- Check and set the electrode gap between 0.7 to 0.8 mm.

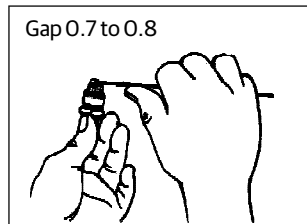

- Refit the spark plug on the cylinder head.

BRAKE FLUID



FRONT BRAKE

REAR BRAKE

- Check fluid level is above "MIN".
- If below "MIN", top up with DOT 3 OR DOT 4, till level is between "MIN" & "MAX".
- Do not overfill.
- DO NOT mix DOT 3 & 4 brake fluids.

CAUTION

Brake fluid is highly corrosive and can cause damage to painted parts. Please ensure brake fluid does not spill on any part of the motorcycle. In the event of a spill, please clean the area immediately with a soft cloth (preferably a wet cloth) to avoid damage.

MINOR MAINTENANCE TIPS

INSPECTION OF TYRES AND RIMS

- Periodically inspect :
 - Rims for spokes breakage, bends and rim run-out.
 - Tyres for proper seating of the beading on the rims, side wall cracks, damages and cuts.
- Check and remove stone, splinters, nails or other sharp particles embedded in the tyre.
- Replace tyres if develop cuts, cracks wear unevenly, and if the lugs have worn out up to the "wear indicators" provided on the side walls of the tyre.
- Use only recommended tyres & tubes, inflated to correct air pressure.



	Front	Rear
Solo	1.75 kg/cm ² (25 PSI)	2.25 kg/cm ² (32 PSI)
With Pillion	1.89 kg/cm ² (27 PSI)	2.39 kg/cm ² (34 PSI)

FRONT WHEEL REMOVAL

- Support front end of engine suitably such that the front wheel is off the ground.
- Loosen pinch bolt on right fork end with 6 mm Allen key.
- Hold spindle on right side and remove spindle nut and washer from left side.
- Support wheel and pull out spindle from right side.
- Remove wheel along with wheel speed sensor and spacer.
- Remove speedo sensor.



WARNING

Dismantling and reassembly of the wheel should be done ONLY by an experienced technician.

MINOR MAINTENANCE TIPS

Failure to adhere to the procedure will cause a serious safety concern while riding the motorcycle and can cause a fatal accident.

CAUTION

Do not press the brake lever when wheel is removed as this will result in the brake pads coming out too far from the brake caliper.


- Place a suitable spacer of 4 mm thickness, between the brake pads to avoid accidental compression of the brake lever.

FRONT WHEEL REASSEMBLY

- Remove the spacer placed between the brake pads
- Locate wheel speed sensor lugs on the hub slot carefully.



- Position wheel along with wheel speed sensor and spacer on left side between the front fork legs, ensuring the brake disc is located between the brake pads.
- Insert wheel spindle from right fork end.
- Position wheel speed sensor such that it is parallel to ground.
- Hold spindle on right side, locate washer and nut on spindle on left side and tighten firmly.
- Tighten pinch bolt on right fork end.
- Rotate wheel and check for smooth rotation.
- Press brake lever and check front brake for efficiency.

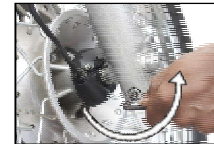

MINOR MAINTENANCE TIPS

REAR WHEEL REMOVAL

- Ensure the motorcycle is on a firm, flat surface and the rear wheel is off the ground.
- Gently remove the brake hose along with its rubber grommets from the locating clips on the swing arm.
- Loosen rear axle nut on the right side and remove along with washer.
- Pull out the wheel axle from the left side, taking care not to drop the wheel spacers.
- Remove the brake caliper assembly from the slot in the swing arm and support it suitably, to avoid damage to the brake hose.



- Slide out the rear wheel from the swing arm, taking care not to drop the spacers on the wheel hub.

CAUTION

Do not press the brake pedal when wheel is removed as this will result in the brake pads coming out too far from the brake caliper.

* Place a suitable spacer of 4 mm thickness, between the brake pads to avoid pads compression in the event the brake pedal is pressed accidentally.

WARNING

Dismantling and reassembly of the wheel should be done ONLY by an experienced technician.

Failure to adhere to the procedure will cause a serious safety concern while riding the motorcycle and can cause a fatal accident.

MINOR MAINTENANCE TIPS

REAR WHEEL REASSEMBLY

- Ensure the cush rubbers are in place in the wheel hub.
- Insert the wheel assembly between the swing arms and position the cush rubbers on the rear sprocket lugs correctly.
- Remove the spacer between the brake pads and locate the caliper such that the brake disc is between the brake pads.
- Locate the caliper bracket slot on the lug in the swing arm.
- Position the respective spacers on the left and right side of the wheel hub.



- Ensure the axle mounting hole in the swing arm, wheel hub and caliper bracket are aligned.
- Insert the wheel axle from the left side of the swing arm and gently tap it in.

CAUTION

- Do not force the spindle through as it will cause damage to the threaded end.
- Ensure correct chain tension and rear wheel alignment with front wheel by adjusting the adjusters on both left and right side of swing arm.



MINOR MAINTENANCE TIPS

- Assemble washer and wheel axle nut on right side and tighten to correct torque.
- Fix the brake hose pipe in swing arm clips properly.



CAUTION

- Please ensure the brake hose is correctly positioned on the clips, without any twist, sharp kinks or damage as it will seriously affect the performance of the rear brake.
- Check rear brake for effectiveness and correct functioning before using the motorcycle.


DRIVE CHAIN TENSION (FREE PLAY 25-30MM)

- Measure the drive chain free play on the top run of the chain.
- The recommended free play is 25 to 30 mm



To adjust the chain tension and free play:

- Loosen rear wheel spindle nut.
- Loosen lock nuts of the chain adjuster on both ends of the swing arm.
- Tighten / loosen the adjuster nut on left swing arm end, to reduce / increase chain tension.
- Rotate wheel slowly and check chain free play at the top run to be between 25 - 30 mm.

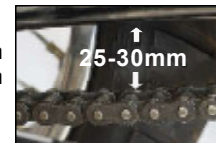

MINOR MAINTENANCE TIPS

- Tighten / loosen adjuster nut on right side to align the front and rear wheels and also to align the reference marks on both left and right side of the swing arm.
- Tighten the lock nuts against the adjuster nuts, taking care not to disturb the adjuster nut settings.
- Tighten rear wheel spindle nut to a specified torque.



WARNING

Chain slackness beyond 30mm will lead to chain slippage.


Maintain drive chain slackness within the specified limits at every 1000 kms interval.

Please Check the front and rear wheels are correctly aligned, after the chain adjustment.

ADJUSTMENTS - CLUTCH LEVER FREE PLAY

Clutch Lever (free play 2 - 3 mm)

- Loosen the cable outer lock nut (A).
- Turn the Nut (B) Clockwise to reduce the play or Anticlockwise to increase the free play.
- Check free play 2 to 3 mm at Clutch lever pivot on handle bar end.
- Tighten lock nut (A) after adjustment is done.

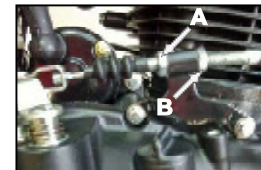

MINOR MAINTENANCE TIPS

BATTERY & MAINTENANCE

- The Motorcycle is provided with 12V - 8 AH MF battery.
- The battery must be periodically checked for corrosion free terminals.




REMOVAL OF BATTERY FROM THE MOTORCYCLE

- Remove side panel on the right side by unscrewing 2 hex socket button head screws.
- Unlock (turn the key clockwise) and remove the pillion seat.
- Remove front seat.



- Disconnect both the terminal wires (negative first and positive next respectively).

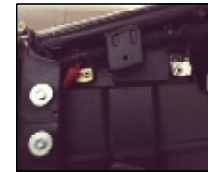

- Remove the battery carrier bracket by loosening the hex bolt.
- Remove the battery.



WARNING

Always disconnect the Black negative (-) battery cable first and then the Red positive (+) cable while removing the battery connections.

MINOR MAINTENANCE TIPS

REASSEMBLY OF BATTERY ON MOTORCYCLE

- Position the battery in the battery carrier such that the terminals are facing inside.
- Ensure ignition switch is in "OFF" condition.
- Connect the red wire to the positive terminal of the battery first.
- Next, connect the black wire to the negative terminal of the battery.
- Smear the terminals with petroleum jelly. (Do not use grease in the battery terminals).
- Place the terminal boot / cap properly.
- Refit the battery bracket.
- Refit right side panel.
- Reassemble Rider seat & Pillion seat.



NOTE

Clean the wire terminals free of corrosion and keep the terminals coated with petroleum jelly.

CAUTION

Keep the +ve and -ve cables firmly connected to the respective battery terminals. Failure to do so may result in damage to the motorcycle electrical system.

CHANGING ELECTRICAL COMPONENTS

HEADLAMP BULB DISMANTLING

- Remove the 2 screws holding the head lamp rim to the housing.
- Gently pull out the head lamp rim along with reflector assembly.



MINOR MAINTENANCE TIPS

- Disconnect head lamp coupler.



- Remove the protective rubber cap over the bulb



- Gently press the bulb holding clip and release it from the slot in the reflector
- Remove the bulb from the reflector.



NOTE

Never touch the bulb with your fingers. Finger prints will etch the glass and decrease bulb life.

Always hold the bulb with clean dry cloth during handling.

Don't disturb the vent cap provided in the inner body mould.



HEAD LAMP BULB REPLACEMENT

- Locate the 3 lugs in the bulb correctly in the reflector.




MINOR MAINTENANCE TIPS


- Locate the bulb holding clip over the bulb and lock it in the slot in the reflector.



- Put the protective rubber cap over the bulb correctly such that the vent pipe is facing downwards.

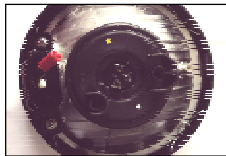

- Connect head lamp coupler on the bulb terminals correctly.

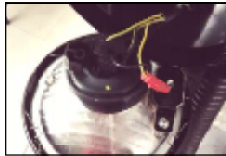

- Locate the head lamp rim in the housing correctly such that it locks in place and the 2 mounting holes of the rim are aligned with the holes in the housing.
- Assemble the 2 screws and tighten firmly.



TAIL LAMP

The tail lamp has a LED lighting system. In the event of failure, the entire tail lamp assembly should be replaced.

Contact an Authorized Royal Enfield Dealer / Service Center to replace the same.



MINOR MAINTENANCE TIPS

TRAFFICATOR BULB REPLACEMENT

- Remove the screw from the trafficator housing back side.
- Remove outer lens.
- Remove the fused bulb by pushing and turning in anticlockwise direction.
- Position the new bulb inside the holder, ensuring that the pins in the bulb, match with slots in the holder
- Push the bulb and turn clockwise direction to lock the bulb in the holder.
- Refit the trafficator cover with reflector and tighten the screw.




NOTE

Do not over tighten the screw.

FUSE & CARRIER

- The fuse carrier is located under the rider seat.
- Remove pillion seat & rider seat.
- Open the fuse carrier lid & replace fuse as indicated inside the lid.
- Replace the required fuse with the spare fuse available in the fuse carrier.

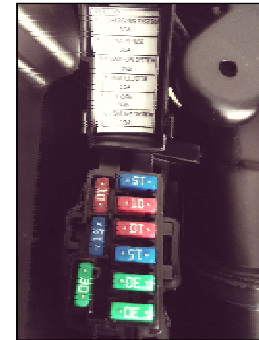

NOTE

Please ensure to replace a spare fuse in the holder at the earliest opportunity.

MINOR MAINTENANCE TIPS

BLADE FUSE USAGE LIST

Fuse No.	Colour	Application
1	Green	Charging System (30A)
2	Green	Main Fuse (30A)
3	Blue	Ignition System (15A)
4	Red	Instrument Cluster/Signaling (10A)
5	Red	Horn (10A)
6	Blue	Lighting System (15A)

WARNING

Please get the electrical system of your Motorcycle checked thoroughly and get the faults corrected immediately after experiencing any fuse failure. Not doing this can result in to repeated fuse failures.


Usage of fuses other than specified rating will damage the complete electrical system.

WINDSHIELD CLEANING

Wipe the windshield with a soft cloth. Do not wipe vigorously as it will cause scratches on the windshield.

Use a mild detergent and lukewarm water to remove any hard coating, insect hits etc from the windshield.

Rinse well with water and use a soft dry and lint free cloth to wipe off the water.

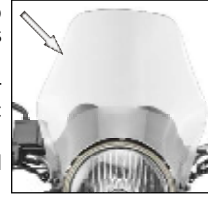

CAUTION

Use of any hard cleaning substances such as stain removers, water repellent compounds, petroleum products, solvents and alcohol based material will seriously affect the windshield transparency.

Scratches, cloudiness, cuts and abrasions on the windshield cannot be polished or removed. The windshield must only be replaced if damaged.

WARNING

Never attempt to clean the windshield while riding as it may cause loss of control and result in an accident.

LONG TRIP PRECAUTIONS

CHECKS PRIOR TO THE COMMENCEMENT OF LONG JOURNEY

- Service the motorcycle at a Royal Enfield Authorised Dealer / Service Center.
- Ensure sufficient quantity of petrol in the fuel tank for the journey planned.
- Check and correct tyre pressure if necessary.

CHECKS AFTER EVERY 1500 KMS OF RUN

- Any loose fasteners.
- Condition of the tyres.
- Correct oil level in engine.
- Working of all lights and horn.
- Proper drive chain tension.

ITEMS TO BE CARRIED

- Tool kit
- First aid kit.
- Bulbs for Headlight, Trafficator light, Fuse.
- Accelerator, Clutch cables.
- Rear chain master link lock assembly.
- Insulation tape.
- Spark plug, Spark plug cap, Fuel hose.

WASHING PROCEDURE

PRECAUTIONS

- Wash motorcycle when the engine is cold.
- Cover the silencer, tail pipe, carburetor, horn and control switches with suitable plastic bags and tie it firmly to prevent water entry.
- Remove ignition key and seal key hole using adhesive tape.
- Brush engine area with a solvent to remove dirt or grease.
- Use low pressure jet of water to clean.
- Never spray water with great force on head lamp, speedometer, flasher lights, front and rear wheel hubs, electrical connections and wires, control cables, carburetor, spark plug, battery etc.
- Do not apply any corrosive solvent on painted surfaces or rubber parts.
- Use luke warm water and mild detergent on the painted components to remove dirt, etc.

- Rinse motorcycle thoroughly with plain water to remove the detergent.
- If possible, use compressed air and blow off water particles from the hard to reach areas of the motorcycle, electrical connections etc.

AFTER WASHING

- Ensure, the motorcycle is thoroughly dry by wiping with a clean soft absorbent cloth or chamois leather.
- Remove all plastic bags and adhesive tapes.
- Lubricate control cables, pivot and rear chain with lube oil
- Polish the painted (**except Stone Black Colour / Matt paint finish**) and plated surfaces using polishing wax.
- Start engine and allow to run at idling speed for a few minutes to warm up engine.
- Drive the motorcycle slowly, applying both brakes intermittently to dry up the water in the brake shoes.

STORAGE PRECAUTIONS

In case your Motorcycle is not going to be used for a month or more, the following precautions should be taken.

- Get the motorcycle serviced through a Royal Enfield Authorised Dealer / Service Center.
- Drain fuel tank, fuel line and carburetor.
- Keep the fuel tap in closed position and spray engine oil inside the fuel tank to prevent rusting.
- Remove spark plug. Pour in about 25ml of clean engine oil through spark plug hole. Close the hole and crank engine several times and refit spark plug.
- Clean rear chain thoroughly and apply a thin film of lube oil.
- Remove battery from the motorcycle. Clean the terminals free of corrosion and apply petroleum jelly to terminals.
- Store the battery in a cool, dry and well ventilated place.
- Cover the silencer with plastic bags to prevent moisture entry. Set the motorcycle on its center stand.
- Apply anti rust solutions on all plated parts. Take care not to apply this solution on rubber or painted parts.
- Store motorcycle in a clean covered area free of moisture and dust.
- For re use after storage, it is preferable to get the motorcycle prepared through a Royal Enfield Authorised Dealer / Service Center to ensure the motorcycle is restored to its peak operating conditions.

TROUBLE SHOOTING

We have listed below a few basic checks in case your motorcycle is not functioning. If in case the problem is not rectified after these checks, it is necessary to get the motorcycle checked by a Royal Enfield Authorised Dealer / Service Center to rectify the problem and to ensure trouble free performance.

Symptom	Observations	Check for / Remedy
Engine Does not start	1. Ignition/Engine stop switch is in OFF position	Switch ON Ignition / Engine stop switch
	2. Very low / No fuel in the fuel tank.	Turn fuel tap to reserve position / Fill Fuel
	3. Lights / horn very dim	Weak/Discharged battery. Replace Battery
	4. Electricals not working	1. Battery completely dead. Replace battery 2. Fuse Blown. Replace appropriate fuse. Note: If fuse blows again, contact Authorised Service Center.
	5. Engine Cranking but not starting	Spark plug Cap/wire disconnected. Reconnect.
Engine Starts BUT shuts off immediatley	Engine shuts off as soon as throttle is closed.	Idling RPM setting in Carburetor is disturbed. Reset the Idling RPM screw in Carburetor. Carburetor Flooded. Shut off fuel tap, gently tap Carburetor bottom and reopen fuel tap. Check if flooding has stopped.
Engine Misfires & Runs Erratically / Stops	1. Typically happens after a Refill / Adulterated / Water in Fuel 2. Motorcycle driven in Low gear / High RPM / Crowded places for long time.	Drain out entire fuel and Refill with fresh fuel from a reputed filling station. Excessive Engine temperature. Switch OFF Engine and allow to cool down.
Poor Pickup	Engine RPM raises disproportionately to motorcycle speed Rear Chain excessively loose causing chain to slip on Sprocket.	Clutch is Slipping. Check for sticky clutch/ clutch not having any free play. Adjust Rear chain to correct tension.

WARRANTY TERMS & CONDITIONS

Royal Enfield Motorcycles are manufactured by following best Quality practices in respect of the material and workmanship.

Royal Enfield (RE) warrants its motorcycle to be free from manufacturing and material defect under normal use subject to following conditions.

1. RE will replace or repair defective part(s) at their Dealerships and Authorised Service Center, free of charge within a period of 24 months or 20,000 kms from the date of sale, whichever is earlier.
2. The warranty is applicable to the first registered owner only.
3. The warranty shall be applicable only if all the 4 free services & 1 paid service are availed in the respective period/kilometer ranges as per the schedule in the owner's manual from RE Authorised Dealer / Service Center.
4. During the warranty period, RE's obligations shall be limited to repairing/replacing part(s) of the motorcycle for free, only if the part(s), on examination is deemed to have a manufacturing defect. Defective part(s) which have been replaced will become the sole property of RE.
5. Consumables like Oil, Oil Filter, Fuel etc used during warranty repair / replacement are not covered and chargeable to the customer.
6. Claims on proprietary items like tyres, tubes, spark plug, battery etc. should be taken up with the respective manufacturer or their authorised agents in the area directly by the customer. RE shall not be liable in any manner to replace them through their dealers. RE will, however, provide assistance in referring such claims on the respective manufacturer.
7. Warranty shall not apply to:
 - (a) Normal ageing, deterioration or rusting of plated parts, paints coat, rubber parts, soft items, glass items, plastic parts etc.

WARRANTY TERMS & CONDITIONS

- (b) Components like fuel filter, oil filter, air filter paper element, control cables, brake shoes / brake pads, clutch plates, drive chain & sprocket kit, steering ball races, electrical equipment, wiring harness etc., which are subjected to normal wear and tear.
 - (c) Failures occurred due to use of non recommended grade lubricants, fuel or improper level.
 - (d) Damages due to use of non-genuine parts, lack of proper maintenance, incorrect riding habits.
 - (e) Parts damaged due to accidents, collision, abuse etc.
 - (f) Irregularities not recognised as affecting the quality or function of the motorcycle such as slight vibration, oil leakage, blue discoloration of exhaust bent pipe/silencer/soft or hard shock absorber etc.
 - (g) Defects arising from fitment of unauthorised or additional electrical loads.
 - (h) Motorcycle serviced or repaired at unauthorised service centers.
 - (i) Motorcycle used for competitions / racing / Stage Rallying etc.
 - (j) Electrical component like bulbs, fuses etc. and electronic components failure due to repairs by arc welding.
 - (k) Normal maintenance operations like adjustment of brakes, cleaning fuel system, engine tune-up and other such adjustments.
 - (l) Oxidization of buffed/painted/powder coated items etc.
8. Use only Royal Enfield approved parts and accessories. Use of certain other manufacturer's performance parts will void your new motorcycle warranty.
9. RE reserves the right to finally decide on all warranty claims.
10. RE reserves the right to make changes in design of the motorcycle without any obligation to install these changes on previously supplied motorcycles.

EMISSION WARRANTY

In compliance with the provisions of Rule 115(2) of the Central Motor Motorcycle Rules, 1989, Royal Enfield certifies that the following warranty is applicable to those components liable to affect the emission of the gaseous pollutants in its range of motorcycles, in normal use to which it may be subjected to.

This emission warranty comes into force from 01st July 2001 and is valid for a period of 30,000 Kms. or 36 months, whichever occurs earlier, from the date of sale to the first customer and is in addition to and parallel to the warranty policy, conditions and obligations laid down in the Owner's Manual.

Royal Enfield further warrants that if on examination by its Authorised Dealer / Service Center, the motorcycle fails to meet the specified emission standards, then the Authorised Dealer / Service Center shall take necessary corrective measures and shall at its sole discretion, repair or replace free of charge such components of the emission control system to meet the required emission standards.

The method/s of examination to determine the warranty conditions of the emission warranty related components will be at the sole discretion of Royal Enfield and / or our Authorised Dealer / Service Center and results of such examination will be final and binding. If on examination the warranty conditions of the part/s is/are not established, Royal Enfield will have the right to charge all, or part of the cost of such examination to the customer in addition to the cost of the components.

In case of acceptance of the component/s under Emission warranty, Royal Enfield will replace free of charge, the component/s as required. However, the consumables like fuel, lubricants, solvents, etc shall be chargeable to the customer as per actuals.

In case any of the components covered under emission warranty or the associated parts, are not independently replaceable. Royal Enfield will have the sole discretion to replace either the entire assembly or parts of the assembly, through suitable repairs.

Royal Enfield reserves the right to carry out necessary consequential repairs to the motorcycle or replace any part, in addition to the repair or replacement of the components covered under emission warranty, to establish compliance to in-use emission standards. Such repairs / replacements will be chargeable to the customer.

All parts removed for replacement under warranty will become the property of Royal Enfield.

Royal Enfield will not be responsible for the cost of transportation of the motorcycle to the nearest Authorised Dealer / Service Center OR for any loss due to non availability of the motorcycle during the period of examination and repairs by Royal Enfield and / or their Authorised Dealer / Service Center.

Royal Enfield will not be responsible for any penalties that may be charged by statutory authorities on account of failure to comply with the in-use emission standards.

EMISSION WARRANTY

That cost/s incurred to check emission of the motorcycle will have to be borne by the customer.

Emission warranty will be applicable irrespective of the change of ownership of the motorcycle provided all the conditions as laid down in this document are met from the date of original sale of the motorcycle.

THE WARRANTY SHALL APPLY IF THE CUSTOMER

- Observes all the important instructions and any other precautions listed in the owner's manual.
- Under all circumstances uses lubricants and fuel as recommended by Royal Enfield.
- Regularly obtains and carries out maintenance in accordance with Royal Enfield guidelines and enters the details in the Log book.
- Immediately approaches the nearest RE Authorised Dealer / Service Center upon discovery of failure to comply with the IN-USE emission standard inspite of having maintained and used the motorcycle in accordance with the instructions in the owner's manual and having carried out such repairs and adjustments as may be required with a view to establish such compliance.
- Produces the 'Pollution Under Control' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate or pursuant upon being directed by an officer as referred to in sub rule (2) of rule 116 of the Central Motor Vehicles Rules (CMVR).
- Produces the owner's manual and Log book for verification details.
- Produces receipts covering maintenance of the motorcycle as specified in the owner's manual from the date of original purchase of the motorcycle.
- Produces valid certificate of Insurance and R T O Registration Certificate (R.C. Book).

THE EMISSION WARRANTY SHALL NOT APPLY IF

- A valid "Pollution Under Control" certificate is not produced.
- The motorcycle is not serviced by RE Authorised Dealer / Service Center as per the service schedule described in the maintenance chart.
- The motorcycle has been subjected to abnormal use, abuse, neglect and improper maintenance or has met with an accident.
- Replacement parts not specified and approved by Royal Enfield have been used.

EMISSION WARRANTY

- The motorcycle, or parts thereof, has been altered, tampered with or modified or replaced in an unauthorised manner.
- The odometer is not functioning or the odometer and / or its reading has been changed / tampered with, so that the actual distance covered cannot be readily determined.
- The motorcycle has been used for competitions, races, and rallies or for the purpose of establishing records.
- On examination by Royal Enfield or its Authorised Dealer / Service Center, if the motorcycle shows that any of the conditions stipulated in the Owner's manual with regard to use and maintenance have been violated.
- The motorcycle has been run on adulterated / leaded fuel or lubricant other than those specified by Royal Enfield in the Owner's Manual or any other document given to the customer at the time of sale of the motorcycle.
- The emission related components are tampered with.
- All service and parts related bills and vouchers incurred during the tenure of the emission warranty is not produced.
- All maintenance activities carried out on the motorcycle during the tenure of the emission warranty is not entered in the log book.

TIPS TO BE ON THE RIGHT SIDE OF LAW

- Always get your motorcycle checked to meet the emission regulations through an authorised emission checking center.
- Always carry a valid 'Pollution Under Control' certificate with you at all times during the validity of the emission warranty (30,000 Kms / 3 years from the date of first sale)

TIPS TO REDUCE POLLUTION

- Ensure that the periodical maintenance is carried out as stipulated in the owner's manual through a Royal Enfield Authorised Dealer / Service Center.
- Use only Unleaded petrol (> 87 octane) from reputed fuel pumps.
- Ensure the fuel used is not adulterated.
- Use correct spark plug as recommended in the owner's manual.
- Use lubricants as per recommendations given on grade / brand in the Owner's Manual.

SERVICE COUPONS

It is our endeavour to provide excellent service to your Royal Enfield Motorcycle at all times. Towards this we provide initial 4 free services at specific intervals.

However to honour Warranty Period of 2 years, it is important to ensure the paid service at 20,000 kms or 24 months (whichever is earlier) is availed.

Please avail these services at the specified time, in any of the Royal Enfield Authorised Dealer / Service Center nearest to you and as a token of satisfactory service, kindly return the service coupons duly filled in and signed, to the service outlet.

Availing all the services in the specified time is a prerequisite to warranty consideration.

The cost of fuel, oil, oil filter element, grease and consumables used during services is chargeable to the customer.

Please ensure the details of the periodic service is filled in the manual for future reference.

1ST FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery terminals	Clean and apply petroleum jelly
3	Rear Drive chain free play	Check, clean, lubricate & adjust
4	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
5	Front & Rear brake	Check & top up brake fluid level
6	Wheel rim front & rear	Check spokes tightness / run out
7	Front fork	Inspect for oil leakage
8	Air filter element	Clean
9	Spark plug	Check, clean & adjust gap
10	H.T. lead	Inspect for cracks
11	Fuel filter in Fuel tap	Clean
12	Carburetor	Clean, Inspect & tune
13	Fuel Pipe	Inspect for cracks
14	Rubber hose, Air filter to Carburetor	Inspect for cracks
15	Rubber hose, Inlet manifold	Inspect for cracks
16	Accelerator cable	Check & adjust play
17	Clutch cable / Lever free play	Adjust play
18	Engine oil sump strainer	Clean
19	Engine oil	Replace
20	Engine oil filter paper element	Replace
21	Hand levers pivot	Lubricate
22	Pivot-Side stand	Lubricate
23	Steering free play	Inspect
24	Tyres front & rear	Check wear pattern

CUSTOMER COPY

Job Card No:

Date :

Odo Reading :

Name of Dealer /
ASC with Code:

.....

.....

ASC / Dealer's
Stamp & Signature

2ND FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery terminals	Clean and apply petroleum jelly
3	Rear Drive chain free play	Check, clean, lubricate & adjust
4	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
5	Front & Rear brake	Check & top up brake fluid level
6	Tyres front & rear	Check wear pattern
7	Front fork	Inspect for oil leakage
8	Air filter element	Clean
9	Spark plug	Check, clean & adjust gap
10	H.T. lead	Inspect for cracks
11	Front & Rear brake hose & Banjo Bolt	Inspect
12	Fuel Pipe	Inspect for cracks
13	Rubber hose, Air filter to Carburetor	Inspect for cracks
14	Rubber hose, Inlet manifold	Inspect for cracks
15	Accelerator cable	Check & adjust play
16	Clutch cable / Lever free play	Adjust play
17	Engine oil	Check level & top-up
18	Hand levers pivot	Lubricate
19	Carburetor	Clean, Inspect & tune
20	Steering free play	Check & Adjust
21	Tyres front & rear	Check wear pattern
22	Pivot-Side stand	Lubricate

CUSTOMER COPY

Job Card No:

--	--	--	--	--	--	--	--

Date :

--	--	--	--	--	--	--	--

Odo Reading :

--	--	--	--	--	--	--	--

Name of Dealer /
ASC with Code:

.....
.....

ASC / Dealer's
Stamp & Signature

3RD FREE SERVICE

3rd Free Service

10,000Kms
or
1 Year

whichever is earlier from the date of sale

Enter the Details in Free Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

10,000 KMS or 1 YEAR WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name :

Dealer Code :

Address :

Frame No:

Regn. No:

Engine No:

Sale Date:

Motorcycle Installation Form No.

Serviced Date:

ODO Reading :

Sold by (Dealer's Name & Address)

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature :

Date:

Contact Phone / Mobile No.:

3RD FREESERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery terminals	Clean and apply petroleum jelly
3	Rear Drive chain free play	Check, clean, lubricate & adjust
4	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
5	Front & Rear brake	Check & top up brake fluid level
6	Wheel rim front & rear	Check spokes tightness / run out
7	Tyres front & rear	Check wear pattern
8	Air filter element	Clean
9	Spark plug	Check, clean & adjust gap
10	H.T. lead	Inspect for cracks
11	Fuel Pipe	Inspect for cracks
12	Rubber hose, Air filter to Carburetor	Inspect for cracks
13	Rubber hose, Inlet manifold	Inspect for cracks
14	Accelerator cable	Check & adjust play
15	Clutch cable / Lever free play	Adjust play
16	Engine oil sump strainer	Clean
17	Engine oil & oil filter paper element	Replace
18	Swing arm spacer & pivot bush	Lubricate
19	Hand levers pivot	Lubricate
20	Carburetor*	Clean, Inspect & tune
21	Steering System	Check, Lub. steering balls & adj.play
22	Front fork	Inspect for oil leakage
23	Pivot-Side stand	Lubricate

*Recommended - Carb Cleaner / Carblick or Fuel line Cleaner Spary (Wurth or ITW Chemin)

CUSTOMER COPY

Job Card No:

--	--	--	--	--	--	--	--

Date :

--	--	--	--	--	--	--	--

Odo Reading :

--	--	--	--	--	--	--	--

Name of Dealer /
ASC with Code:

.....
.....

ASC / Dealer's
Stamp & Signature

4TH FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery terminals	Clean and apply petroleum jelly
3	Rear Drive chain free play	Check, clean, lubricate & adjust
4	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
5	Front & Rear brake	Check & top up brake fluid level
6	Front & Rear brake hose & Banjo Bolt	Inspect
7	Front fork	Replace fork oil
8	Air filter element	Clean
9	Spark plug	Clean & adjust gap
10	H.T. lead	Inspect for cracks
11	Carburetor	Clean, Inspect & tune
12	Fuel Pipe	Check & Replace
13	Rubber hose, Air filter to Carburetor	Inspect for cracks
14	Rubber hose, Inlet manifold	Inspect for cracks
15	Accelerator cable	Check & adjust play
16	Clutch cable / Lever free play	Adjust play
17	Engine oil	Check & top-up
18	Hand levers pivot	Lubricate
19	Steering system	Check & adjust play
20	Tyres front & rear	Check wear pattern
21	Pivot-Side stand	Lubricate

CUSTOMER COPY

Job Card No:

--	--	--	--	--	--	--	--

Date :

--	--	--	--	--	--	--	--

Odo Reading :

--	--	--	--	--	--	--	--

Name of Dealer /
ASC with Code:

.....
.....

ASC / Dealer's
Stamp & Signature

5TH PAID SERVICE

5th Paid Service

20,000 Kms
or
2 Years

whichever is earlier from the date of sale

Enter the Details in Free Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

20,000 KMS or 2 YEARS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name :

Dealer Code :

Address :

Frame No:

Regn. No:

Engine No:

Sale Date:

Motorcycle Installation Form No.

Serviced Date:

ODO Reading :

Serviced by (Dealer's/ASC Name & Address)

Sold by (Dealer's Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature :

Date:

Contact Phone / Mobile No.:

5TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery terminals	Clean and apply petroleum jelly
3	Rear Drive chain free play	Check, clean, lubricate & adjust
4	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
5	Front & Rear brake	Check & top up brake fluid level
6	Wheel rim front & rear	Check spokes tightness / run out
7	Tyres front & rear	Check wear pattern
8	Front fork	Inspect for oil leakage
9	Air filter element	Check & Replace paper element
10	Spark plug	Check, clean & adjust gap
11	H.T. lead	Inspect for cracks
12	Fuel Pipe	Inspect for cracks
13	Accelerator cable	Check & adjust play
14	Rubber hose, Air filter to Carburetor	Check & Replace
15	Rubber hose, Inlet manifold	Check & Replace
16	Clutch cable / Lever free play	Adjust play
17	Engine oil sump strainer	Clean
18	Engine oil & oil filter paper element	Replace
19	Hand levers pivot	Lubricate
20	Steering System	Check, Lub. steering balls & adj. play
21	Swing arm spacer & pivot bush	Lubricate
22	Rear wheel cush drive rubbers	Inspect & replace
23	Pivot-Side stand	Lubricate
24	Earth wire eyelet Contact	Inspect
25	Carburetor	Clean, Inspect & tune

CUSTOMER COPY

Job Card No:

--	--	--	--	--	--	--	--

Date :

--	--	--	--	--	--	--	--

Odo Reading :

--	--	--	--	--	--	--	--

Name of Dealer /
ASC with Code:

.....

.....

ASC / Dealer's
Stamp & Signature

PAID SERVICE / MAINTENANCE RECORD

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
1.					
2.					
3.					
4.					
5.					
6.					
7.					
8.					

PAID SERVICE / MAINTENANCE RECORD

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
9.					
10.					
11.					
12.					
13.					
14.					
15.					
16.					

REGIONAL OFFICES

R1 : Chandigarh, H.P,J&K, Punjab Royal Enfield SCO, No. 5, 1st Floor, Sector-11 , PANCHKULA (Haryana) Pin Code - 134 112. Tel: 0172-5011255, 5011251	R3 : Uttarkhand & Uttar Pradesh Royal Enfield UGF 15-19, Landmark Arcade, 2 Badshah Nagar Crossing, Faizabad Road, LUCKNOW – 226 006. Tel: 0522-6566675 Fax: 4005973	R6 : Orissa & West Bengal Royal Enfield C/o V.E.Commercial Vehicle Ltd. 1st Floor, P.S.Tower, No.13, Bondel Road, KOLKATA - 700 019. Tel: 033-40060206 / 0209	R8 : Goa & Maharashtra Royal Enfield Plot No.16, Sector -1, Sion Panvel Highway, Nerul, NAVI MUMBAI - 400 706. Tel: 022-27700395, 27700501	R10 : Karnataka Royal Enfield Door No. 2067/1, 2068/2, East End “A” Main 9th Block, Jayanagar, BANGALORE - 560 069. Tel: 080-22440588, 41753277, 41536488
R2 : Delhi, Haryana, NCR & Rajasthan Royal Enfield C/o EICHER ENGG.COMPONENTS Plot No. 7, HSIDC Industrial Area, Sector 18, Palam Gurgaon Road, GURGAON (Haryana) - 122 015. Tel: 0124-4278138, 4278139 Fax: 4382148	R4 : Gujarat & Madhya Pradesh Royal Enfield 103, Safal Prelude, Opp. Parsavanath Esquire Cross Road, Corporate Road, Prahlad Nagar, Off. S.G. Highway, AHMEDABAD - 380 015. Tel: 098-25113168 Fax: 079-40024461	Royal Enfield A Unit of Eicher Motors Ltd. 407, 4th Floor, Nirmala Plaza, Forest Park, BHUBANESWAR - 751 009. Tel: 0674-6540206	Royal Enfield 203, 204 Sneha Ganga, Near Vega Centre, Shankar Seth Road, Swargate, PUNE - 411 037. Tel: 020-40028090 Fax: 24447174	R11 : Tamilnadu & Andaman Royal Enfield Plot No. 350 to 354, 2nd Floor, 4th Link Street, Nehru Nagar Industrial Area, Kottivakkam, (OMR-IT Highway), CHENNAI - 600 096. Tel:044-42070661, 24540828
Royal Enfield G-5, 6, 7, Gitanjali Towers, Ajmer Road, JAIPUR - 302 006. Tel: 0141-4106747, 4034748 Fax: 0141-4106748	R5 : Bihar, Chattisgarh & Jharkhand Royal Enfield 3rd Floor, Maple Plaza, Gate No. 2 , Ashok Nagar, RANCHI (Jharkhand) - 834 002. Mob: +91 7091497557	R7 : Arunachal Pradesh, Assam Manipur, Meghalaya, Mizoram, Nagaland & Tirupura Royal Enfield Astha Plaza, 4th Floor (M4-2), G S Road, Opposite Deorah College, Ulubari, GUWAHATI - 781 00 . Mob: +91 8135846461	R9 : A.P. & Telangana Royal Enfield Plot No. 3, Kandukuri Business Chambers, Sunder Nagar Colony, Beside ESI Hospital, Erragadda, HYDERABAD - 500 038. Tel: 040 -40213540	R12 : Kerala & Lakshadweep Royal Enfield 25/85A, Opp. to IOC Pump, Koonamthai, Edappally Post, KOCHI - 682 024. Tel: 0484-6494990, 6494991 Fax: 2543616

AUTHORISED DEALERS

ANDHRA PRADESH Anantapur Renati Automotives Pvt. Ltd. +91 9000841133 7036903879	ANDHRA PRADESH Guntur-Chandramauli Nagar Jubilant Avenues Pvt.Ltd +91 8143008508	ANDHRA PRADESH Narasaraopet Anu Auto Agencies +91 7893301444 086472-21787	ANDHRA PRADESH Tirupathi Sri Sai Motors +91 9295091444 8572245057	ANDHRA PRADESH Vishakhapatnam - Seethammadhara Royal Enfield Company Stores +91 8897353382 0891-2768887; 2768886
Bhimavaram Varma Automotives +91 7095812666 +91 7095816888	Kadappa Anjana Bikes +91 9247041555 9010389998	Nellore Rishi Motors +91 8977713377 +91 8977714477	Vijayawada- Kannur Pravallika Motors +91 7842559555 0866-6529555	ARUNACHAL PRADESH Naharlagun - Itanagar Bucho Royal Enfield +91 9436219089 0360-2350103
Chittoor Sri Sai Motors +91 9490094908 08572-245057	Kakinada Shri Jayalakshmi Automobiles +91 8332912719 0884-6443555	Ongole Lekhana Automotives +91 8885002112 8885002113	Vijayawada- M G Road Mahalakshmi Motors +91 8886322559 +91 8886422559	ASSAM Barpeta G.S. Auto +91 8472987341
Eluru Classic Automotive +91 9652238585 08812-234582	Kurnool Sandhya Automotives +91 9394253377 08518-253377	Rajahmundry Sriram Automobiles +91 9246665513 0883-2422117	Vishakhapatnam - Gajuwaka Cidanta Motors 0891-6562008 0891-6502008	Dibrugarh Rider's +91 8472913182 0373-2370018; 2370014
Guntur-Auto Nagar Jubilant Avenues Pvt.Ltd +91 8143008506; 8507	Nandyal Dheeru Motors +91 9133065553 +91 9133065554	Srikakulam Lakshmi Automobiles +91 9032929235 8121929235	Vishakhapatnam - Nad Junction Saran Motors +91 8885947222 +91 8885847222	Guwahati- Maligaon Chirag Enfield +91 9435400437

AUTHORISED DEALERS

ASSAM Guwahati- G S road Shahila Expositions Pvt Ltd +91 9435549786 0361-2335025	BIHAR Araah Om Wheels +91 9471444405 06182-233338	BIHAR Biharsharif PNN Automobiles +91 9334038042	BIHAR Katihar Jaiguru Motors Pvt Ltd +91 9430909966 06452-290172	BIHAR Patna-Saguna More Siddhi Vinayak Automobiles +91 8092981877 0612-212948
Jorhat Achharsingh Royal +91 9859736100 9207041076	Aurangabad Yodha Automobiles Pvt. Ltd +91 9934012273	Chapra Supriyam Automobiles +91 9534677444 06152-242999	Madhubani Shagun Auto Sales +91 8986396011 06276-228014	Patna-Zero Mile Sukhmani Motors Pvt. Ltd. +91 9709761441 0612-3297056
North Lakhimpur Rishi Riders +91 9854100000	Begusarai Mayamanu Motors Pvt. Ltd +91 7260851555	Darbhanga SYV Motors +91 8227887777 06272-242777	Motihari Raj Motors +91 9472582848 06252-230373	Purnea Link Motors +91 7766917026
Silchar Bina Automobiles Pvt Ltd +91 9954008888 03842-225016	Bettiah Mishra Automobiles +91 8877985073 06254-246273	Gaya Kusum Motors +91 8271020543 0631-2210105	Muzaffarpur- Maripur Gautam Motors +91 7631996130 0621-2220056	Saharsa 7 Hills Automobiles +91 8877080661 06478-227007
Tezpur G.M Associate +91 9707026331 03712-237777	Bhagalpur Bhagwati Motors +91 8404800063; 8404800064	Hajipur Ambika Bhawani Automobiles +91 9835641123 06224-295280	Muzaffarpur-Sitamahari Road Kumar Automobiles +91 9771123233 7283000384	Samastipur Aditya Motors +91 8406803303 5452264047
Tinsukia SD Royal +91 9957714273				

AUTHORISED DEALERS

BIHAR	CHATTISGARH	CHATTISGARH	CHATTISGARH	GUJARAT
Sasaram Vintage Auto Corp +91 8540948771 +91 9304503020	Ambikapur Dev Automobiles +91 9753117804 07774-222804	Korba Kailash Auto Agency +91 9826109907 07759-245482	Rajnandgaon Shubh Auto +91 9424102224 07744-401491	Ahmedabad-Mani nagar Sarabhai Automotive +91 9825708033 079-25812530; 31
Siwan Sri R.L. Automobile Pvt. Ltd. +91 9576449444 06154-247686	Bhilai AAN Automotive +91 7886996000 0788-4040512	Raigarh Priyanka motors +91 7389910800 07762-233550	GOA	Ahmedabad- Naroda Krishna Wheels +91 9925333445 079-29704155; 29703055
CHANDIGARH	Bilaspur Blue Sapphire Motors +91 8982407770 07752-407770	Raipur- Gaurav Path - Panchsheel Nagar Aadityaraj Automobiles +91 7697208337 0771-4030550	Goa - Margoa Saini Motors +91 7767006138; 6139; 6140 0832-2740343; 0832-2740345	Ahmedabad- Navrangpura Karnavati Bikes Pvt. Ltd. +91 9099031290 079-27490068
Chandigarh-Sector 27 C Manmohan Auto Stores +91 9216227366 0172-5071351	Dhamtari Shri Ram Automobiles +91 9179995522	Raipur-Lodhi Para Chowk Indian Motors +91 7714221500 0771-4221500; 4221400	Goa - Panaji Auto Guides +91 9326102087; 9823674545 0832-2220265	Ahmedabad-Nehru Nagar Sarabhai Motors +91 7926303535 079-65243010; 26303535
Chandigarh-Sector 32 D Garg Autos +91 9915596388 0172 2665246	Jagdalpur Kambo Motors +91 9993333939 +91 9407642827	Raipur- Tatibandh 6th Gear +91 8109309666 0771-4070666	GUJARAT	Anand Royal Ridentity Pvt Ltd. +91 9898484500 02692-644352
			Ahmedabad- Arkhej Kaveri Motors +91 9824039464 079-65416116; 27663674; 27663048	

AUTHORISED DEALERS

GUJARAT	GUJARAT	GUJARAT	GUJARAT	HARYANA
Bharuch Vraj Auto +91 9824125050 02642-225757	Godhra Concord Auto +91 9879074373 02672-265522	Navsari PSG Motors +91 9924755521 02637-265559	Surendranagar Old Soul Motorcycles +91 9909008000 02752-242777	Ambala - Ambala Chandigarh Highway Royal Motors +91 9315100442 0171-2545795; 2544795
Bhavnagar Gujarat Auto Centre +91 8734936206 0278-2512648	HimmatNagar Rajvee Auto +91 8238411177	Rajkot - Gondal Road Aditya Moto Gujarat Pvt. Ltd. +91 9099092594, 9099092595 0281 2371070	Vadodara- Harni road Amba Motors +91 7820010060 0265-2463232	Ambala cantt- Rai Market Royal Motors +91 9315100442 0171-2630795; 2631495
Bhuj PM Autolink +91 9825900279; 9925635279, 02832-231279	Jam Nagar New Chandra Motor Cycle Agency +91 7226065999 0288-2552888; 2678024; 2550863	Rajkot - Mota Mava Kalawad Road Dev Motors +91 8401799993 0281-6458888; 9157877331	Vadodara - Old Padra Road RSA Automotives +91 9574256999 2652355040	Bhiwani Sheoran Auto +91 8950291600 01664-252216
Gandhidham N.P. Auto Agencies +91 9426140290; 9723540290 02836-295927	Junagadh Shree Aashapura Enterprise +91 7046008488 0285 2660111	Surat-Adajan Hajira Main - Adajan JSN Motors +91 9909025400, 9099025400 0261-2730025; 2840023	Vapi Royal Thumpers +91 9726818181 0260-2997181	Fatehabad SDB Automobiles +91 9728942226 01667-221786
Gandhinagar Aanal Auto Agency +91 9099049555; 8980001123 02712-23262020	Mehsana Parklane Auto +91 9925014803 9925004538	Surat - Sarthana Varacha Purav Automobiles +91 9979841546, 9979841547		Hissar Malik Automobiles +91 8572888890 01662-276103

AUTHORISED DEALERS

HARYANA Jind Gill Automobiles +91 9416476459	HARYANA Palwal Kartike Motors +91 9813131455 01275-240454	HARYANA Sonipat Heydaan Motors +91 9034444433 0130-2233004	HIMACHAL PRADESH Hamirpur (ASP) Parkash Royal Enfield +91 9816058483 01972-258483	HIMACHAL PRADESH Solan Tapan Motors +91 9801600072 01860-1800072
Kaithal Raghav Automobiles +91 8199946000 +91 9254312500; 8199947001	Panipat Monga Automobiles +91 9354140005; 40006;40007 01274-251000	Yamuna Nagar Falcon Automobiles +91 9315431300 0173-2346433	Manali Heaven On Earth Automobiles +91 9459300881 01902-205032; 251151 08350854002 (Kullu)	UNA Sharma Automobiles +91 9318536755 09218-446755
Karnal Monga Motors +91 9354140008 184-2261810; 2272729	Rewari Premium Automation Pvt Ltd +91 8607482200 01274-251000	HIMACHAL PRADESH Baddi Simran Automobiles +91 9816167884	Mandi Shivam Automobiles +91 9805473700 01905-243077 8628876301	JAMMU & KASHMIR Jammu - Janipur road Reliance Motors +91 9419191241 0191-2536084; 0191-2530213
Kurukshetra VPS Motors +91 9254022290 01744-231151	Rohtak Badhwar & Co. +91 8059880031 01262-242034; 241173	Chamba Champavati Autos +91 9736678651 01899-226747	Paonta Sahib -Sirmour R.S. Enterprises +91 9418117089 01704-223687	Jammu Xtream Motors +91 9070172999 +91 9797568876
Narnaul Royal Jindal Auto Pvt Ltd +91 9813150222	Sirsa Gulzar Motor Agencies +91 9996147200 01666-221367; 230459	Dharamshala Him Enfield +91 9418083838 8894389090	Shimla Tapan Multiventures 01860-1800072	Leh(ASP) Venture Third Pole +91 9419177466

AUTHORISED DEALERS

JAMMU & KASHMIR	JHARKHAND	JHARKHAND	KARNATAKA	KARNATAKA
Kathua Lovish Automobiles +91 9419166881, 9622125795 01922-235010	Daltonganj Arjun Automobiles +91 9006082822 +91 8235121935	Jamshedpur - Bajrang Nagar NH 33 Cruiser India +91 9204004142	Bangalore-Banasankari H.S.R. Services +91 9739000350 080-22133119	Bangalore-Indira Nagar Teknik Motorcycles +91 8904000300; 200 080-25747555
Srinagar PCS Automobiles +91 9797122244 0194-2472781	Deoghar Roy Brothers +91 9934344889 06432-240371	Ramgarh Anjaney Automobiles Pvt. Ltd. +91 9431146297 +91 9031000430	Bangalore-Banaswadi CVS Motors +91 9886500045	Bangalore-Nagarbhavi S.R. Motors +91
Digiana camp (ASP) Sumeet Motors +91 9419236396 0191-2431058	Dhanbad Arti Automobiles +91 9470133444 +91 9031084005	Ranchi - Harmu Road Raghuram Autocare +91 9905110006 0651-6571607	Bangalore-Bellary Road CVS Motors +91 9886500042 080-23469600; 23469601	Bangalore- Peenya Sri Sadguru Sai Motors +91 9066699094 080-28393666
Udhampur R A Enfield +91 9419996901 01992-250008	Dumka Majestic Autobikes Pvt Ltd. +91 9798777007	Ranchi - Kokar Sri Nivas Automobiles +91 9771420322 0651-2542789	Bangalore - BTM 2nd stage Royal Enfield Company Store +91 9902180044 080-40905108; 26689975	Bangalore - Raja Rajeshwari Nagar Accelerate Motors +91 7259534650 080-28606969; 28608989
JHARKHAND	Hazaribag Riders Point +91 9234343422 +91 9031005518	KARNATAKA	Bangalore-Electronic City Electronic City Motors +91 7026613071 to 75 & 80 8494942929	Bangalore-Rajaji Nagar Industrial Area H.S.R. Enterprises +91 9738000350 080-23156617
Bokaro G.R.Motors +91 9934109008 6542265452	Jamshedpur-Adityapur Aruna Motors +91 8863996222 0657-6574010; 6574011	Bagalkot Bagalkot Motors +91 8884128877; 9916361134		

AUTHORISED DEALERS

KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA
Bangalore - Sarjapur Teknik Motors +91 8904004004 080-40910003; 0004; 005	Bangalore (ASP) Sri Manjunatha Bullet Garage +91 9341220151 080-25427066	Davangere Royal Automobiles +91 9844053511 08192-256239	Kolar Jagadamba Automobiles +91 8152226619	Mysore (ASP) Kuvempu Nagar Abhyudhay Motor Services Pvt. Ltd. +91 9743721955; 9538841412 0821-2462066/2462067
Bangalore-Sudhamanagar H S R Services +91 9343735655 080-26764060	Belgaum Shri Munishwar Motors Pvt. Ltd. +91 7204606064 0831-4213059	Gulbarga Mukunda Wheels Pvt. Ltd. +91 9945249302; 49300; 49305, 08472-225302	Mandya Ruby Maratt Motorcycles +91 9591503399	Raichur Chukki Motors +91 8792113336
Bangalore - Whitefield Sai Ram Autocraft +91 9900029871 080-64909090	Bellary Sanjeevini Automobiles +91 7353777768 08392-261027	Hassan Shree Subrahmanya Motors +91 9980751155	Mangalore Frontline Automobiles +91 8861006478 0824-4267573	Shimoga Apollo Enterprises +91 9008138662; +91 9448058560 +91 41187404
Bangalore - Yelahanka Acclaim Motors Pvt Ltd +91 9632881188; 9632881133 9663550055	Bidar Bhavani Motors +91 9379799992	Hubli - Airport Road Salimath Engineers Services +91 7259037590 0836-3241160	Mysore-Vijayanagar 1st Stage Aadith Motors +91 7899912362 8214244467	Sirsi Sri Maruthi Auto Motors +91 9008502223
Bangalore (ASP) Mehboob Garage +91 9945785022 080-23436682	Bijapur Rohan Motors +91 9986168363	Hubli - Kusugal Road - Keshwapur Klasik Motors +91 8904800948 0836-2288223	Mysore (ASP) Kempananj. Agrahara Sri Venkateshwara Automobiles 0821-2427533	Tumkur Bhagavati Motors +91 9976384499

AUTHORISED DEALERS

KARNATAKA	KERALA	KERALA	KERALA	KERALA
Udupi Brahmi Motors +91 9164889161 0820-2527590	Calicut - Puthiyagandi SS Motors +91 9567863979 0495-2392200; 2390770	Kannur SS Motors +91 9567862458; 9567863980 0497-2731312	Palakkad Intrepid Works +91 8606933008 0491-2572331	Thrissur-Puzhakkal Padam Pinnacle Motor Works Pvt. Ltd. +91 7025600600; 8111994007 0487- 2385255
KERALA	Cochin - Angamali, Areeckal Junction Sanjo Motors +91 9809709999 0484-6888889	Kollam - Bishop Jerome Nagar Marikar (Motors) Ltd. +91 9947031120; 9947031121 0474-2732474	Pathanamthitta Marikar Motors Ltd. +91 8111871222; 9388077007 0468-2223412	Thiruvalla St. Mary's Motors +91 9526260400; 9747972081 0469-2733243
Adoor Yamuna Agencies +91 9747410243 0473-4229222	Cochin - Chittoor Road St. Mary's Motors +91 8891000691; 9895118951 0484-4022819	Kollam - Madanada Unnoony Motors +91 9567395208 0474-2764566; 2764567	Perinthalmanna ABC Motors +91 9447158400 04933-226677	Thodupuzha Veliyathu Motors 91 8943200090 4862227899
Alleppey Rider's Motors +91 9447265955	Cochin - Edapally Royal Enfield Company Store +91 7025233912 0484 - 6494991; 6494992	Kottarakara Unnoony Motors +91 9567966444	Thrissur - Karunanakaran Nambiar road Marikar (Motors) Ltd +91 9388077010; 8606863336 0487-2339307	Tirur ABC Motors +91 9605827000 0494-2422277
Calicut-Francis Road Blue Mountain Autos +91 9895201667 0495-2302530	Cochin - Vyttila Kaizen Motors +91 7559800072 0484-2307072; 4047072	Kottayam Javeens +91 9446397300 0481-2563455; 2567070		Trivandrum-Attingal Concept Bikes +91 9048990256
Calicut - Mankavu Luha Automotives +91 7025105333 0495-2333533				

AUTHORISED DEALERS

KERALA	MADHYA PRADESH	MADHYA PRADESH	MADHYA PRADESH	MAHARASHTRA
Trivandrum - Kaimanam Junction Sivaji Motors +91 7736207777; 7736066716 0471-6506777	Bhopal-Padmanabh Nagar Ananya Auto +91 7389930806 0755-4076937	Indore - Nehru Market Krishna Motor Agency +91 9826034012 0731-2703172	Satna Manish Motors +91 9827250199 07672-251608	Akola Agrawal Motors +91 8408089944 0724-2258259
Trivandrum - M G road Marikar (Motors) Ltd +91 8606068466 0471-2334621	Chhindwara Rahul Royal Motors +91 8889999602 07162-245255	Indore - Sayaji Club Road RR Automotive +91 8878660100 0731-4222822	Shahdol Gupta Automotive +91 8718811703 0765-2231967	Alibagh SK Autoriders +91 9970041579 02141-282672
Trivandrum - Vetturoad - Kazha kuttam Concept Bikes +91 9048400200 9048990546	Dewas R R Motorcycles +91 8109103622 8269270709	Jabalpur Royal Thumpers +91 8962010072 0761-4042424/4042423	Ujjain Avis Auto +91 9300005025 0734-2520007	Amravati Bhans Automotive +91 7620177060 0721-2510636
MADHYA PRADESH Bhopal - Hamidia Road Choudhari Tractor Agency +91 9425023609 0755-5240614; 2735762	Guna Standard Motors +91 9754222241 +91 9425131250	Katni Royal Thumpers A Division of Superior Automobiles Pvt Ltd. +91 8962010075 07622-226474	Vidisha Adventure Bike +91 9425148606 0759-2408222	Aurangabad - Bansilal Nagar S.K.Y.S Automobile +91 9028059252 0240-2350652
	Gwalior Rimik Motors Pvt. Ltd +91 9827935616; 9926435616 0751-4035616	Khandwa Binwani Motors +91 9425909302 7332244222	MAHARASHTRA Ahmednagar Newaskar Automobiles +91 8087500900 0241-2470125	Aurangabad-CIDCO-Cannaught Cherry Corporation +91 9850889408 0240-6601613

AUTHORISED DEALERS

MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA
Baramati Jay Motors +91 9960247655; 9890090381 02112-221055	Gadgilaj Yashashri Motors +91 9657009444 9527094848	Kolhapur Motor India +91 9822871729 0231-2531177	Mumbai - Kandivali Voyage Motors +91 9146871013; 7498567890 022-28087882	Mumbai - Thane (Godbunder) Soniya Motors Pvt. Ltd +91 9322315111 022-25893202; 7208005207; 7208005208
Beed Aaryan Motors +91 9421184118 02442-223780	Ichalkaranji Motor India +91 9822551777	Latur Prisha Motors +91 9049607711 02382-200711	Mumbai-Panvel Pratik Motors +91 9029422942 022-27480040	Mumbai - Thane (Mira road) Unison Automobiles +91 9029234040 022-28456620
Buldhana Samyak Automotive +91 9422181159 072-62241273	Indapur Sahyadri Auto +91 7387111109 02111-224111	Malegaon Shaurya Motors +91 8380038156; 9527002881 02554-231171	Mumbai - Sakinaka Synergy Auto Inc +91 8286046565 022-28590085; 28590086	Mumbai - Thane (Vasai) SP Wheels +91 8446011105 0250-6511107; 6511108
Chandrapur Dinesh Motors +91 9028111383 07172-260555	Jalgaon Usha Motors +91 7768009996 0257-6999000	Mumbai - Bhandup Soniya Motors Pvt. Ltd +91 9322314555 022-65650153; 7208005209	Mumbai-Thane (Dombivali) Pooja Motors +91 8425840752 0251-2470611	Mumbai - Thane (Ulhas Nagar) S R Motors (A Unit of Riya Motors Pvt. Ltd) +91 7738622211; 7506044995 0251-2700043
Dhule Surbhi Motors +91 9371057573 02562-239933	Karad Nand Enterprises +91 9923981211 02164-242772	Mumbai - Goregaon Ishna Wheels +91 8879330226; 8879330227 022-28711242; 28711243		

AUTHORISED DEALERS

MAHARASHTRA Mumbai (ASP) Nerul Ram Motorcycles +91 9323025335 022-27700394; 022-27700396	MAHARASHTRA Narayangaon Kings Royal Riders +91 9075009831 0213-2245542	MAHARASHTRA Parbhani Chandrallama Automotive +91 9665516193 2452-242299	MAHARASHTRA Pune - Baner Kings Auto Riders +91 7875756100 020-27200256	MAHARASHTRA Pune - Khed Shivpur Siddh Auto +91 9372153055 Pune - Kothrud Siddh Auto +91 9168376611 020-25280050; 25280051
Nagpur - Kamptee Road Ved Motors +91 9326916819 0712-2652222; 2654444	Nasik - Dwarka Ostwal Autos +91 9422255773 0253-2592717	Parli Shiva Motors +91 9765924477 02446-227477	Pune - Chinchwad Hridaan Motors +91 9850888899 2069100202	Pune - Yerwada Dhone Automobiles +91 7028978074 020-60121812
Nagpur - Sitaburdi Paragon Traders +91 9595622261 0712-2523456	Nasik - Ganjamal Ostwal Autos +91 9595301414 0253-2500291	Phaltan Adved Motors +91 7040829609 02166-225272; 225472	Pune - Fathima Nagar Platiinum Auto +91 7755932578; 2579 +91 9881171717	Pune - Wakad (Talegaon) Kings Auto Riders 020-65107545
Nagpur - Wardhaman Nagar Shri Krishna Automobiles +91 9372121346 0712-3191202	Nasik - Satpur Moharir Auto Pvt. Ltd. +91 8446646555 0253-6630000	Pimgalgaon Shaurya Motors 02550-660602	Pune - Hadapsar Platiinum Auto +91 7030911278; 7030911284	Pune - Wakhewade Brahma Motors +91 7276629900 7276027722
Nanded Jairam Motors +91 9552446688 02462-297788	Osmanabad Hatlai Auto +91 9822838888 02472-228588	Pune - Adarsh Nagar Dhone Automobiles +91 7028922644 020-24273335	Pune - Kasarwadi Dhone Automobiles +91 7028045684	Pune (ASP) Sadguru Service Station +91 8308048854; 9011078854, 020-24350727

AUTHORISED DEALERS

MAHARASHTRA	MAHARASHTRA	MIZORAM	NEW DELHI & NCR	NEW DELHI & NCR
Ratnagiri Advait Motors +91 9970551171 02352-228930	Solapur - Budharpeth Mondhe Motors +91 8237466447; 6446; 6442 0217-2315923; 2735081	Aizawal Lawma Enfield +91 8575517879 0389-2334731	Delhi - Jhandewalan Ext. Ess Aar Motors +91 9810797099 011-65461901; 23524426	Delhi - Padapadganj Asco Motors +91 9582184488 011-2214888
Sangli Abhay Auto +91 7768073003; 9011964040, 0233-2623040	Yavatmal Aaditya Riders Pvt Ltd +91 8055958119 9158632833	NAGALAND	Delhi - Kailash colony, Okhla Indust. Area South Delhi Motorcycles +91 9716145509, 9716002728 011-26811013	Delhi - Rama Road Lamba Enterprises Pvt Ltd. +91 9711611591 011-45151159
Satara Nand Enterprises +91 9923981211 02164-242772	MANIPUR	Dimapur Uniglobe Enterprises +91 9774057770 3862225903	Delhi - Mahipalpur Kay Tee Automobiles +91 9910884777 011-64612777	Delhi - Saraswati Vihar North Delhi Motorcycles +91 9810558625 011-27054737
Shrirampur Karachiwala Automobiles +91 9028537570 02422- 227570	Imphal Sanamahhi Motors +91 8259061598 0385-2449111	NEW DELHI & NCR	Delhi - Mangolpuri Soni Automobiles +91 9873069001 011-27921311; 65180349	Delhi - Shahadra Amar Autos +91 8802583948 011-43595322
Solapur - Bale chowk, Pune Highway Chavan Motors +91 7720069040 0217-2352323/2352424	MEGHALAYA	Delhi - Dhwarka Cruiser Motors +91 9136310966 +91 8459223833	Delhi - Najafgarh Outer Delhi Motorcycles +91 9540941601 011 68888252 / 53	Delhi - Tilaknagar Lamba Enterprises Pvt Ltd. +91 9999389189; 9250919994 011-45614855; 42138246
	Shillong Merin's Royal Enfield +91 8258811320 0364-2590048	Delhi - Gujrawala Kay's Autos +91 9810433555 011-28877008; 28877009		

AUTHORISED DEALERS

NEW DELHI & NCR	NEW DELHI & NCR	NEW DELHI & NCR	ORISSA	ORISSA
New Delhi (ASP) Balaji Motors +91 9350102768 +91 8826574278	Ghaziabad (ASP) Jai Shiv enterprises +91 9927064206	NCR-Noida - Sector 10 Shree Mahadev Agency +91 9811404319 0120-4310052/4324662	Bargarh Shree Shyamji Bike Point +91 9437053233 +91 7381053244	Bhubaneswar - NH 5 - Patrapada Trupti Autoworld +91 9861824216 0674-2470148
Delhi (ASP) M.G. Auto Sales +91 9810237417 011-27837439	Ghaziabad (ASP) Royal Taj Agency +91 9810413387 +91 9818728177	NCR-Noida - Sector 63 Solitaire Automotive +91 9810703922 0120-4547929	Baripada Legend Automotive +91 9178024417	Cuttack Shree Hanuman Automobiles +91 8342039286 0671-2586630
NCR - Faridabad - Mathura Road Heighten Automotive Pvt Ltd +91 9911223811 +91 9717475811	NCR Gurgaon - Old Delhi Road Aman Automobiles +91 9810535659 1244084648	NCR-Sahibabad Sangam Autos +91 9311051177; 9990624290, 0120-4198890	Berhampur Vaishnavi Automobiles +91 9937308525 6802248820	Jajpur Road Birendra Motors +91 9078886306
NCR - NIT Faridabad Sohan Auto World +91 9811551530 0129-2429352	NCR Gurgaon - Sheetala Mata road Brawn Automobiles +91 9212315090 1244251481	ORISSA Angul Green Treet Automotive (P) Ltd +91 9937066505 06764-310611	Bhubaneswar - Buddha Nagar Royal Automobiles +91 7752017606 8192256239	Jeypore Golden Motors +91 9439355473
NCR - Ghaziabad - Nehru Nagar Rawal Automobiles Pvt Ltd +91 9350315311 0120-4104659; 9211921227	NCR Gurgaon - Sohna Road Manzil Motors Pvt. Ltd. +91 9650311988 1244231683	Balasore Favour Ride +91 7894775177	Bhubaneswar - KIIT Road, Sishu Vihar Gugnani Automobiles +91 9776160313	Rourkela The Agents & Distributors +91 9937007971 0661-2511223
				Sambhalpur Sreyasri Motors +91 9040015355 0663-2115355

AUTHORISED DEALERS

PONDICHERRY	PUNJAB	PUNJAB	PUNJAB	PUNJAB
PONDICHERRY Pondy Rooster Automobiles +91 8940422422 0413-2355336	Begowal S.S.Motors +91 9814399532	Gurdaspur Ajit Motors +91 9855152204 01874-501644	Khanna Kishori Automobiles +91 9872030903 01628-503868	Malerkotla Om Automobiles +91 9814404513; 8054944713 01675-262113
PUNJAB	Bhatinda - Goniana Road Ajay Autos +91 9988678145 0164-2235608; 5000376	Hoshiarpur Lagwal Automobiles +91 9256514321 01882-238586	Ludhiana - Dholewal - GT Road Sant Motors +91 8968296020 0161-5012647	Mansa Ganpati Motors +91 9779850001 01652-236899
Abohar Aman Auto Zone +91 9814767900 +91 9914767900	Bhatinda - Mansa Road Krishna Automobiles +91 8725086888 0164-2212802	Jalandhar - GT Road Fateh Autos +91 9417231123 0181-2632880	Ludhiana - Gurudev Nagar - ferozpur Road Barnala Automobiles(Jagroan) +91 9780014995 0161-2424114; 2426209	Moga Bikram Sales Corporation +91 9855914072 01636-227777
Amritsar Jaycee Motors Corporation +91 9780038349 +91 9780038078	Faridkot Baba Farid Automobiles +91 9780247048 01639-251343	Jalandar - SatlujMarket Navyug Motors +91 9915630535 0181-4627998	Ludhiana - Jodhewal Shree Dadu Dayal Automotive +91 8728092401 0161-5040405	Mohali Manmohan Motors +91 9216267888; 9988317366 0172-6527366; 6527367
Barnala Megan Autos +91 9878120088 +91 9878120033	Ferozepur Royal Hut +91 8437312364 01632-242567	Kapurthala Innovative Automobiles +91 9357254736 01822-233011	Mahilpur (ASP) Mahilpur Motors +91 9417354423	Morinda Morinda Motorcycle Centre +91 8427242324 0160-2630357; 2630072
Batala Moon Autos +91 9988355955 01871-222278				

AUTHORISED DEALERS

PUNJAB	PUNJAB	PUNJAB	PUNJAB	RAJASTHAN
Mukherian Lagwal Motors +91 8699982680	Nawanshahar HS Enterprises +91 9417654888 01823-221194	Ropar Garcha Automobiles +91 9464752267 01881-228137	Zirakhpur Garg Auto zone +91 8427656388	Bharatpur Khusali Motors +91 9414944972
Muktsar Deep Autos +91 8566926850 01633-501055	Pathankot Cashmir Sales Corporation +91 9417412884 0186-2220148; 2224672	Sangrur Verma Automobiles +91 9888836998 01672-500145	RAJASTHAN	Bhilwara Soni Automobile +91 8233416700 011 27921311; 65902249
Nabha Partap Automobiles +91 9815001739; 9815001740 9872605400	Patiala - Rajpura Road Sukhdev Automobiles +91 9876103017 0175-2305721	Sultanpur Lodhi Dalbir Motors +91 9814679432 01828-223634	Ajmer Jogbala Motors Pvt Ltd. +91 9829072298 0145-2787666	Bikaner Bikaner Bikes Pvt Ltd +91 9529269924 0151-2251345
Nakodar (ASP) Bhagwati Automobiles +91 9357242788 +91 9041522970	Patiala - Sirhind Road Gurukirpa Motors +91 9779222225	Tanda Sandeep Automobiles +91 9914554304 01886-502398	Alwar R.S. Motors +91 8696900842; 9785999998, 0144-2738248	Chittorgarh Manglam Motocorp +91 7737094370 01472-297018
Nangal Nangal Motors +91 8283829760 01887-229160	Phagwara Khalsa Automobiles +91 9463138303 01824-270081	Taran Taran Chhabra Auto Agencies +91 9815213148 +91 8528180632	Banswara Veer Autolinks +91 9001406681 02962-254135	Churu Churu Balaji Motors Pvt Ltd +91 9649777777 01562-253777
			Barmer Devrath Motors Pvt. Ltd +91 8107381111; 9549657080 02982-224381	

AUTHORISED DEALERS

RAJASTHAN	RAJASTHAN	RAJASTHAN	TAMILNADU	TAMILNADU
Hanumangarh Udai Motors +91 9772780001 01552-226266	Jodhpur Shree Rajpurohit Automobiles +91 9001744442 0291-2980473	Sikar Apoorva Motors +91 9314237183 01572-245830	Chennai - Alapakkam Sri Velavan Motors +91 7299405000; 7299705000; 7299805000 044-24761902	Chennai - OMR, Perungudi Royal Enfield Company store +91 8939958655 044 - 42607777; 42607555
Jaipur - Govind Marg Rajesh Motors (Raj.) Pvt Ltd. +91 9521125125; 9414064864	Kota Mundra Motors Pvt. Ltd. +91 9352602347 0744-2361264	Sriganganagar National Motors +91 9414211956 0154-2444200	Chennai - Chrompet The Legend Motors +91 7299042018 044-49595867; 22410272	Chennai - Purasaiwalkam I Speed Motors +91 9094633712 044 45588047
Jaipur - Tonk Road Aditi Motors +91 9829822722 0141-2700224	Kotputli Shree Motors +91 9468768300; 9116011113 2912980473	Udaipur Voyage Motors +91 9799144460 0294-2460104	Chennai - Greams Road Sri Velavan Motors +91 8754553411; 8754553404 044-42076898	Chennai - Red Hills AKG Motors +91 9597082578 044-26322063
Jaipur (ASP)-Sudershan Pura JMS & Co +91 9460345047; 9785415498 0141-4059277	Nagaur D.D.Autotech +91 9828943737 01582-243006	TAMILNADU	Chennai - Kattuppakkam Aravinduja Motors Private Limited +91 8939804335 044-45554888	Chennai - Tondiarpet Balaji Motors +91 9087521116 044-25910104; 25910105
Jhunjhunu Balaji Motors +91 7733022411 01592-231061	Pali RMD Motors +91 9829285357 0293-2227151	Chennai - Anna Nagar Southern Motors +91 9841277990 044-26264686		Chennai - Pallikaranai Sri Venkateswara Bike Zone +91 8681863330 044-65655222

AUTHORISED DEALERS

TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU
Coimbatore - Hope College, Peelamedu Royal Enfield Company Store +91 9655999844 0422-6067006; 6067007	Dharmapuri S.M.Motors +91 7373778259, 9688002624, 04342-288123	Kanchipuram Jet Blaze Motors +91 9629032223; 9894538176	Madurai - KK Nagar Madras Motors +91 9976755111 0452-2585686	Pollachi Bharat Motors +91 9715222600 0425-9234150
Coimbatore - Sai Baba colony Sheriff Motors +91 9597310101 0422-4210101	Dindigul Rajendra Automobiles +91 9486963396 0451-2431850	Karaikkudi Neha Motors +91 7373097717	Madurai - Kazhavasal, Theni main road Classic Motors +91 9629023344 0452-2667875	Salem - Four Roads Chamundi Enfield +91 8098611999 0427-2414100
Coimbatore - Trichy Road, Kothari Layout BullMenn Motors +91 9514555510 7092300000	Erode Senthil Murugan Auto Agencies +91 8220048567 0424-2430518	Karur Murugan Motors +91 9543255950 0432-4329950	Madurai - Simmakkal, Workshop Road G.G. Motors +91 8012688444 0452-2342007	Sivakasi Sri Scorpion Racers (P) Ltd +91 7373059701 0456-2231303
Cuddalore Rooster Automobiles +91 9791322822 04142-227788	Hosur Sri Saravana Motors +91 8220013431; 8220013432 04344-244030/244031	Krishnagiri Sree Maruthi Motor & Auto Service +91 9443237512 0434-3232512	Nagercoil Chandra Motors +91 8973886699 04652-236477	Thanjavur JAF Associates +91 7867019836
	Hosur (ASP) - Seetharam Nager Sri Manjunatha Bullet Garage +91 9940909908 0434-4314114	Kumbakonam A.V. Motors +91 7598707783; 7598707785 0435-2415286	Namakkal Royal Annanmar +91 8883114777 04286-277557	Theni Coral Moto Hub +91 9500739686 9698933000

AUTHORISED DEALERS

TAMILNADU	TAMILNADU	TELANGANA	TELANGANA	TELANGANA
Thiruvannamalai AKAN Agency +91 9843033861 04175-233377	Trichy - Kanishya Arcade Warner's Road N A Motors +91 9585592221 0431-4001314; 2460121	Hyderabad-Bowenpally, Suchitra SVR Motors and Engineering +91 8885023360; 8885023350 040-40116336	Hyderabad-Prasanth Nagar,vanasthalipuram Taurus Motors +91 8125828787 040-29804755	Secundarabad-Begumpet Kayjee Engineers +91 9246113133 040-27907444
Thoothkudi Charles Motors +91 9944723062 0461-2321636	Vellore Sri Kalikambal Autos +91 8508536771 0416-2245505	Hyderabad-Erragada Royal Enfield Company Store +91 8686099601 040-23701235; 23702255	Hyderabad-Ramachandrapuram, BHEL Go Green Motors India Pvt. Ltd +91 8712126622 040-69996644; 69996622	Secundrabad- Neredmet Orange International +91 8121091210 040-64449494; 3434
Tirunelveli DG Motors +91 9486729010 0462-2970031	Villupuram Rooster Automobiles +91 8489144744 04146-222279	Hyderabad-Himmayat Nagar Jayasree Automotives +91 9010183555 +91 9010752555 040-65169666	Hyderabad-Saraswathi Nagar, Uppal Royal Engineers +91 9885051755 040-64241755	Secundarabad-Opp-KIMS Hospital, Ranigunj Kayjee Engineers 040 - 64533839
Tirupur Bikerz +91 7502387000 0421-4252523	TELANGANA			Karimnagar-Bye pass Road Quality Motors +91 9966173000 0878-6509993
Trichy - Annamalai Nagar Karur road Oxina Motors +91 8056455577 7402718502; 7402718514	HYDERABAD & SECUNDARABAD Hyderabad- Banjara Hills VVC Automobiles +91 7842883883	Hyderabad-PJR Nagar, Gachibowli road Go Green Motors India Pvt. Ltd 040-64646303 040-64626265	Hyderabad-Zafferguda, Mehidipatnam Venkataramana Automobiles Pvt Ltd +91 7660008132; 9100087519, 040-23514551	Karimnagar-CVNR Road Quality Motors +91 9030775252
				Khammam Royal Automotives +91 9963886789 +91 8297536789

AUTHORISED DEALERS

TELANGANA	TELANGANA	UTTARKHAND	UTTARKHAND	UTTAR PRADESH
Kothagudam Royal Motors +91	Warrangal-Hanamkonda Quality Automobiles +91 9030775252 +91 9030775164	Haldwani Suri Sales (P) Limited +91 7351007972 05946-210768	Roorkee Goswami Automobiles +91 9897238608 01332-277477	Aligarh Maidola Royal Enfield +91 9319144044 0571-3292464
Mahabub Nagar Harshithh Automotives +91 7660022336; 7660022334	TRIPURA	Haridwar Prem Auto Enterprises +91 9927994477 01334-250242; 253242	Rudrapur Brar Motors +91 9219445699 05944-2473127	Allahabad - Bai Ka Bagh Vrindavan Automotive +91 7860352786; 7860383786 0532-2417021
Mancherial J V Aryan Motors +91 8179356458 +91 8297388775	Agartala XED Motorcycles +91 8415951975 0381-2341098	Kashipur Batra Enterprises +91 9837336026 05947-277207	UTTAR PRADESH	Allahabad - Kamla Nehru Hospital Jay Pee Motors +91 7705907327; 7328; 7329 0532-6061002;1003
Miryalguda Sri Lakshmi Pavan Automotives +91 96666660606	UTTARKHAND	Pithoragarh (ASP) Sai Automobiles +91 9412981042 05964-225786	Agra - Baluganj Shambhavi Automotive Engineers +91 8057400022 0562-2260444	Azamgarh Amit Motors +91 9415795792 +91 9415103787
Nalgonda Vijayalakshmi Automotives +91 8885966627 8885966687	Dehradun - Karanpur Road Ahuja Enterprises +91 9927532535 0135-2659082	Rishikesh (ASP) Ranjeet Motorcycles +91 9897548171; 9897113728, 0135-2434171	AGRA-Guru Ka Tal-NH 2 Agra Royals +91 9837004872; 9997023456 0562-6888846	Badaun Omkar Motors +91 9412427289 9520330305
Nizamabad KY Motors +91 8885198222 08462-236882	Dehradun - Saharanpur Road - Niranjanpur Allied Auto Agencies +91 9690777771 0135-2623487			

AUTHORISED DEALERS

UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH
Barabanki G.R & Company +91 7706911346; 7706911342	Deoria Supreem Motors +91 9628755557 05568-229624	Firozabad Emerald Automobiles +91 9219439555 +91 9219439444	Jhansi Triveni Enterprises +91 9415059809 0510-2481007; 2380007	Lucknow - Jankipuram Royal Motor works +91 760777396 522 4078111
Bareilly Suri Sales (P) Limited +91 9359108047 7351007963 0581-2543334	Etawah V P Motors +91 9719530742 +91 9568013104	Ghazipur Shri Sai Chandra Automobiles +91 9415881073	Kanpur Sareen Motors +91 9389629521 0512-2540484	Mathura Aryaman Enterprises +91 9675303059 +91 8392916221
Basti New India Merchant +91 9532211786 554 2281483	Faizabad Chawla Riders +91 9628140004-07 0527-8265077/78	Gonda Style N Passion +91 9125411110	Lakhimpur Kheri Shree Vinayak Motors +91 9554155999 0587 2277734	MAU Chandra Motors +91 9450189107 0547-2860555
Bijnor Chaudhary Motors +91 8958994499 01342-264455	Farrukhabad Ankur Auto Agencies +91 9415124921 +91 7678874000	Gorakhpur Shiv Motors (A Unit of Pardeshi Zigwheels Pvt. Ltd.) +91 9559005759 0551-2230014	Lucknow (ASP) Amafh Bullet Centre +91 9415018786 0522-4074200	Meerut - Jagriti Vihar Moto Riders +91 8476900096 0121-4000511
Bulandshahar Santhosh Enterprises +91 9760415515 05732-231326	Fatehpur K S Auto Sales +91 9616519248 05180-221223	Jaunpur Aditya Motors +91 9196128730; 9839216882 0545-2264047	Lucknow - Alambagh Shreya Auto World Pvt. Ltd. +91 8400400842; 850 0522-4037677; 4041033	Meerut - West rithani Nutech motors +91 7088714714 0121-440111

AUTHORISED DEALERS

UTTAR PRADESH	UTTAR PRADESH	WEST BENGAL	WEST BENGAL	WEST BENGAL
Moradabad Akanksha Autozone Pvt Ltd. +91 7060007905 0591-6055999	Saharanpur Sachdeva Enterprises +91 8445577933 0132-2680680	Asansol SG Automobiles +91 8170030003; 8170030004	Dankuni-Hooghly Universal Traders +91 9830186028 033-32013624	Kolkata - Chowrangee chowk Austin Distributors Pvt. Ltd +91 8420046876 033-65552077; 40721010; 60505574
Muzaffar Nagar Harivansh Auto Agency +91 9219440446; 8979298645 0131-2646477	Sultanpur Asia Royal Motors +91 9935185230 05362-227777	Barasat-24 Parganas The Country Motors +91 9051506523 033-654 04510	Durgapur R.H.Automobiles Pvt.Ltd. +91 9748402629	Kolkata - Nowa para Kolkata Bike Zone 91 9674029373 033-40082380
Nazibabads Agarwal Tractor & Parts +91 9927030546; 9837072868 01341-220252	Unnao Raj Auto World +91 7080903700 0515-2831098	Baruipur-24 Parganas Austin Distributors Pvt. Ltd 033-65556611	Howrah Apollo Coaches (P) Ltd +91 8820602346 033-32971712; 32902346	Kolkata - Sarat Bose road Shah Distributors (Auto Division) +91 9830477788 033-22814242
Pratapgarh Shaurya Enterprises +91 9554433888; 9918601126; 1127	Varanasi - Maldahiya Khurana Automobiles +91 8934965655 0542-2207532; 2207618	Berhampore Maxwheel Motors +91 9233330208 03482-224227	Kharagpur Jain Motors +91 9476481717 +91 9434692778	Kolkata - Shakespeare Sarani East India Agro Indus. Pvt. Ltd +91 9874977006 033-22824400; 22823300; 22903370
Raebareli Sushma Motors +91 9455502987	Varanasi - Maqbool Anand road One Place Automobiles Pvt. Ltd. +91 7753888536; 7753888522, 0542-2508385	Burdwan Sri Ram Automobiles +91 8001170555; 9800004533 0342-3191999	Kolkata - Behala Chunnilal Jhanwarlal Motors Pvt. Ltd. +91 9339366660 033-24983119	

AUTHORISED DEALERS

WEST BENGAL				
Krishna Nagar Royal Automobile +91 8629961089				
Malda Speed Wheels +91 9735586333				
Siliguri - Matigara Riders Corner +91 9002223222				
Siliguri - 2nd Mile Sevoke Road Siliguri Distributors +91 9775633225 0353-2778873; 2547457				
Titagarh Bishnu Oil Company +919874839911; 9051365511 033-25833353				

NOTES

NOTES

NOTES

FORM 22

[See Rules 47(g), 115, 124 (2), 126A and 127 (1), 127 (2)]


**INITIAL CERTIFICATE OF COMPLIANCE WITH POLLUTION STANDARDS,
SAFETY STANDARDS OF COMPONENTS AND ROAD WORTHINESS**

Certified that the following vehicle complies with the provisions of the Motor Vehicles Act, 1988, and the rules made there under, including the following mass emission norms:

Brand name of the vehicle : Himalayan
Chassis number :
Engine number/motor number :
(in case of battery operated vehicles)
Sub-rule No. of rule : 115(2)(i), 115(14)(F)
Emission norms : **Bharat Stage III**
[Bharat Stage-I/II/III/Bharat (Trem) Stage-III etc.]

Date :

For **ROYAL ENFIELD**

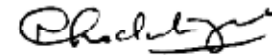

Quality Assurance



ROYAL ENFIELD

Part No. 587969/A

ROYALENFIELD.COM