



WORKSHOP MANUAL

633376



Vespa PX 150 USA



WORKSHOP MANUAL

Vespa PX 150 USA

WORKSHOP MANUAL

Vespa PX 150 USA

This manual has been prepared by Piaggio & C. S.p.A, for use in the workshops of authorized Piaggio-Gilera dealers and sub-agents. It is assumed that the person utilizing this manual for servicing or repairing Piaggio vehicles has knowledge of the principles of mechanics and standard procedures required for general vehicle repair. Any relevant changes concerning the vehicle characteristics or specific repair operations will be divulged in the form of updates to this manual. Satisfactory repair or service cannot be achieved without the necessary equipment and tools. Refer to the pages of this manual concerning specific tools and equipment and the special tools catalogue.

N.B. Provides key information to make the procedure easier to understand and carry out.

CAUTION Refers to specific procedures to carry out for preventing damages to the vehicle.

WARNING Refers to specific procedures to carry out to prevent injuries to the repairer.



Personal safety Failure to completely observe these instructions will result in serious risk of personal injury.



Safeguarding the environment Sections marked with this symbol indicate the correct use of the vehicle to prevent damaging the environment.



Vehicle intactness The incomplete or non-observance of these regulations leads to the risk of serious damage to the vehicle and sometimes even the invalidity of the guarantee.



INDEX OF TOPICS

CHARACTERISTICS

CHAR

TOOLING

TOOL

MAINTENANCE

MAIN

ELECTRICAL SYSTEM

ELE SYS

ENGINE FROM VEHICLE

ENG VE

ENGINE

ENG

SUSPENSIONS

SUSP

BRAKING SYSTEM

BRAK SYS

CHASSIS

CHAS

PRE-DELIVERY

PRE DE

TIME

TIME

INDEX OF TOPICS

CHARACTERISTICS

CHAR

Rules

Safety rules

- Should it be necessary to keep the engine running while servicing, make sure that the area or room is well ventilated, and use special exhaust fans, if required. Never let the engine running in closed rooms. In fact, exhaust gases are toxic.
- The battery electrolyte contains sulphuric acid. Protect your eyes, clothes and skin. Sulphuric acid is highly corrosive; in the event of contact with your eyes or clothes, rinse thoroughly with water and consult a doctor immediately.
- The battery produces hydrogen, a gas that can be highly explosive. Do not smoke and avoid sparks and flames when close to the battery, especially during recharge.
- Fuel is highly flammable, and in some conditions it can be explosive. Do not smoke in the working area, and avoid free flames or sparks.
- Clean the brake pads in a well ventilated environment, directing the compressed air jet so as to not intake the dust produced by the wear of the friction material. Even though the latter contains no asbestos, dust inhalation is harmful.

Maintenance rules


- Use original PIAGGIO spare parts and lubricants recommended by the Manufacturer. Non-original or non-conforming spares may damage the vehicle.
- Use only the appropriate tools designed for this vehicle.
- Always use new gaskets, sealing rings and split pins upon refitting.
- After removal, clean the components using non-flammable or low flash-point solvents. Lubricate all the work surfaces, except tapered couplings, before refitting these parts.
- After refitting, make sure that all the components have been installed correctly and work properly.
- For removal, overhaul and refit operations use only tools with metric measures. Metric bolts, nuts and screws are not interchangeable with coupling members with English sizes. Using unsuitable coupling members and tools may damage the scooter.
- When carrying out maintenance operations on the vehicle that involve the electrical system, make sure the electric connections have been made properly, particularly the ground and battery connections.

Dimensions and mass

WEIGHT AND DIMENSIONS

Specification	Desc./Quantity
Empty weight	229,28 Lb (104 Kg)
Wheelbase	48,62 inch (1235 mm)
Max height	43,70 inch (1110 mm)

Specification	Desc./Quantity
Max lenght	69,29 inch (1760 mm)
Handlebars width	27,56 inch (700 mm)

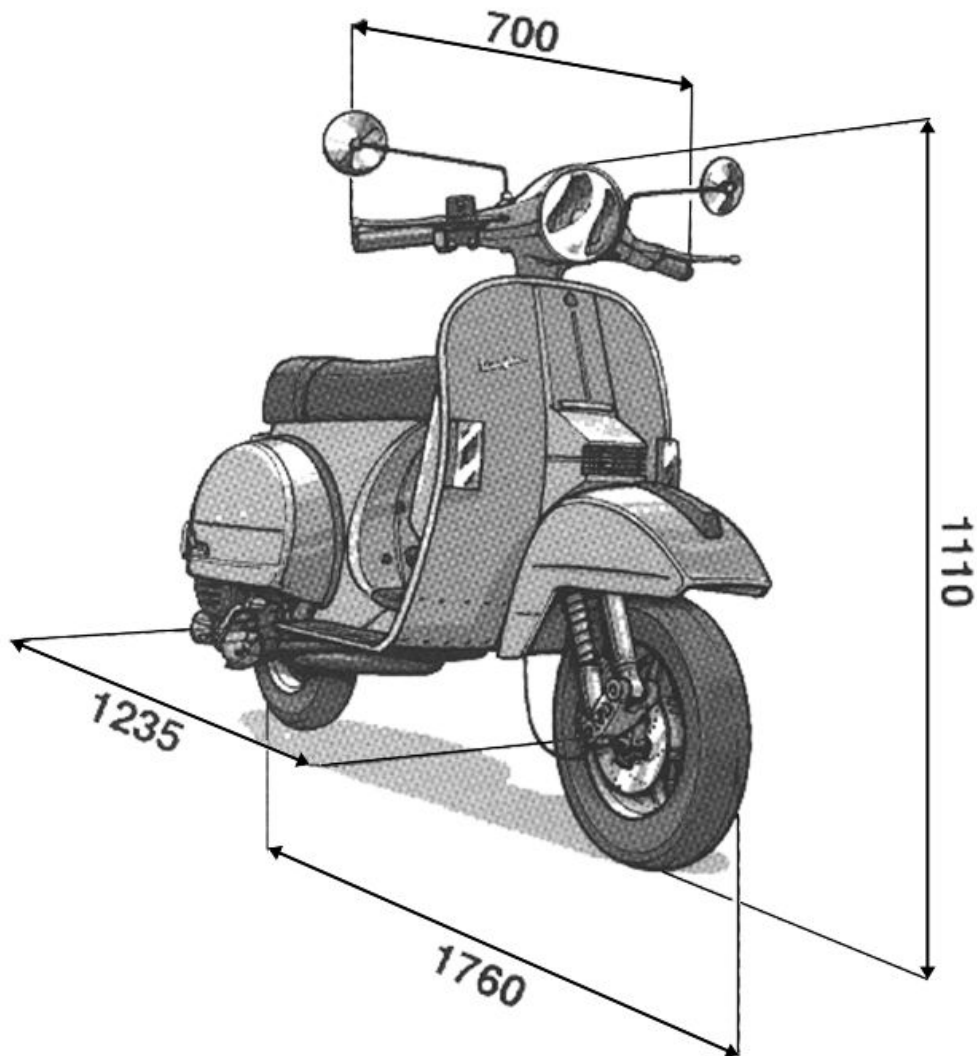

Engine

ENGINE

Specification	Desc./Quantity
Engine type	2-stroke with rotary intake timing
No. of cylinders	1
Alesaggio per corsa (150)	0,19 x 2,24 inch (58 x 57 mm)
Cilindrata (150)	919 inch ³ (150,599 cm ³)
Compression ratio (150)	8 : 1
Carburetor	Dell'orto SI 20/20 D
Engine idle speed	1900 ± 100 rpm
CO value	3,8 ± 0,5%
Air filter	Metallic net soaked in oil-petrol mixture
Starting system	Electric starter motor and kick-start
Lubrication	Mixture oil
Fuel supply	Oil-petrol mixture through carburetor with automatic mixer (mass flow varying with engine speed) and throttle valve

Specification	Desc./Quantity
Clutch	Multi-disc.
Cooling	Forced air by a centrifugal fan.
Max power output (shaft) 150cc	6.6 Kw (9 hp) at 5,700 rpm
Max speed (150)	82,8 Km/h

Transmission

TRANSMISSION

Specification	Desc./Quantity
Gear-box	4-speed with constantly engaged gears

Capacities

CAPACITIES

Specification	Desc./Quantity
Gear-box	~ 250 cc.
Oil tank mixer	~ 1.6 l (including a reserve of 0.4 l)
Fuel tank	~2,11 gal, including ~0,55 gal reserve (~8 l, including ~ 2,1 l reserve)

Electrical system

ELECTRICAL SYSTEM

	Specification	Desc./Quantity
1	Ignition type	Electronic ignition by capacitive discharge with H.T. coil
2	Spark advance (T.D.C.)	18° ± 1
3	Spark plug	CHAMPION RL82C
4	Battery	12V - 9Ah
5	Fuse	7.5 A
6	Generator	AC

Frame and suspensions

FRAME AND SUSPENSIONS

Specification	Desc./Quantity
Suspensions	Steering column pivoted onto front wheel hub, helicoid spring suspension and hydraulic shock-absorber (compression and rebound damping)
Frame	Monocoque-type shell obtained from pressed steel

Brakes

BRAKES

Specification	Desc./Quantity
Front	Ø 220 mm disc hydraulically operated via lever mounted on RHS of handlebars
Rear	Ø 140 mm drum with expanding shoes mechanically activated via pedal on RHS of footrest

Wheels and tyres

WHEELS AND TIRES

Specification	Desc./Quantity
Front tire	3,50 x 10"
Rear tire	3,50 x 10"
Rims	Pressed steel
Wheels	Interchangeable with 2.00"x10" pressed steel rims.
Front tire pressure	18,85 PSI (1,3 bar)
Rear tire pressure	26,11 PSI (1,8 bar)
	33,36 PSI (2,3 bar) driver and passenger

N.B.

CHECK AND ADJUST TYRE PRESSURE WITH TYRES AT AMBIENT TEMPERATURE. REGULATE PRESSURE ACCORDING TO THE WEIGHT OF THE RIDER AND ACCESSORIES

Carburettor

Dell'Orto

CARBURETTOR

Specification	Desc./Quantity
Type	SI20/20D
Diffuser diameter	20 mm
Main jet	96/100
Slow running jet	45/100 *
Main air jet	140/100
Throttle valve (type)	6823.09
Emulsifier (code)	BE5
Sprayer	280/100
Starter jet	60/100
Air idling screw	1/2 turn

* With idling air hole 140/100

150cc Version

Dell'Orto

CARBURETTOR

Specification	Desc./Quantity
Type	SI20/20D
Diffuser diameter	20 mm
Main jet	98
Slow running jet	45/160
Main air jet	150
Throttle valve (type)	6823.16.64
Emulsifier (code)	BE5
Sprayer	280/100
Starter jet	60/100
Air idling screw	1 3/4

Tightening Torques

STEERING UNIT

Name	Torque in Nm
Upper steering ring nut	5÷6
Top steering housing	6÷7 (hence loosen by 80° - 90°)
Handlebar fixing screw*	30÷44

FRAME

Name	Torque in Nm
Engine - frame bolt *	61 ÷ 75
Rim - hub fixing nuts (front-rear)	20 ÷ 27
Shock-absorber - frame fixing nut*	30÷40
Shock-absorber - engine bolt*	13 ÷ 23
Rear wheel axle*	75÷90

FRONT SUSPENSION

Name	Torque in Nm
Shock-absorber mounting plate - steering column fixing nuts	20÷27
Upper shock-absorber fixing nut	30÷40
Lower shock-absorber fixing nut	20÷27
Front wheel axle nut*	60÷100

FRONT BRAKE

Name	Torque in Nm
Reservoir - pipe fitting	8÷12
Pipe - calliper fitting	15÷25
Intermediate pipe fitting	10÷15
Calliper fixing screw*	20÷25
Disc fixing screw*	5÷6
Oil draining screw	10÷12

ENGINE

Name	Torque in Nm
Coils mounting bracket fixing screw	3÷4
Kick-start lever fixing nut	23÷26
Clutch assy. fixing nut	40 ÷ 45
Multi-gear pinion nut	30 ÷ 35
Flywheel fixing nut	60 ÷ 65
Carburettor fixing bolts	16÷20
Clutch cover fixing screws	6÷8
Cylinder head fixing nuts	13÷18
Spark plug	20÷25
Crankcase mating screws	11÷13
Wheel axle nut	90÷110
Gear shifter nuts	12÷15
Starter motor screws	10÷12
Fan cover screws	8÷10
Air-box fixing screws	6÷8
Gear fixing nut	30÷35
Mixer fixing screws	6÷8
Head fixing nuts	16 ÷ 26
Gear-box trunnion	15 ÷ 18

N.B.

* Safety tightenings


IN ORDER TO ENSURE THE CORRECT TIGHTENING TORQUE, LUBRICATE NUTS BEFORE ASSEMBLY.

Overhaul data

Assembly clearances

Cylinder - piston assy.

The cylinder classification must be carried out at 25 mm from the head mating surface on the rod's swinging plane.

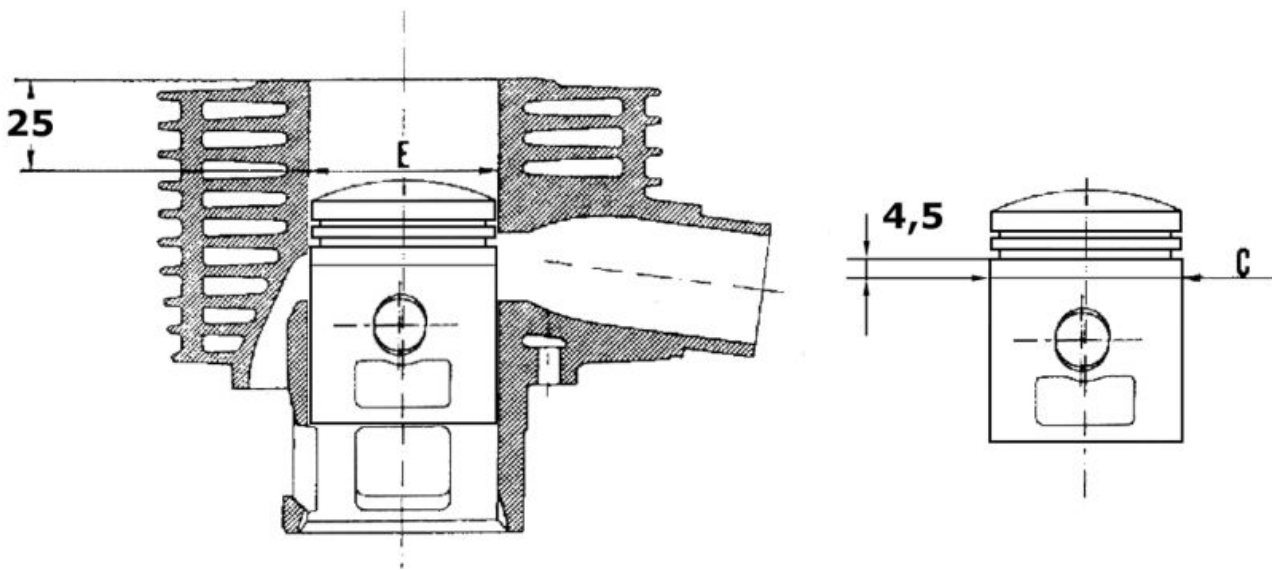


MATING CATEGORIES - 150CC ENGINE

Name	Initials	Cylinder	Piston	Play on fitting
Cylinder - piston	B	57,795	57,555	0,240
Cylinder - piston	C	57,800	57,650	0,240
Cylinder - piston	D	57,805	57,565	0,240
Cylinder - piston	E	57,810	57,570	0,240
Cylinder - piston	F	57,815	57,575	0,240
Cylinder - piston	G	57,820	57,580	0,240
Cylinder - piston	H	57,825	57,585	0,240
Cylinder - piston (1st oversize)	C	58,000	57,760	0,240
Cylinder - piston (1st oversize)	D	58,005	57,765	0,240
Cylinder - piston (1st oversize)	E	58,010	57,770	0,240
Cylinder - piston (1st oversize)	F	58,015	57,775	0,240
Cylinder - piston (1st oversize)	G	58,020	57,780	0,240
Cylinder - piston (2nd oversize)	C	58,200	57,960	0,240
Cylinder - piston (2nd oversize)	D	58,205	57,965	0,240

Name	Initials	Cylinder	Piston	Play on fitting
Cylinder - piston (2nd oversize)	E	58,210	57,970	0,240
Cylinder - piston (2nd oversize)	F	58,215	57,975	0,240
Cylinder - piston (2nd oversize)	G	58,220	57,980	0,240
Cylinder - piston (3rd oversize)	C	58,400	58,160	0,240
Cylinder - piston (3rd oversize)	D	58,405	58,165	0,240
Cylinder - piston (3rd oversize)	E	58,410	58,170	0,240
Cylinder - piston (3rd oversize)	F	58,415	58,175	0,240
Cylinder - piston (3rd oversize)	G	58,420	58,180	0,240


Piston rings

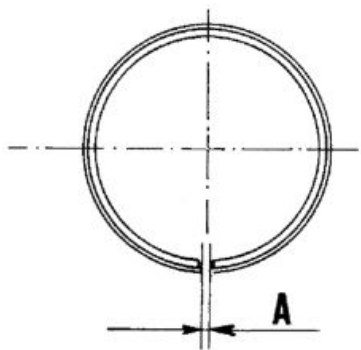

PISTON RINGS - 150CC ENGINE

Name	Description	Dimensions	Initials	Quantity
Piston ring		57,8	A	0,2 ÷ 0,4
Piston ring (1st oversize)		58	A	0,2 ÷ 0,4
Piston ring (2nd oversize)		58,2	A	0,2 ÷ 0,4
Piston ring (3rd oversize)		58,4	A	0,2 ÷ 0,4

Crankcase - crankshaft - connecting rod

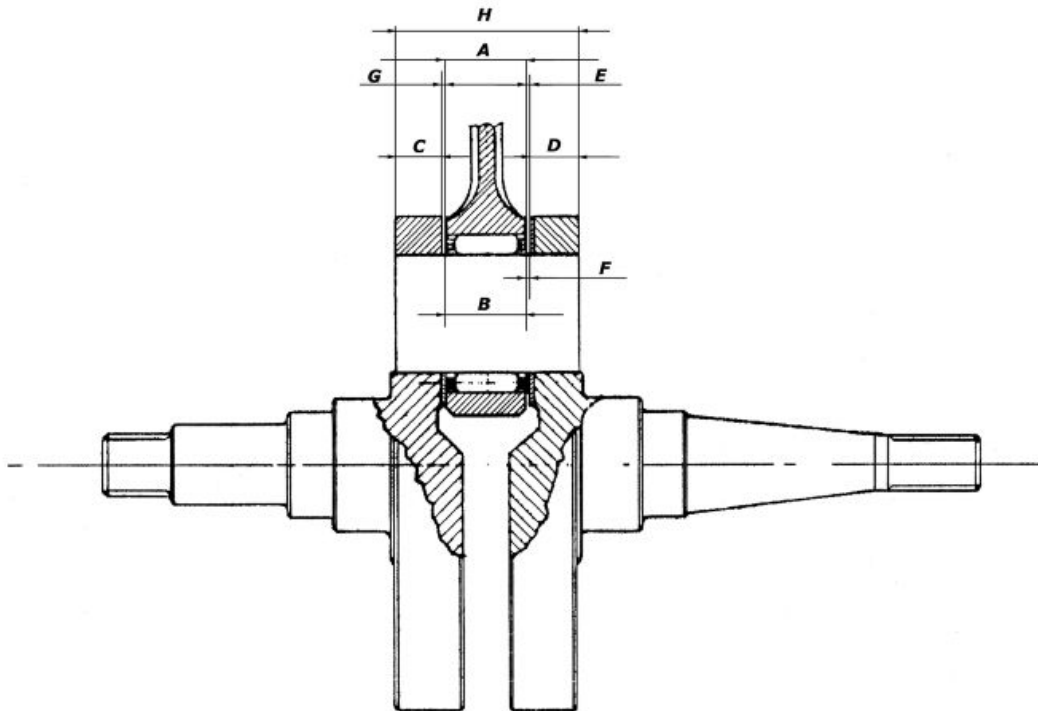

CONNECTING ROD - CRANKSHAFT. ASSEMBLY CLEARANCE «E» BETWEEN BIG END AND HALF CRANKSHAFT ON FLYWHEEL-SIDE

Name	Description	Dimensions	Initials	Quantity
Connecting Rod		A= 15,4 +0 -0,05	E	0,15 ÷ 0,46
Washer (2)		G= 0,5 +0,05 -0,03	E	0,15 ÷ 0,46
Half-crankshaft clutch-side		C= 11,1 -0 +0,05	E	0,15 ÷ 0,46
Half-crankshaft fly-wheel-side		D= 11,1 -0 +0,05	E	0,15 ÷ 0,46
Spacer tool		H= 38,95		


CONNECTING ROD - CRANKSHAFT. ASSEMBLY CLEARANCE «F» BETWEEN BIG END ROLLER CAGE AND HALF CRANKSHAFT ON FLYWHEEL-SIDE

Name	Description	Dimensions	Initials	Quantity
Connecting Rod		B= 15,6 -0,1 -0,2	F	0,05 ÷ 0,41
Washer (2)		G= 0,5 +0,05 -0,03	F	0,05 ÷ 0,41
Half-crankshaft clutch-side		C= 11,1 -0 +0,05	F	0,05 ÷ 0,41
Half-crankshaft fly-wheel-side		D= 11,1 -0 +0,05	F	0,05 ÷ 0,41
Spacer tool		H= 38,95		

- Connecting rods and roller cages are subdivided into **4 categories** (indicated by markings on big end and outer cage rim, respectively)
- Mate connecting **rod with cage of same category**; if such assembly results to be excessively noisy, use a roller cage from **next category**.
- For the wrist pin, fitted with 0 clearance, **the maximum allowable play after use must be 0.02 mm**.

– The maximum allowable end-play for the connecting rod **after use** (intended as the longitudinal slide on the big end) **is 0.7mm**.

Gearbox shouldered

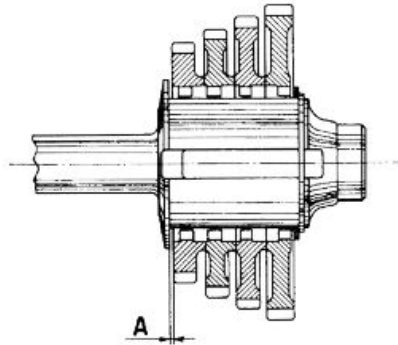

GEARBOX SHOULDERS

Name	Description	Dimensions	Initials	Quantity
Shoulder		2,05 +0 -0,06	A	0,15 ÷ 0,40
Shoulder (1st oversize)		2,20 +0 -0,06	A	0,15 ÷ 0,40
Shoulder (2nd oversize)		2,35 +0 -0,06	A	0,15 ÷ 0,40
Shoulder (3rd oversize)		2,50 +0 -0,06	A	0,15 ÷ 0,40
Shoulder (4th oversize)		2,65 +0 -0,06	A	0,15 ÷ 0,40

N.B.

IF THE SPECIFIED CLEARANCE «A» CANNOT BE ACHIEVED, REPLACE THE SHOULDER RING WITH AN OVERSIZED ONE SUCH TO ALLOW OBTAINING THE PRESCRIBED PLAY. TO CHECK THE CLEARANCE, USE A FEELER GAUGE.

Products

TABLE OF RECOMMENDED PRODUCTS







Product	Description	Specifications
AGIP GEAR 80W-90	gearbox oil	SAE 80W-90 oil complying with API GL4 specifications
AGIP CITY HI TEC 4T	Oil to lubricate flexible transmissions (brake, throttle control and mixer, odometer)	Oil for 2-stroke engines: SAE 5W-40, API SL, ACEA A3, JASO MA
AGIP GP 330	Grease (brake level, throttle twistgrip, gaer)	Calcium complex soap grease NLGI 2; ISO-L-XBCIB2
AGIP CITY TEC 2T	Mixer oil	synthetic oil for 2-stroke engines: JASO FC, ISO-L-EGD
AGIP GREASE MU3	Grease for odometer transmission gear case	Soap-based lithium grease with NLGI 3; ISO-L-XBCHA3, DIN K3K-20
AGIP BRAKE 4	Brake fluid	FMVSS DOT 4 Synthetic fluid






INDEX OF TOPICS





TOOLING

TOOL

TOOLING

Stores code	Description	
020004Y	Punch for removing fifth wheels from headstock	
020055Y	Wrench for steering tube ring nut	
020074Y	Support base for checking crankshaft alignment	
002850y	Oil tank spanner	
002973y	Fuel tap spanner	
020320Y	Exhaust gases analyser	

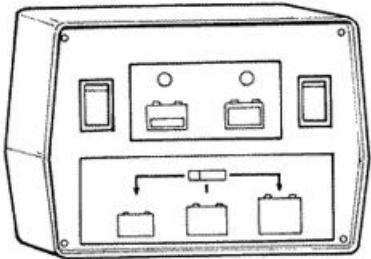Stores code	Description	
020325Y	Brake-shoe spring calliper	
020329Y	MityVac vacuum-operated pump	
020330Y	Stroboscopic light to check timing	
020331Y	Digital multimeter	
020332Y	Digital rev counter	

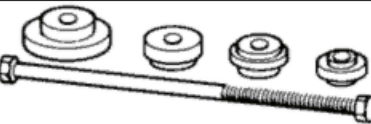
Stores code	Description	
020333Y	Single battery charger	
020334Y	Multiple battery charger	
020335Y	Magnetic support for dial gauge	
001330Y	Tool for fitting steering seats	

Stores code

Description


020021Y

Front suspension service tool

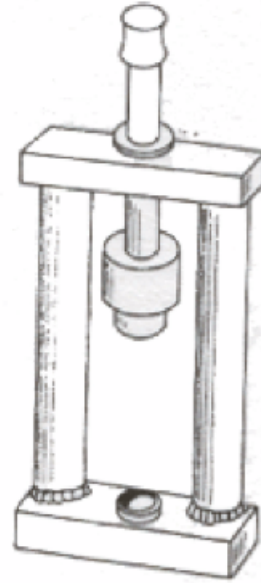


020321y

Carburettor float removing tool

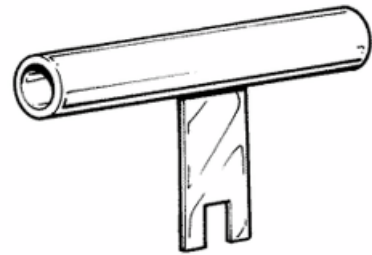


006029Y

Punch for fitting fifth wheel seat on steering tube

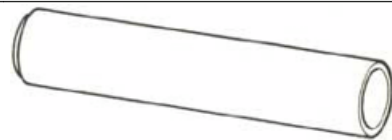

020625Y


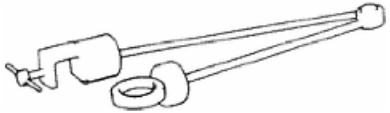
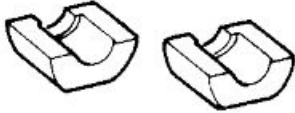


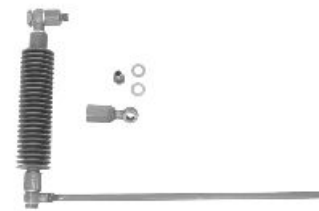

Kit for sampling gas from the exhaust manifold



001467Y021

Extraction pliers for ø 11 mm bearings



Stores code	Description	
020151Y	Air heater	
020150Y	Air heater support	
020057Y	Calking tool	
020095Y	Flywheel retaining tool	
008564Y	Flywheel extractor	
008886Y	Crankshaft extractor	
004499Y	Camshaft bearing extractor	

Stores code

Description

020265Y

Bearing fitting base




060007Y

Crankcase bearing spacer



060824Y

Inspection probe

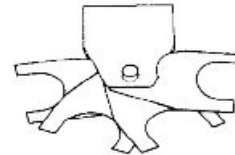

008119Y009

Tube to assemble shafts and axles



001729Y

Clutch retaining tool



020322Y

Clutch removing/fitting tool



INDEX OF TOPICS

MAINTENANCE

MAIN

Maintenance chart
EVERY 2 YEARS
Action

 Brake fluid - change

AT 621,37 MILES OR 4 MONTHS

80'

Action

 Gear-box oil level - replacement
 Transmission gas mixer- adjust
 Odometer gear - greasing
 Steering - adjustment
 Brake and clutch lever - greasing
 Brake fluid level - check
 Safety locks - check
 Electrical system and battery - check
 Tyre pressure and wear - check
 Vehicle and brake test - road test

AT 3106,86 MILES OR 12 MONTHS

65'

Action

 Gear-box oil level - check
 Spark plug - replacement
 Air filter on carburetor - Clean
 Transmission gas mixer- adjust
 Brake and clutch lever - greasing
 Brake pads - check condition and wear
 Brake fluid level - check
 Electrical system and battery - check
 Tyre condition and wear - Check
 Vehicle and brake test - road test

AT 6213,71 MILES OR 24 MONTHS

130'

Action

 Gear-box oil level - replacement
 Spark plug - replacement
 Air filter on carburetor - Clean
 Idle speed (*) - adjustment
 Transmission gas mixer- adjust
 Odometer gear - greasing
 Steering - adjustment
 Brake and clutch lever - greasing
 Brake pads - check condition and wear
 Brake fluid level - check
 Transmission elements - lubrication
 Safety locks - check
 Suspensions - check
 Electrical system and battery - check
 Headlight - adjustment check
 Tyre condition and wear - Check
 Vehicle and brake test - road test

(*) See regulations in section «Idling speed adjustment»

AT 9320,57 MILES OR 36 MONTHS

65'

Action

Gear-box oil level - check
Spark plug - replacement
Air filter on carburetor - Clean
Transmission gas mixer- adjust
Brake and clutch lever - greasing
Brake pads - check condition and wear
Brake fluid level - check
Electrical system and battery - check
Tyre condition and wear - Check
Vehicle and brake test - road test

AT 12427 MILES

135'

Action

Gear-box oil level - replacement
Spark plug - replacement
Air filter on carburetor - Clean
Idle speed (*) - adjustment
Cylinder cooling system - check/cleaning
Transmission gas mixer- adjust
Odometer gear - greasing
Steering - adjustment
Brake and clutch lever - greasing
Brake pads - check condition and wear
Brake fluid level - check
Transmission elements - lubrication
Safety locks - check
Suspensions - check
Electrical system and battery - check
Headlight - adjustment check
Tyre condition and wear - Check
Vehicle and brake test - road test

(*) See in section «Idling speed adjustment»

AT 15534 MILES

65'

Action

Gear-box oil level - check
Spark plug - replacement
Air filter on carburetor - Clean
Transmission gas mixer- adjust
Brake and clutch lever - greasing
Brake pads - check condition and wear
Brake fluid level - check
Electrical system and battery - check
Tyre condition and wear - Check
Vehicle and brake test - road test

AT 18641 MILES

160'

Action

Gear-box oil level - replacement
Spark plug - replacement
Air filter on carburetor - Clean
Idle speed (*) - adjustment
Transmission gas mixer- adjust
Odometer gear - greasing
Steering - adjustment
Brake and clutch lever - greasing
Brake pads - check condition and wear
Flexible brake lines - Change
Brake fluid level - check
Transmission elements - lubrication

Action

Safety locks - check
Suspensions - check
Electrical system and battery - check
Headlight - adjustment check
Tyre condition and wear - Check
Vehicle and brake test - road test

(*) See regulations in section «Idling speed adjustment»

AT 21748 MILES

65'

Action

Gear-box oil level - check
Spark plug - replacement
Air filter on carburetor - Clean
Transmission gas mixer- adjust
Brake and clutch lever - greasing
Brake pads - check condition and wear
Brake fluid level - check
Electrical system and battery - check
Tyre condition and wear - Check
Vehicle and brake test - road test

AT 24855 MILES

145'

Action

Gear-box oil level - replacement
Spark plug - replacement
Air filter on carburetor - Clean
Idle speed (*) - adjustment
Cylinder cooling system - check/cleaning
Transmission gas mixer- adjust
Odometer gear - greasing
Steering - adjustment
Brake and clutch lever - greasing
Brake pads - check condition and wear
Brake fluid level - check
Transmission elements - lubrication
Safety locks - check
Suspensions - check
Electrical system and battery - check
Headlight - adjustment check
Tyre condition and wear - Check
Vehicle and brake test - road test

(*) See regulations in section «Idling speed adjustment»

AT 27962 MILES

65'

Action

Gear-box oil level - check
Spark plug - replacement
Air filter on carburetor - Clean
Transmission gas mixer- adjust
Brake and clutch lever - greasing
Brake pads - check condition and wear
Brake fluid level - check
Electrical system and battery - check
Tyre condition and wear - Check
Vehicle and brake test - road test

AT 31069 MILES

130'

Action

Gear-box oil level - replacement
Spark plug - replacement
Air filter on carburetor - Clean
Idle speed (*) - adjustment
Transmission gas mixer- adjust
Odometer gear - greasing
Steering - adjustment
Brake and clutch lever - greasing
Brake pads - check condition and wear
Brake fluid level - check
Transmission elements - lubrication
Safety locks - check
Suspensions - check
Electrical system and battery - check
Headlight - adjustment check
Tyre condition and wear - Check
Vehicle and brake test - road test

(*) See regulations in section «Idling speed adjustment»

AT 34175 MILES

65'

Action

Gear-box oil level - check
Spark plug - replacement
Air filter on carburetor - Clean
Transmission gas mixer- adjust
Brake and clutch lever - greasing
Brake pads - check condition and wear
Brake fluid level - check
Electrical system and battery - check
Tyre condition and wear - Check
Vehicle and brake test - road test

AT 37282 MILES

205'

Action


Gear-box oil level - replacement
Spark plug - replacement
Air filter on carburetor - Clean
Idle speed (*) - adjustment
Cylinder cooling system - check/cleaning
Transmission gas mixer- adjust
Odometer gear - greasing
Steering - adjustment
Brake and clutch lever - greasing
Brake pads - check condition and wear
Flexible brake lines - Change
Brake fluid level - check
Transmission elements - lubrication
Safety locks - check
Suspensions - check
Electrical system and battery - check
Headlight - adjustment check
Tyre condition and wear - Check
Vehicle and brake test - road test

(*) See regulations in section «Idling speed adjustment»

Carburettor

Disassemble the carburetor and clean all components with solvent, hence dry with compressed air all ducts, in order to ensure proper cleaning.

- Carefully check the state of each component.
- The throttle valve must be free to slide inside the mixture chamber; replace if excessive play is found.
- If the mixture chamber is excessively worn, such to prevent the sliding of the throttle valve (although new), replace the carburetor.
- All seals should be replaced upon re-assembly.

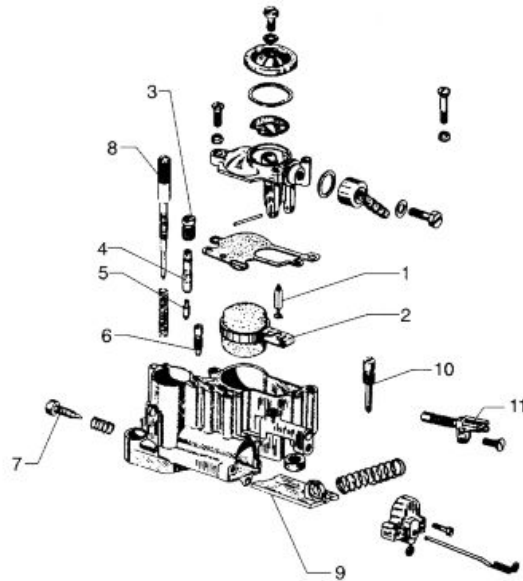

CARBURETOR


Specification	Desc./Quantity
Conical needle	
Float	
Emulsifier air adjusting screw	
Emulsifier	
Main jet	
Slow-running jet	
Fuel flow adjusting screw	
Throttle valve adjusting screw	
Throttle valve	
Starter jet	
Choke device	

Checking the spark advance

In order to ensure the correct timing, check the stator is oriented so that the I.T. index (see figure) coincides with the marking found on the crankcase.

– To check the timing, use a timing light, connecting it to the H.T. cable via the clip provided and then starting the engine.

– The correct spark advance is obtained when, with the engine running between 2,500 and 3,000 rpm, the «P» index is aligned ($\pm 1^\circ$) with the I.T. marking stamped on the volute.

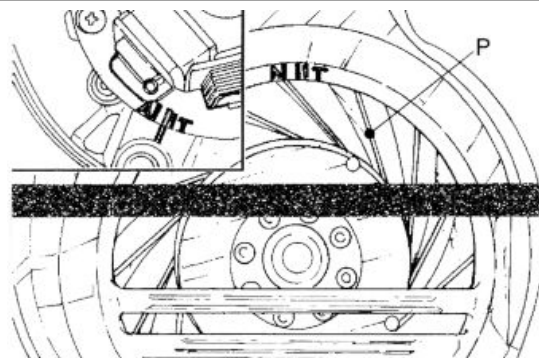

- In the impossibility of obtaining the specified values, or if the engine is found to be running rough, proceed by replacing defective components.


Specific tooling

020330Y Stroboscopic light to check timing

020332Y Digital rev counter

Spark plug

- Detach the spark plug cap
- Carefully inspect the spark plug and replace it if the insulator is damaged
- Using a feeler gauge, measure the spark gap, and adjust it if necessary
- Ensure the sealing washer is in good state
- Refit the spark plug by screwing it in by hand, and tightening it at the prescribed torque using a box spanner

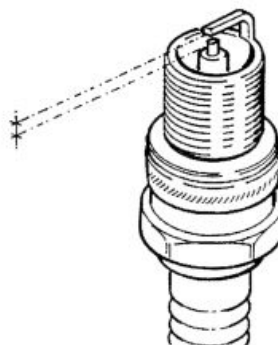

Electric characteristic

Spark plug

CHAMPION RL82C

Spark gap


0,5 ÷ 0,6 mm

Locking torques (N*m)

Spark plug 25 - 30 Nm

Air filter

- Remove the engine cowling and the air-box cover by loosening the four fixing screws shown in the figure and the idle adjusting screw; hence release the filter.
- Clean the filter with 50% fuel-oil mixture, hence dry it with compressed air.

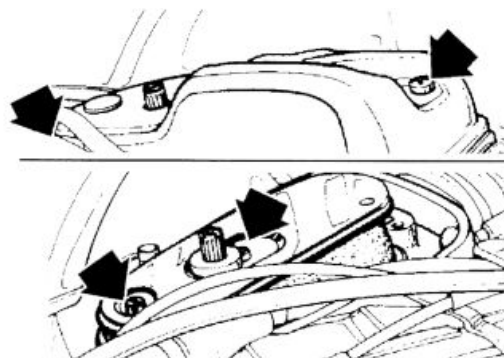

Recommended products


AGIP CITY TEC 2T Mixer oil

synthetic oil for 2-stroke engines: JASO FC, ISO-L-EGD

Headlight adjustment

Proceed as follows:

1. Place the vehicle, in riding order and with the tyres inflated to the prescribed pressure, on flat ground, 32,81 feet (10 m) away from a half-lit white screen. Ensure the vehicle axis is perpendicular to the screen;
2. Turn the headlight on and check the projection of the light beam is between $7/10$ and $9/10$ of the distance measured from the ground to the centre of the headlight;
3. Adjust the headlight as necessary, via screw «A».

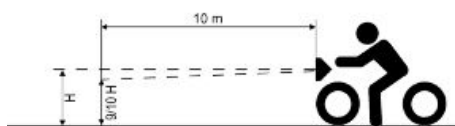


N.B.

THE ABOVE PROCEDURE COMPLIES WITH THE EUROPEAN STANDARDS REGARDING MAXIMUM AND MINIMUM HEIGHT OF LIGHT BEAMS. REFER TO THE STATUTORY REGULATIONS IN FORCE IN EVERY COUNTRY WHERE THE vehicle IS USED.

Gearbox Oil

- Check for the presence of oil inside the gearbox (oil capacity ~8,82 oz (~250 g)); with the vehicle axis perfectly vertical, the oil level must be at the height of inspection hole «A».
- To replace the oil, drain the box using filler hole «B».
- Pour some fresh oil and let the engine run for a few seconds, hence drain the box again.
- Pour 8,82 oz (250 g) of fresh oil through hole «A», so that the level reaches the reference height.

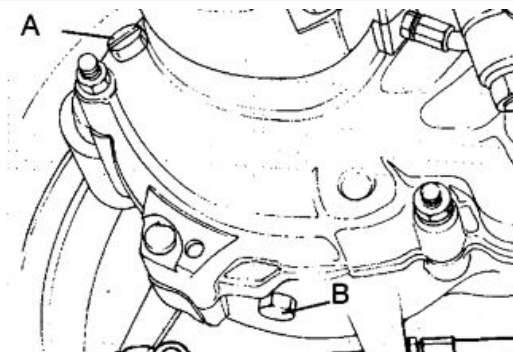

Recommended products


AGIP GEAR 80W-90 gearbox oil

SAE 80W-90 oil complying with API GL4 specifications

INDEX OF TOPICS

ELECTRICAL SYSTEM

ELE SYS

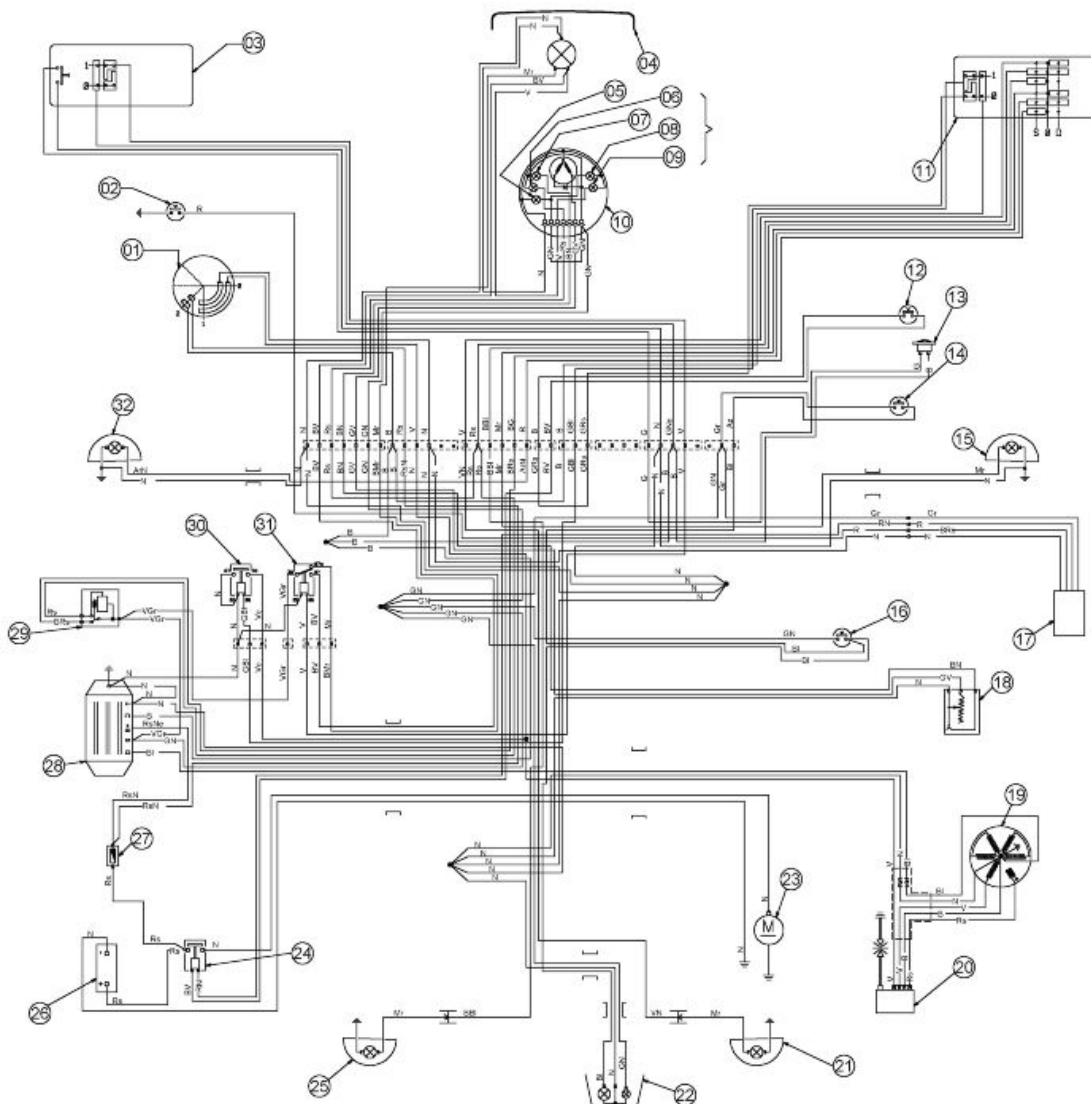


Ar = Orange, **Az** = Sky Blue, **Bi** = White, **Bl** = Blue, **Gi** = Yellow, **Gr** = Grey, **Ma** = Brown, **Ne** = Black, **Ro** = Pink, **Rs** = Red, **Ve** = Green, **Vi** = Purple

LEGENDA

	Specification	Desc./Quantity
1	Rear stop light switch	
2	Light switch	
3	Turn indicator switch	
4	Horn button	
5	Horn	
6	2 yellow lights for turn signal lights	
7	Front left turn indicator	
8	Heater control device	
9	Flywheel magneto	
10	Electronic ignition device	
11	Starter motor	
12	Fuse carrier (N° 1 fuse to 7,5 A)	
13	Battery	
14	rear left turn indicator	
15	Direction indicator lights (N° 2)	
16	Rear parking and stop light bulbs	
17	Rear light assembly	
18	rear right turn indicator	

	Specification	Desc./Quantity
19	Voltage regulator	
20	Mixer oil warning light control	
21	Starter remote control	
22	Frame earth	
23	Starter motor wire unit	
24	Automatic starter	
25	Heater	
26	Chassis wire unit	
27	Fuel level sender	
28	front right turn indicator	
29	Key switch	
30	Starter button	
31	Front brake stop button	
32	Headlight	
33	Light	
34	Sidelight bulb	
35	Left turn indicator warning light	12V - 2W
36	Headlamp warning light	
37	High-beam lamp warning light	
38	License plate light bulb	
39	Low fuel warning light	
40	Right turn indicator warning light	12V - 2W
41	Low-oil warning light	
42	Odometer with warning lights and level indicator	

Components arrangement

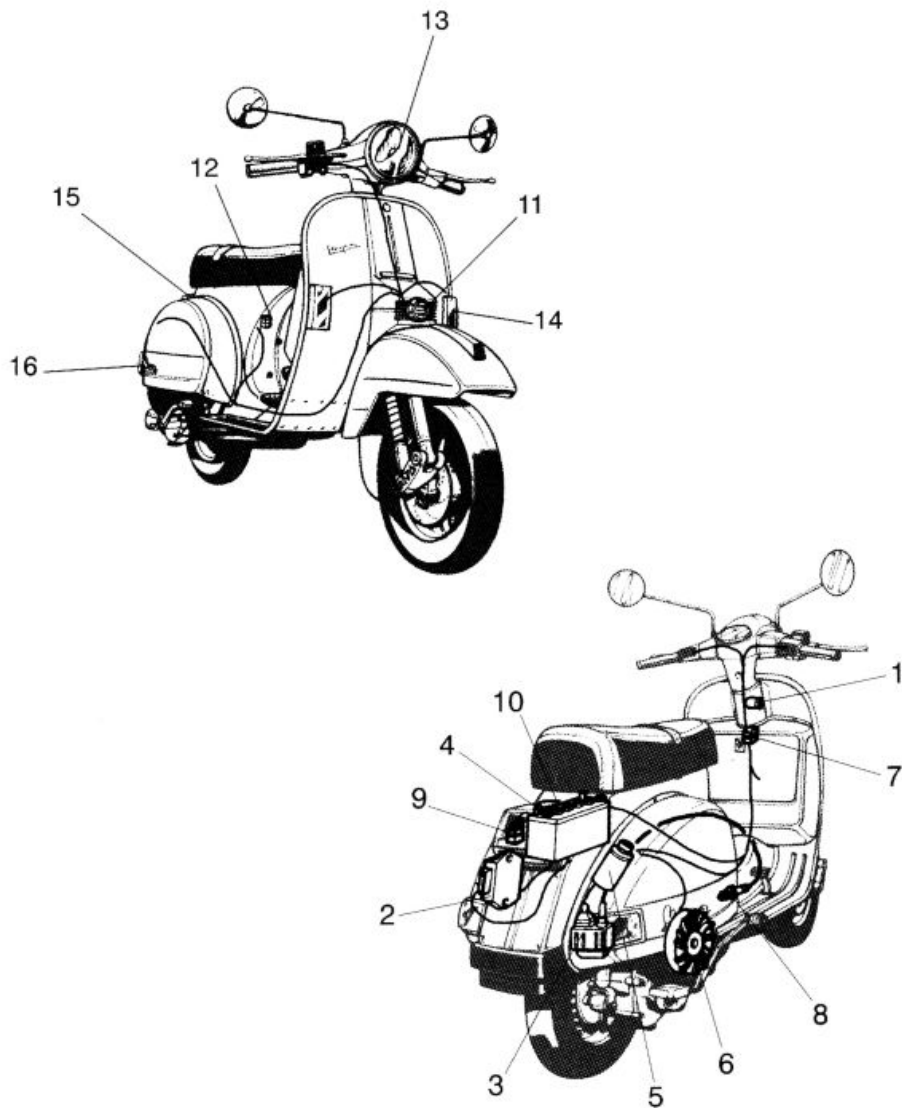


COMPONENTS ARRANGEMENT

	Specification	Desc./Quantity
1	Key switch	
2	Voltage regulator	
3	Electronic Control Unit (C.D.I.) with H.T coil	
4	Battery	12V - 9Ah
5	Starter motor	
6	Magneto flywheel	
7	Anti-repeating device	
8	Spark plug	
9	Remote starter switch	
10	Fuse	7.5 A
11	Horn	
12	Turn signals master-box	
13	Front headlight	
14	Front turn signal lights	
15	Taillight	
16	Rear turn signal lights	

Conceptual diagrams


Ignition

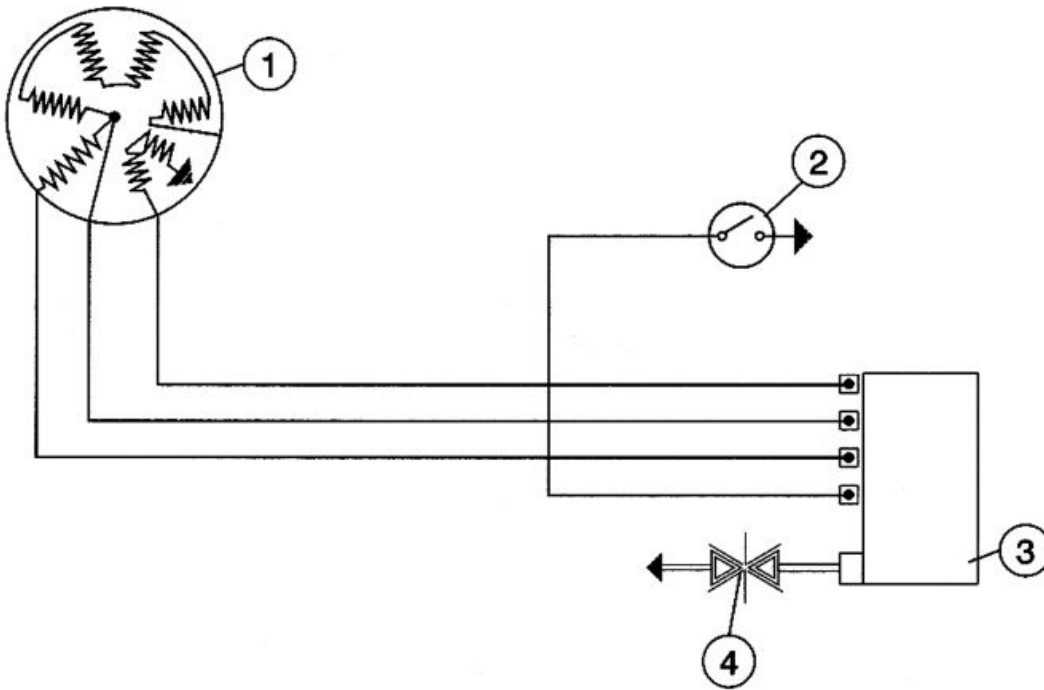

IGNITION

	Specification	Desc./Quantity
1	Magneto flywheel	
2	Key switch contacts	
3	Electronic Control Unit (C.D.I.) with H.T coil	
4	Spark plug	


Headlights and automatic starter section

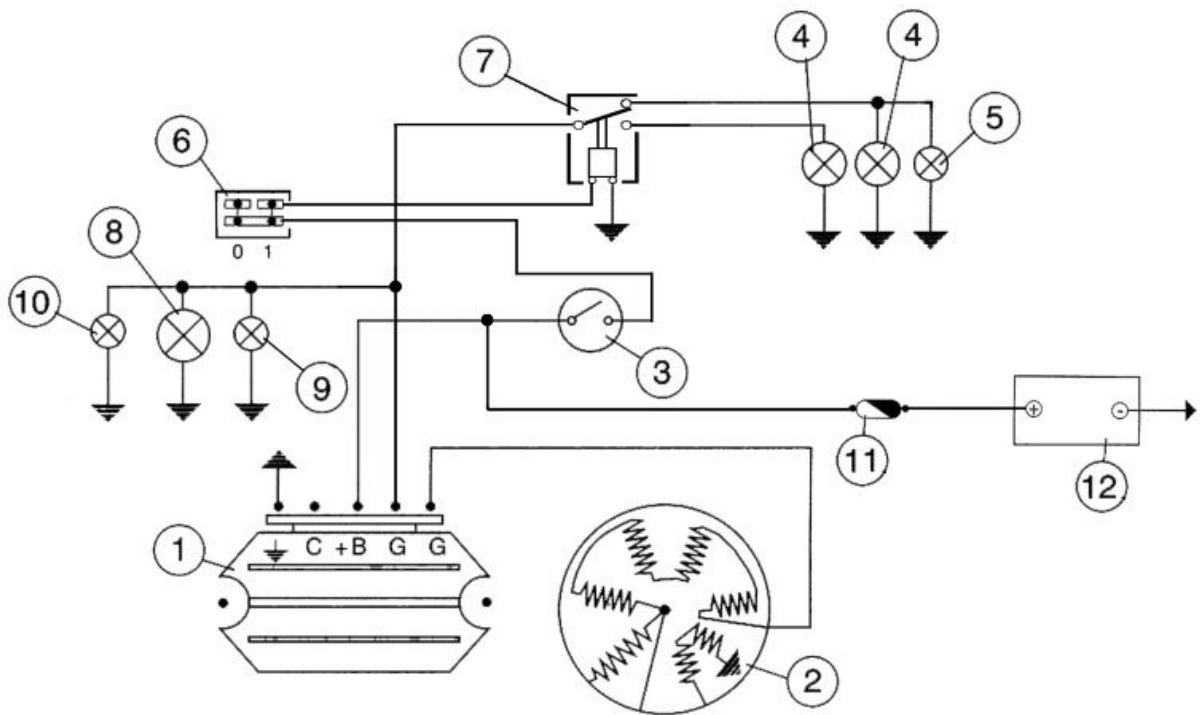

FANALERIA

	Specification	Desc./Quantity
1	Voltage regulator	
2	Magneto flywheel	
3	Key switch contacts	
4	Lampada proiettore	12V-55/60W
5	High-beam warning light	12V - 1.2W
6	Light switch	
7	Light remote control switch	
8	Rear side light bulb	12V - 5W
9	Instrument panel lighting bulb	12V-1,2W
10	Headlamp warning light	12V - 1,2W
11	Fuse 7,5A	
12	Battery	12V - 9Ah


Battery recharge and starting

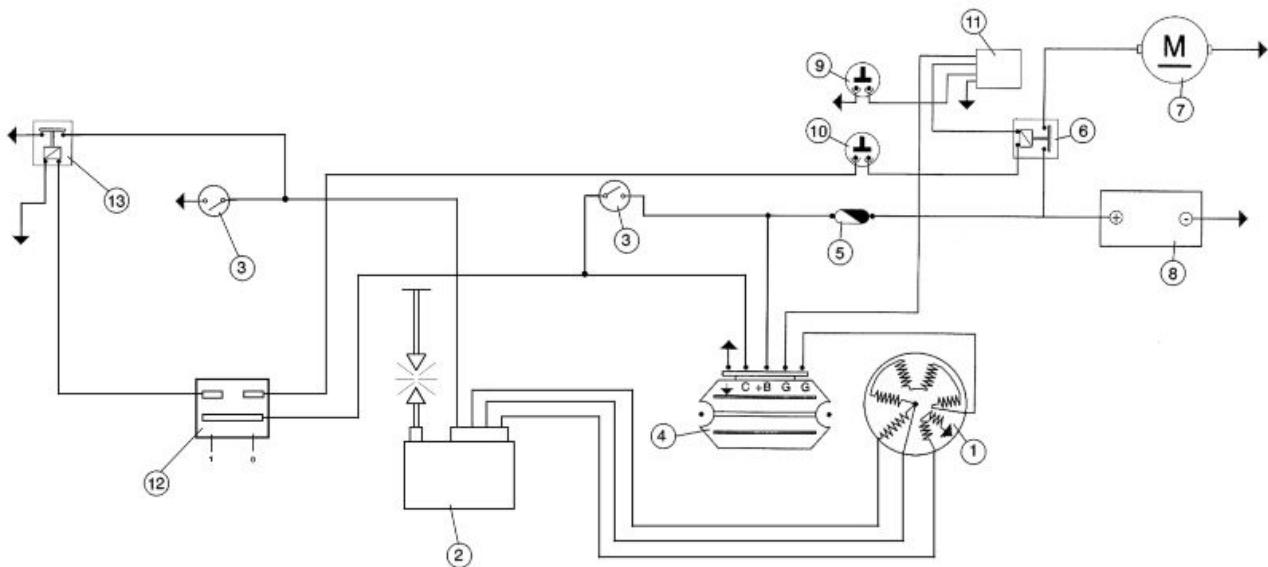

RICARICA BATTERIA E AVVIAMENTO

	Specification	Desc./Quantity
1	Magneto flywheel	
2	Electronic ignition device	
3	Key switch contacts	
4	Voltage regulator	
5	Fuse	7.5 A
6	Remote starter switch	
7	Starter motor	
8	Battery	12V - 9Ah
9	Enable button	
10	Start up button	
11	Anti-repeating device	
12	Engine stop switch	
13	Engine stop remote control switch	


Level indicators and enable signals section

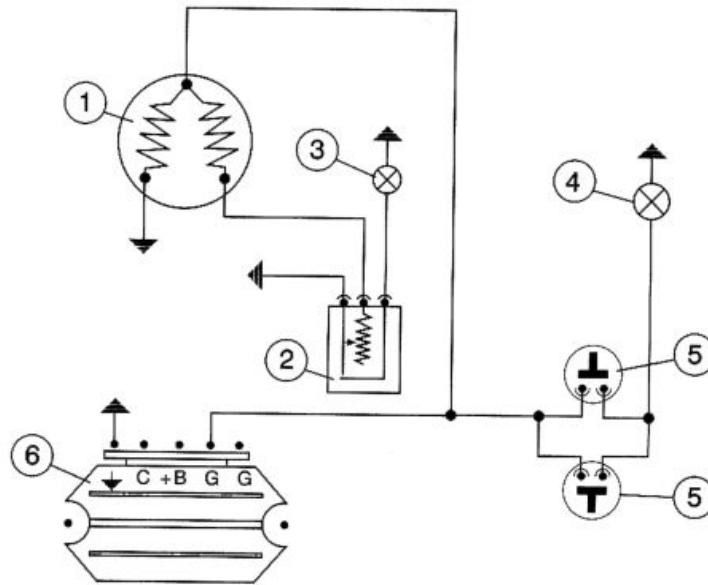

SAFETY SWITCHES AND LEVEL GAUGES

	Specification	Desc./Quantity
1	Fuel gauge	
2	Fuel level sending unit	
3	Reserve fuel light	12V-1,2W
4	Brake light bulbs	12V-10W
5	Stoplight switches	
6	Voltage regulator	


Turn signal lights

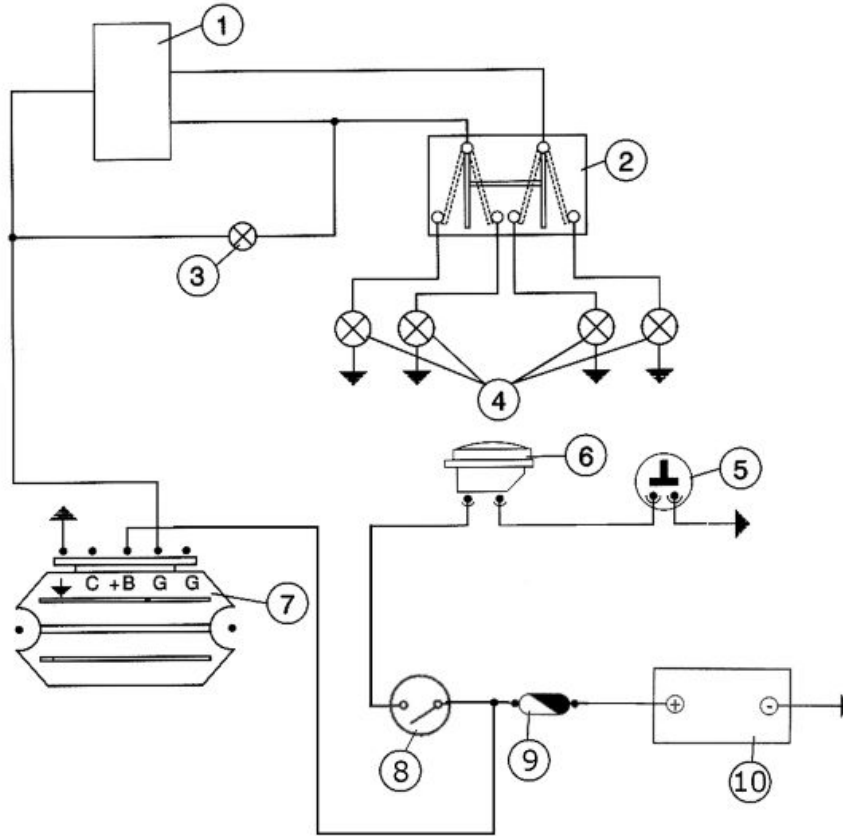

SIGNAL LIGHTS AND HORN

	Specification	Desc./Quantity
1	Turn signals master-box	
2	Indicators switch	
3	Turn signal warning light	12V - 1,2W
4	Turn signal light bulbs	12V - 21W
5	Horn button	
6	Horn	
7	Voltage regulator	
8	Key switch contacts	
9	Fuse 7,5A	
10	Battery	12V - 9Ah

Instruments and warning lights control board

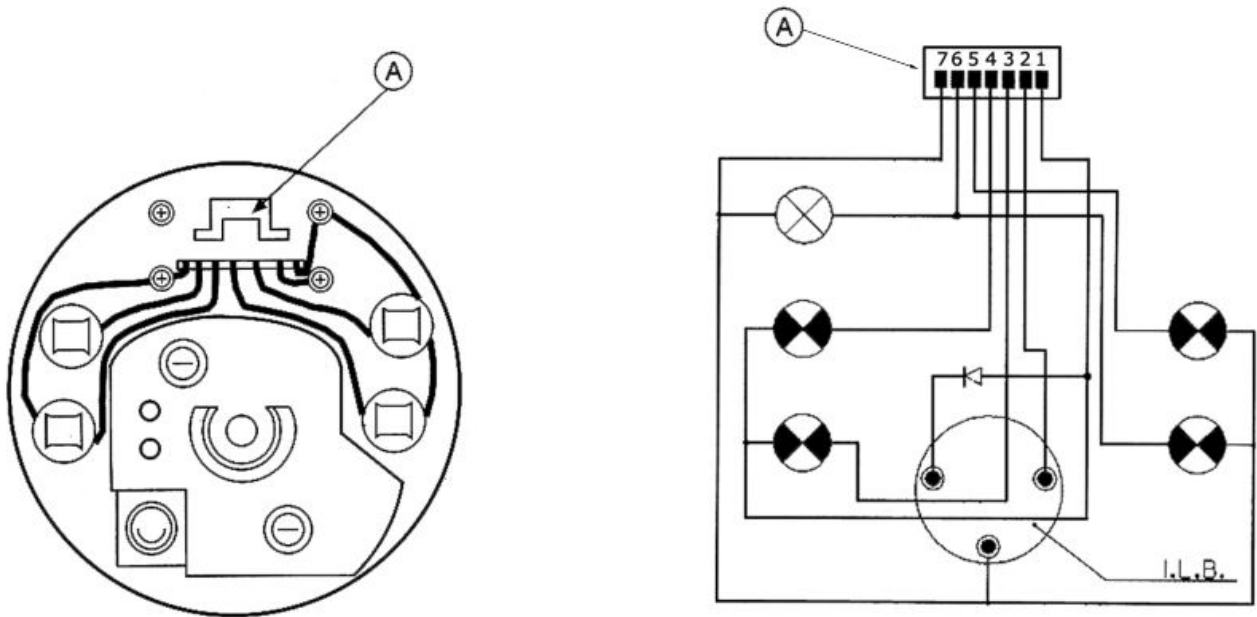

DASHBOARD LIGHTS AND GAUGES


	Specification	Desc./Quantity
1	+ Battery	
2	Fuel gauge	
3	Low fuel warning light	
4	Turn signals warning light	
5	High-beam warning light	
6	Side-lamps warning light	
7	Ground lead (-)	

Checks and inspections

Ignition circuit

All system checks requiring the detachment of cables (inspections involving ignition system wiring and devices) must be carried out with the engine off, so to avoid any possible damage to the ECU, which would require its replacement.

It is therefore important to follow the wire color coding when reattaching the cables (see figure)

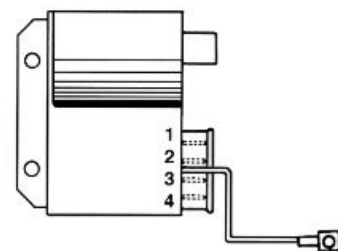

IGNITION CIRCUIT

	Specification	Desc./Quantity
1	WHITE	
2	RED	
3	GREEN	
4	GREEN	



Stator check

In the event of a malfunctioning of the ignition system, with no evident cause, it will be necessary to replace the ECU.

- Remember that all wires can only be detached with the engine off.
- If the ignition system is found to be working properly once the new ECU has been fitted, then the cause of the problem is obviously to be attributed to a defective CDI device.

- In the event that the ignition system is still malfunctioning, it will be necessary to check the generator and the stator components, as follows:

After an eye inspection of the connections, perform measurements on recharge coil and pick-up (see table) using the specified tester. If such readings do not match the stated values, proceed by replacing the stator and its components.

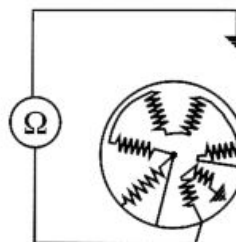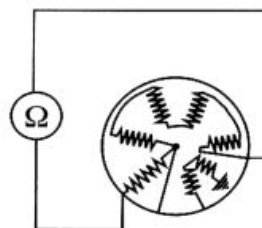**Specific tooling**

020331Y Digital multimeter

STATOR CHECK

	Specification	Desc./Quantity
1	RED - WHITE wire	90 ÷ 140 ohm
2	GREEN - WHITE wire	800 ÷ 1100 ohm

Voltage regulator check

Voltage regulator inspection

In the event of a suspected failure of the voltage regulator, carry out the following inspections:

Alternate current section

The failure of the alternate current section of the voltage regulator give rise, depending on the type of fault, to the following inconveniences:

1. Blown light bulbs (regulator open-circuited).
2. Failure of the lighting system and automatic choke device (regulator short-circuited).

Interventions

FAULT 1


At 5,000 rpm with the lights on, check the regulator voltage is between **12.3V** and **14.5V**. At **5,000 rpm** with the lights on, check the regulator voltage is between **13V** and **15V**. In the presence of a regulator voltage exceeding **15V**, replace the regulator as definitely faulty.

FAULT 2

- a) Check the correct current supply from the alternator: detach the regulator connector and attach the alternate current tester between the grey-blue wire terminal and earth. With the tester set onto alternate current, check the supplied voltage at **3,000 rpm** is between **25** and **30V**.
- b) If no faults are found, replace the voltage regulator.
- c) If the system is still malfunctioning after the regulator has been replaced, check the connections of the electrical system.

Direct current section The failure of the regulator's direct current section may cause, depending on the type of failure, the following inconveniences:

- 3) Blown fuse (regulator short-circuited), resulting in the catastrophic failure of the battery charging system.

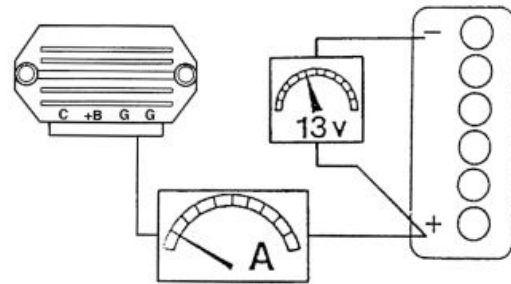

4) Battery recharge faulty (regulator open-circuited).

Interventions

FAULT 3

Replace the regulator, as certainly faulty, and the fuse.

FAULT 4

a) Attach an ammeter between the voltage regulator and the battery, and check that, at **3,000 rpm** and with the battery at **13V**, the current supplied is approximately **1.5 to 2 A**.

If the measured values are below this limit, then replace the voltage regulator.

b) If replacing the regulator does not solve the problem, check, using the recommended tester, for peaks in the alternate currents between the yellow wire connection and the red wire departing from the positive battery pole. The voltage supplied by the generator must be between **26 and 30V**, at **3,000 rpm** (this measurement must obviously be carried out with the battery disconnected).

Specific tooling

020331Y Digital multimeter


Starter motor

Bench tests to be performed on the electric starter motor

- 1) No-load test: the starter motor, unloaded, must absorb less than 10 A with a voltage supply > 11.7 V and must spin at more than 18,000 rpm.
- 2) Load test: load the starter motor so that the absorbed current is equal to 40 A, and the supplied voltage is 10 V. In such conditions, the output torque provided must 0.014 Nm, at a speed of no less than 10,000 rpm.
- 3) Breakaway test: with the rotor restrained and supplied voltage of 7 V, the absorbed current must not be higher than 100 A and the torque not less than 0.033 Nm.

N.B.

ALL THESE CHARACTERISTICS MUST BE MEASURED WITH CHARGED BATTERY AND AFTER RUNNING THE MOTOR FOR 30" IN THE CONDITIONS STATED IN 1.

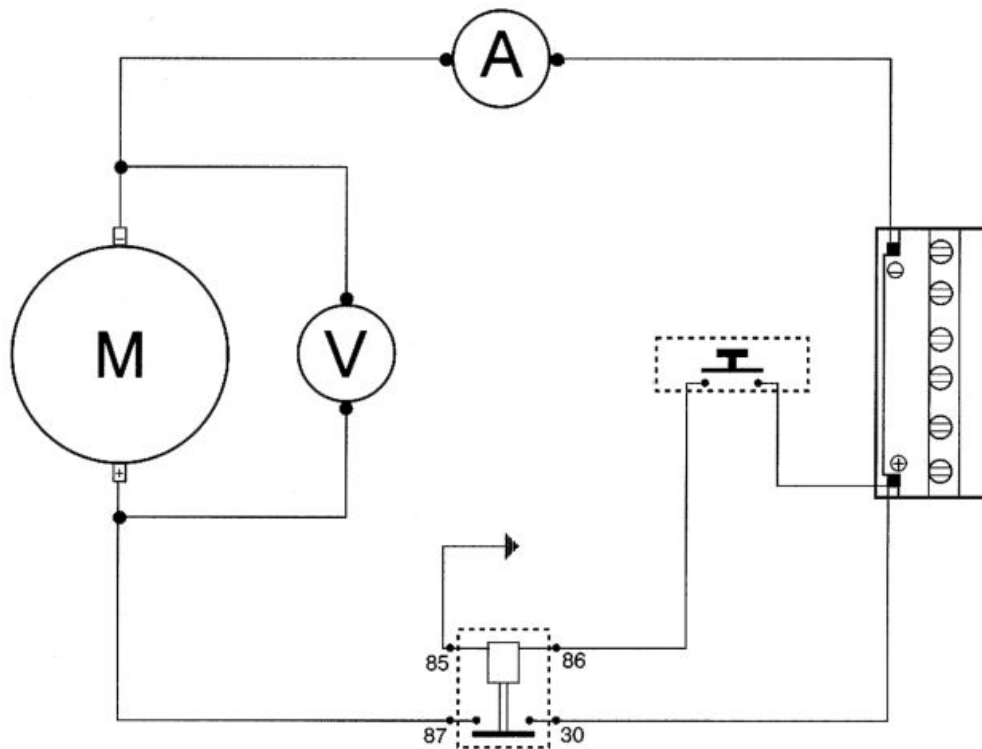

STARTER MOTOR

	Specification	Desc./Quantity
1	Nominal voltage	12V
2	Nominal power	0,15 kW
3	Direction of rotation	Clockwise
4	Engine connection	Via pinion and gear ring on crankshaft, transmission-side
5	Control	Pushbutton
6	Battery	12V - 9Ah

Fuses

The starter system and horn are protected by a 7.5A fuse, «A», located on the LHS of the battery tray. Before replacing a burst fuse, it is necessary to find the cause of the failure. Never attempt to close the circuit with any material other than the fuse.



CAUTION



BEFORE REPLACING A BLOWN FUSE, FIND AND SOLVE THE FAILURE THAT CAUSED IT TO BLOW. NEVER TRY TO REPLACE THE FUSE WITH ANY OTHER MATERIAL (E.G., A PIECE OF ELECTRIC WIRE).

CAUTION



MODIFICATIONS OR REPAIRS TO THE ELECTRICAL SYSTEM, PERFORMED INCORRECTLY OR WITHOUT STRICT

ATTENTION TO THE TECHNICAL SPECIFICATIONS OF THE SYSTEM, CAN CAUSE ERRORS IN FUNCTIONING AND RISK OF FIRE.

Dry-charge battery

BATTERY START UP WITH DRY CHARGE

- Remove the battery ventilation duct closing cap and remove the caps from the single elements.
- Fill the battery with electrolyte having a density of 1.270+/-0.01 Kg/l (corresponding to 31+/-1 BÃ©) with minimum ambient temperature of 59Å°F (15Å°C), up to the top level indicated on the single block.
- Slightly tilt the battery to remove any air bubbles formed during the filling.
- Place the caps on the filling holes of the single elements without tightening them and let the battery stand. During this phase, the battery undergoes a gasification phenomenon and temperature rises.
- Let it stand until ambient temperature is reached again (this phase may require up to 60 minutes).
- Slightly tilt the battery to favour the removal of any air bubbles, then restore the levels using the same electrolyte.

Note: This is the last time that electrolyte can be added. Future top ups must be made using only distilled water;

- Within 24 hours, refill as follows:
- Connect the battery charger terminals according to the right polarity;
- Using the battery charger dwg. 020333Y and/or dwg. 020334Y, select the battery capacity;
- If the battery charger is not available, charge the battery with a constant current of 1/10 of the rated capacity (for example for a battery with rated capacity of 9Ah, the charge current must be 0.9-1.0A), for approx. 4-6 hours.

Note: Batteries stored for a long time can require longer times. Battery chargers dwg. 020333Y and dwg. 020334Y have an automatic protection that stops the recharge after 12 hours to prevent overheating the battery. In this case, the turning on of the green led does not indicate the end of the charge but the start of the safety system.

- Let the battery stand with open circuit for approx. 4-6 hours, then check the voltage using a normal tester.
- If the open circuit voltage is more or equal to 12.6V, the battery charge is good. Slightly tilt the battery to eliminate any air bubbles formed while recharging.
- Check the electrolyte level again, restore if required up to the tol reference using distilled water, tighten the caps of the single elements and install it on the vehicle.
- If lower voltages are detected, recharge the battery for 4-6 hours more as described above.

Note: With battery charger dwg. 020334Y you can check the battery charge level by the function Check. The value shown on the display must be higher than that indicated in the table; if not, recharge as described above.


INDEX OF TOPICS

ENGINE FROM VEHICLE

ENG VE



Exhaust assy. Removal

- Remove the two fasteners, exhaust pipe-manifold and then the bolt fixing the exhaust to the engine.

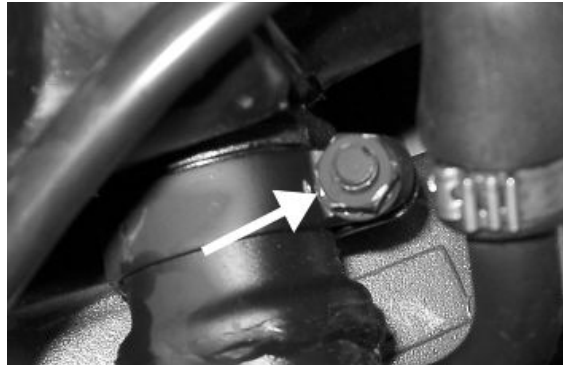

Removal of the engine from the vehicle

- Remove the exhaust assy.
- Remove the rear wheel.
- Detach the rear brake cable.
- Detach the electrical wires.
- Detach the gear shifter cables.
- Remove the throttle and choke cables.
- Detach the oil and petrol hoses.
- Remove the engine-frame bolt shown in the figure.

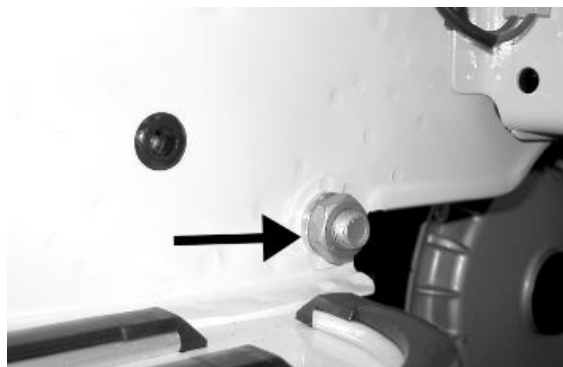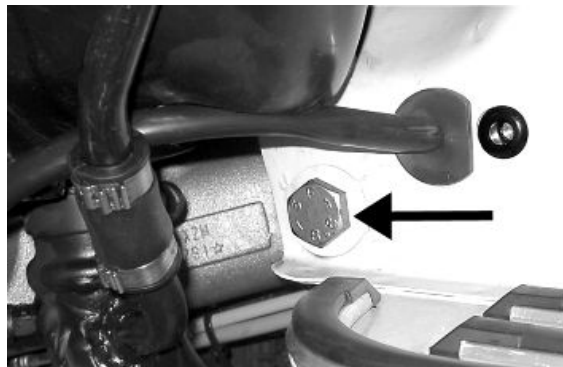

- Remove the rear shock-absorber fixing nut and hence the bolt.
- For the reassembly, follow the above operations in reverse order, using the prescribed tightening torques.

CAUTION

WHEN INSTALLING THE BATTERY, ATTACH THE POSITIVE LEAD FIRST AND THEN THE NEGATIVE LEAD.

WARNING


Wear safety goggles when using hitting tools.

WARNING

Be very careful when handling fuel.

Locking torques (N*m)

Engine - frame bolt * 61 ÷ 75 Shock-absorber - engine bolt* 13 ÷ 23

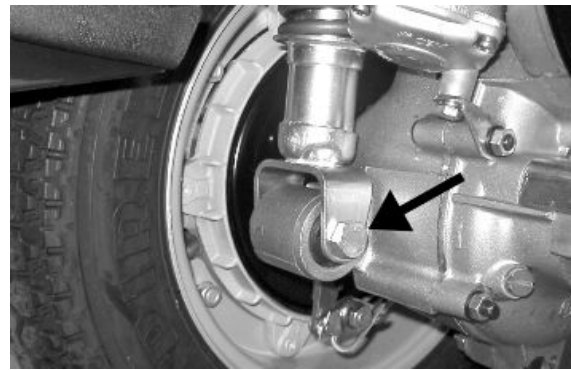

INDEX OF TOPICS


ENGINE

ENG


Flywheel cover

Cooling hood

- Remove the three fixing screws shown in the figure and the cooling hood.

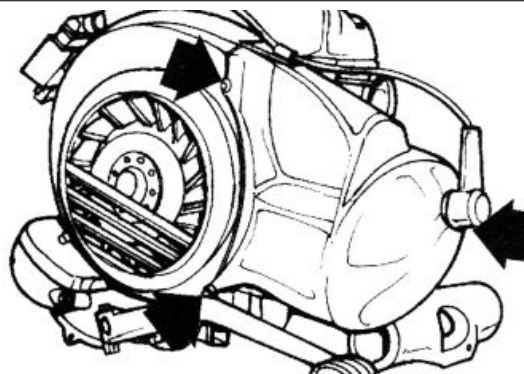


-
- Remove the fixing screws shown and hence detach the volute and the gear shifter cover.
 - Remove the kick-start lever after having detached the lower fastener.

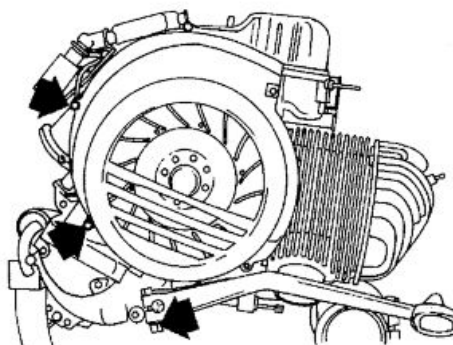


Removing the stator

- Remove the three screws shown in the figure.
- Remove the stator.

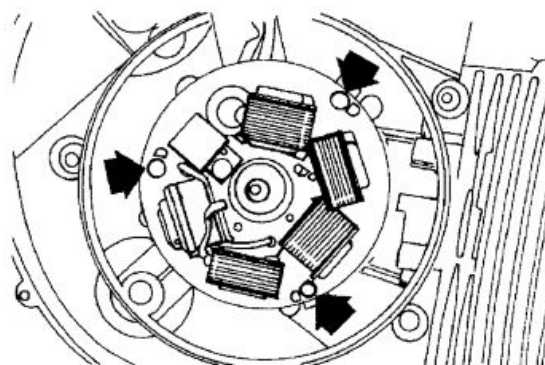

Refitting the stator


In order to guarantee the correct engine timing pay attention to the position of the stator, as shown in the figure.

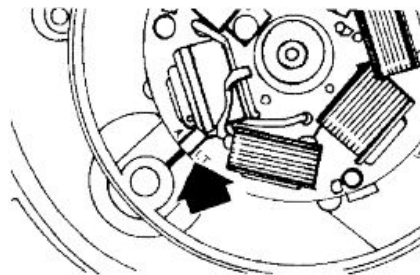

Flywheel and starting


Removing the starter motor

– Remove the two screws and detach the drive box from the starter motor.

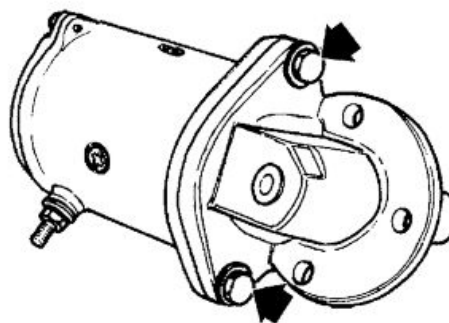

– With the aid of a hacksaw, abrade the pinion head ring.


– Using two screwdrivers, detach the cap.

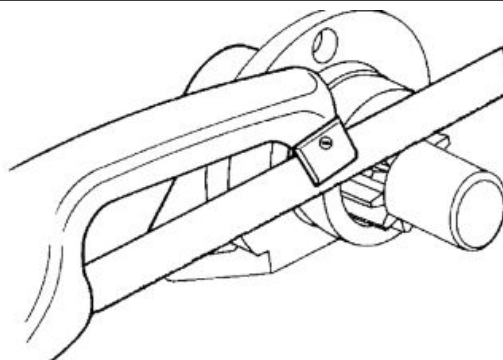


– Remove the retaining ring shown by the arrow in the figure and remove the pinion components.

WARNING


THE PACKING ON THE MATING SURFACE MUST ALWAYS BE REPLACED WITH A NEW ONE, USING «LOC-TITE».

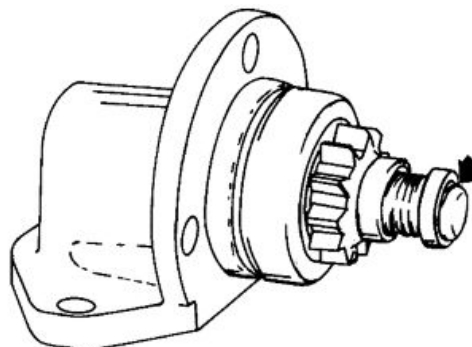

- Using pliers for internal split rings, remove the retaining ring shown.
- Lift the assembly by the end of the shaft and remove the shaft by hitting the housing with a mallet.

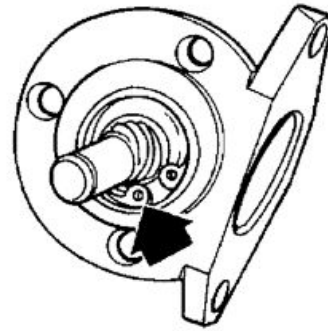

- The removal of the bearing may be carried out by pushing in the direction shown in the figure. This will also result in the removal of the drive gear.
- In the event that the bearing remains on drive gear, use the special extractor.
- After heating the drive gear with the air heater, refit the drive shaft with all the components previously removed.
- Refit the remaining components following the above operations in the reverse order.

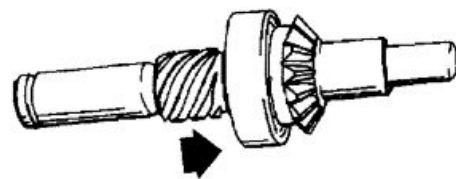

Specific tooling


001467Y Extractor for bearings for holes

001467Y021 Extraction pliers for \varnothing 11 mm bearings

020151Y Air heater

020150Y Air heater support


- Position a new cap onto the pinion and round the edges using the special tool to safely lock the assembly in a vice.
- Rotate the assembly by a quarter turn and proceed by rounding the remaining section of the caps circumference.

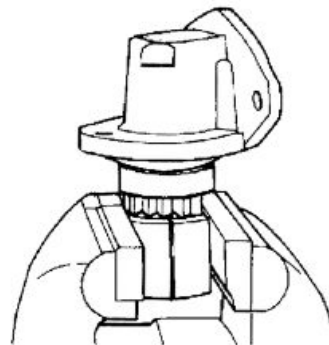


Specific tooling

020057Y Calking tool

- After removing the rear cover, release the brush clips connected to the magnetic fields.
- Remove the brush plate. Detach the old brushes and weld a new set of brushes, hence replace the brush plate.

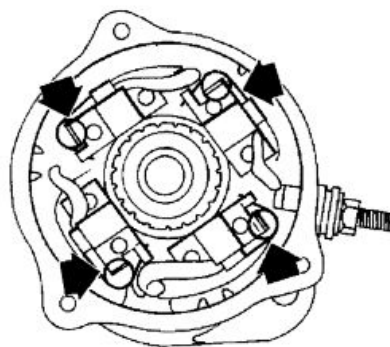

- After removing the rear cover, detach the drive gear retaining pin and remove the gear.
- Refit the assembly components in the reverse order.

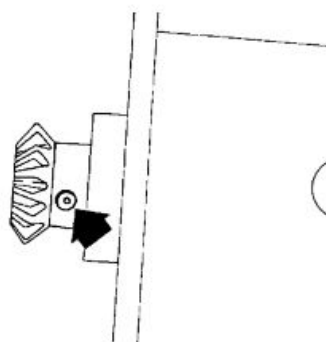


Removing the flywheel magneto

- Retain the flywheel using the special tool, hence remove the lock nut.

Specific tooling


020095Y Flywheel retaining tool

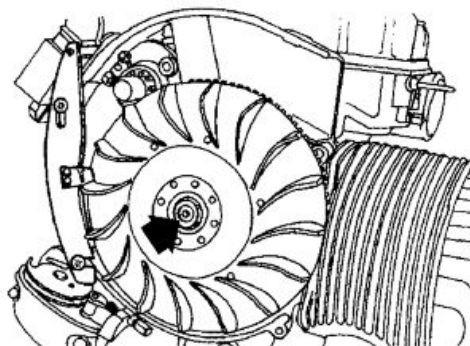

- Remove the flywheel retaining tool.
- Extract the flywheel using the special extractor.

Specific tooling

008564Y Flywheel extractor

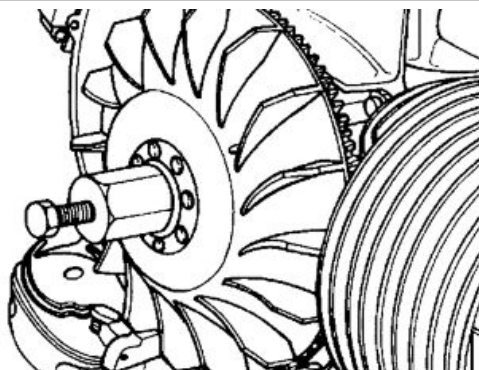

Refitting the flywheel magneto

- Refit the components following above operations in the reverse order.
- After refitting the flywheel, apply grease on the thread.


Recommended products

AGIP GREASE PV2 Grease for steering bearings, bolt seatings for swinging arms and faying surface of driven pulley spring (only pulley side)

Soap-based lithium and zinc oxide grease containing NLGI 2; ISO-L-XBCIB2

Locking torques (N*m)


Flywheel fixing nut 60 ÷ 65

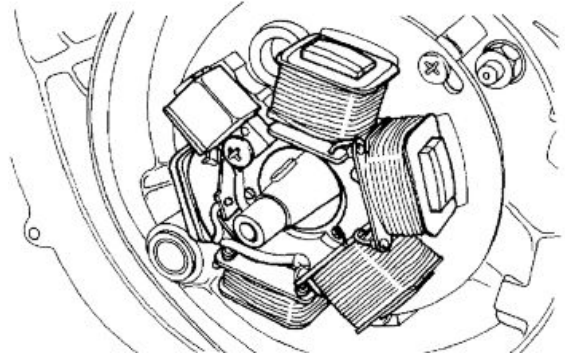

Cylinder assy. and timing system


Removing the cylinder head

- Loosen the four nuts and remove the cylinder head.

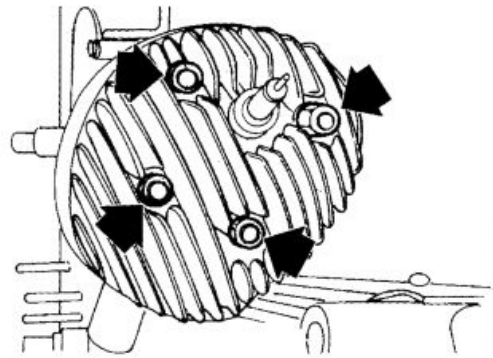


Removing the cylinder - piston assy.

After removing the cylinder detach the wrist pin retaining rings and hence remove the piston.

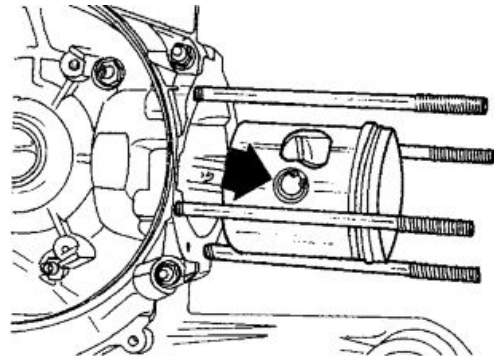

Inspecting the small end

- Always fit a roller cage of the type prescribed in the assembly clearance tables.
- The arrow in the figure shows the location of the connecting rod's identification marking.

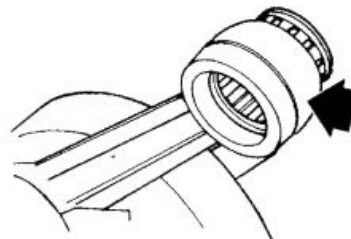

Refitting the cylinder

- Refit the cylinder assembly components following the removal procedure in the reverse order, paying particular attention to positioning the piston with the arrow marking on the crown pointing toward the exhaust port.

Locking torques (N*m)

Head fixing nuts 16 ÷ 26


Crankcase - crankshaft

Splitting the crankcase halves

- Remove the twelve fasteners and split the two crankcase halves carefully using a plastic or hard rubber mallet.

CAUTION

WITH A RUBBER BAND TIE THE CONNECTING ROD TO THE TWO STUDS ON THE CLUTCH-SIDE, SO TO AVOID ANY ACCIDENTAL DAMAGE DURING THIS PHASE AND THE FOLLOWING ONES.

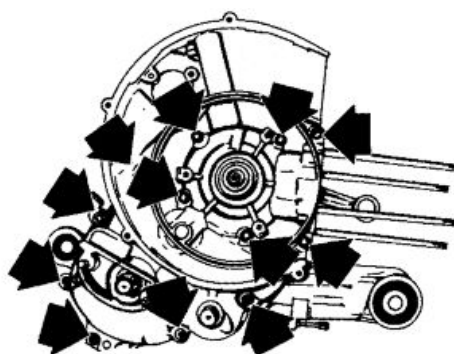


Removing the crankshaft

- Install the special tool as shown and extract the crankshaft.


Specific tooling

008886Y Crankshaft extractor

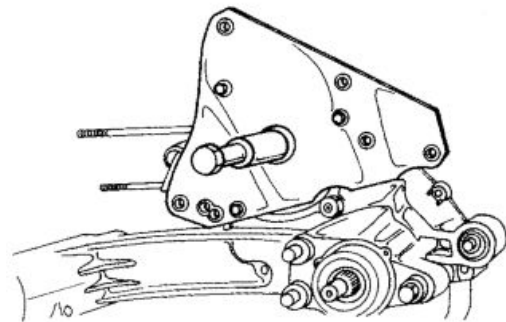

Removing the crankshaft bearings


- After removing the oil seal, using pliers for internal split rings, remove the bearing retaining ring shown.
- From the side opposite that shown in the figure and with the aid of a flat head puncher, extract the bearing.

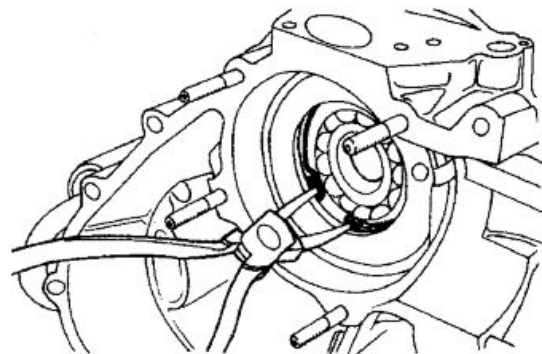


- Using the special extractor, remove the roller bearing from the crankshaft.

Specific tooling

004499Y Camshaft bearing extractor

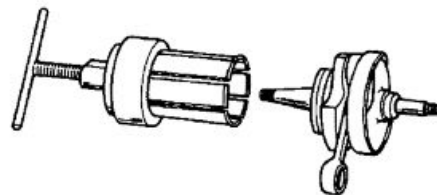


- Using the special extractor, remove the roller bearing from the crankcase.

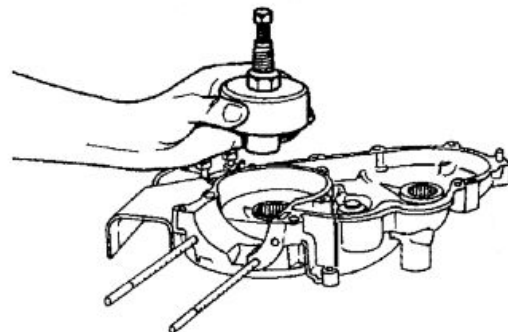

Refitting the crankshaft bearings

- Heat the bearing housing with the air heater positioned onto its support.
- After heating the crankcase, position the bearing using a length of tube pushing directly on the bearing's outer ring.
- Position the bearing's retaining ring, hence proceed by refitting the sealing ring.

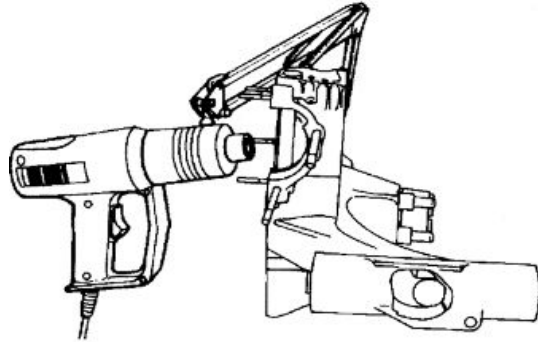


Specific tooling


020151Y Air heater

020150Y Air heater support

- Heat up the crankcase, as already done for the clutch-side half-crankcase, focusing exclusively on the bearing housing.
- Position the bearing using a length of tube pushing directly on the bearing's outer ring.

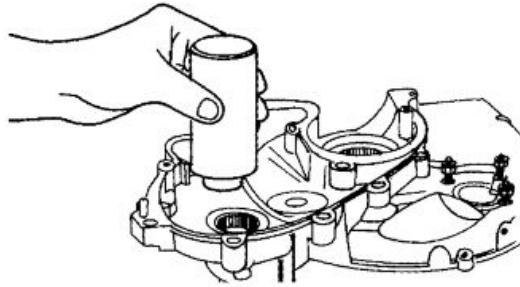

- Position the crankshaft onto the special support.
- Install the special spacer as shown in the figure and, using a length of tube of adequate diameter, push the bearing until the inner ring (heated up in oil at 248°F or 120°C) comes into contact with the spacer.
- Once the assembly is completed, remove the spacer.

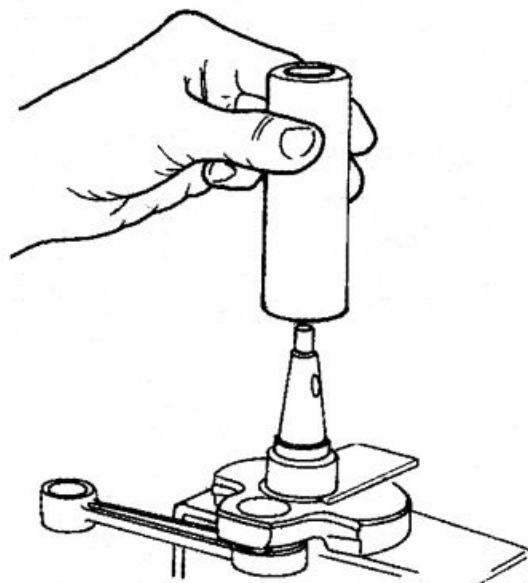

Specific tooling

020265Y Bearing fitting base

060007Y Crankcase bearing spacer

Lubrication

Conceptual diagrams

Automatic fuel mixer

The system is fed by oil contained in a separate tank.


The vehicle is equipped with two distinct tanks, each with individual hoses, for fuel and lubricant.

The fuel tank must be filled with petrol, no petrol-oil mixture of any kind, while for the lubricant tank Selenia Hi Scooter 2T oil should be used. The oil level may be checked through the transparent tube (see figure, 3) protruding from the tank.

Fuel is fed to the carburetor by gravity; oil is supplied through pump «p» whose stroke is controlled by the radial position of a shoe, on the inclined plane of the pump, driven by the throttle cable via a lever. This means that for any given position of the throttle twist-grip the location of the shoe varies, thus varying the pump stroke hence suggesting that the oil mass flow is a function of both engine speed and throttle opening.

Important: whenever the mixer device has been removed, overhauled or refitted, there may be no oil inside the ducts.

To allow the mixer to safely fill these ducts with oil, it is suggested that the fuel tank (1 in the figure) is first refilled with approx. 3 l of mixture containing 2% of SELENIA HI SCOOTER 2T oil. Once this first quantitative has been exhausted, any further refill must obviously consist of petrol only. The pump assembly constitutes, essentially, of a pumping element and its sliding housing, and is driven by a gear transmission (crankshaft/mixer shaft ratio: 1/85). The pumping element "P" is also provided, on its shaft, with a flatten surface which, because of the rotation, alternately opens and closes the oil inlet (5) and outlet (6) ducts, with the latter being equipped with a valve consisting of a sphere and spring. By such means the pump alternately performs the two phases of oil intake (A in the figure) and supply to the fuel diffuser (8 in the figure), where the fuel mixture is formed and fed into the engine.

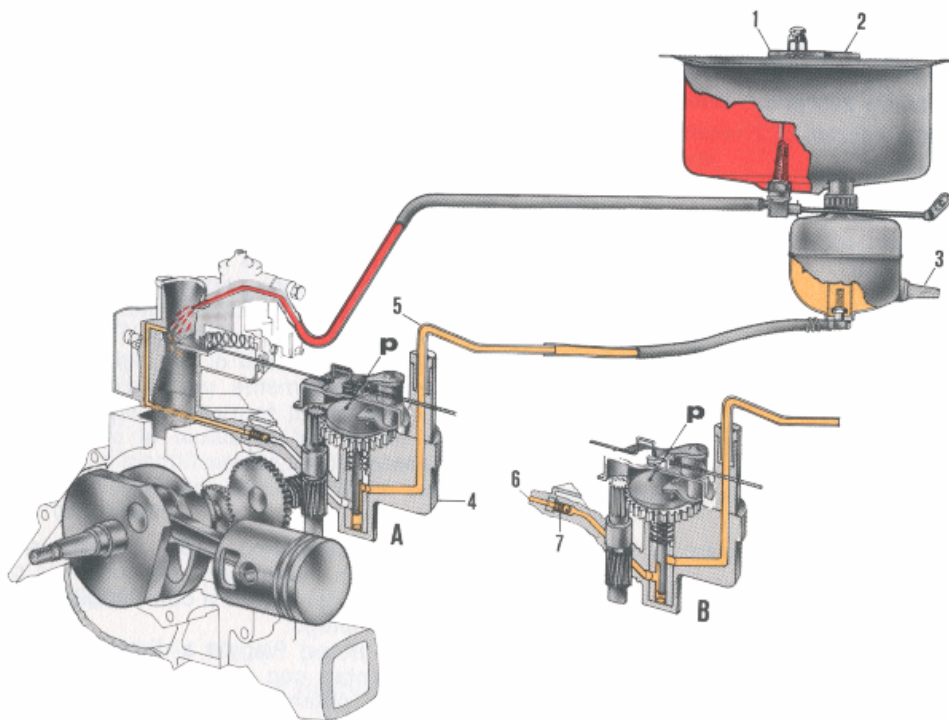


CONCEPTUAL DIAGRAMS


Specification	Desc./Quantity
Fuel tank filler cap	
Oil tank filler cap	
Oil level gauge	
SEPARATE LUBRICATION device box	
Oil inlet hose	
Oil outlet hose	
Oil outlet valve	
A	Inlet phase
B	Outlet phase

Oil pump


- Remove the carburettor box.
- Remove the mixer drive shaft from its housing.

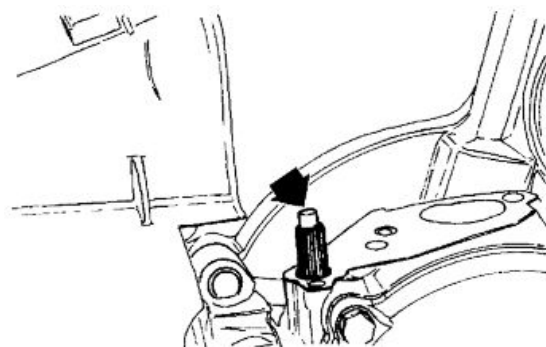


-
- Remove the 3 fixing screws and the mixer cover with the lever.

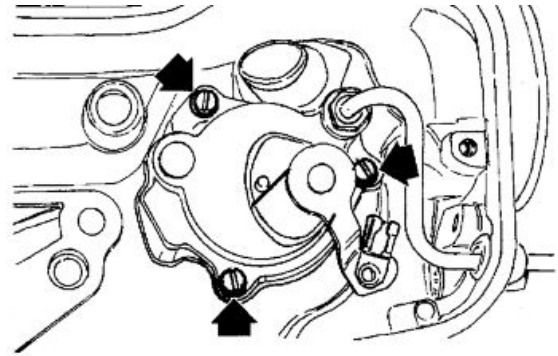


-
- Remove the mixer pumping element.

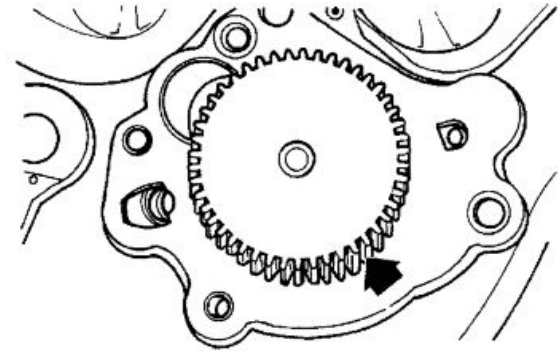

-
- Remove the mixer fixing screw and then use pliers for internal split rings to remove the mixer body.

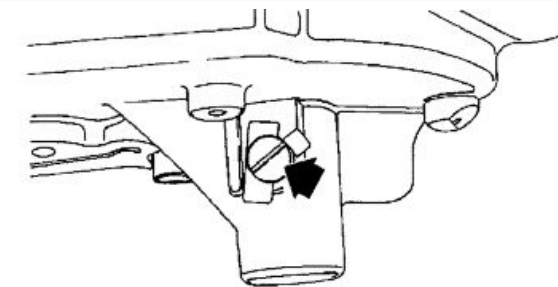

-
- Refit the components following the removal procedure in the reverse order, paying attention in positioning the pump body correctly in its housing, so to be able to easily insert the retaining screw.

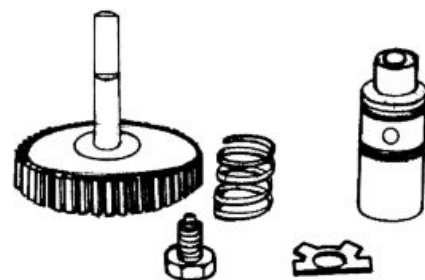


See also

[Removing the carburettor](#)


Fuel supply

Removing the carburettor


- Remove the two fixing screws and the carburetor cover.

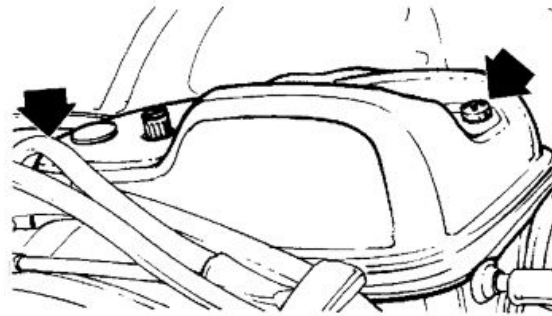


- Remove the fasteners and the air filter.

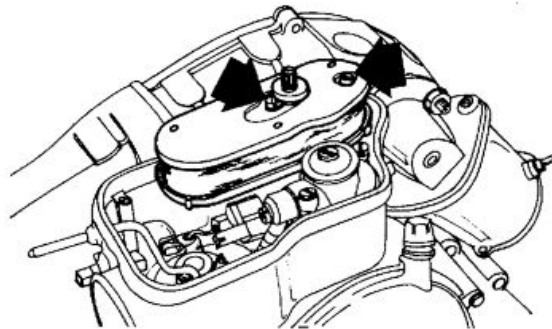


- After removing the air filter, loosen the two 8mm Allen screws and hence remove the carburetor.

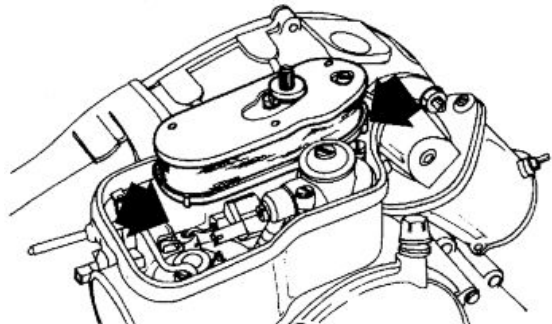


- Loosen the fixing screw and remove the carburetor body.

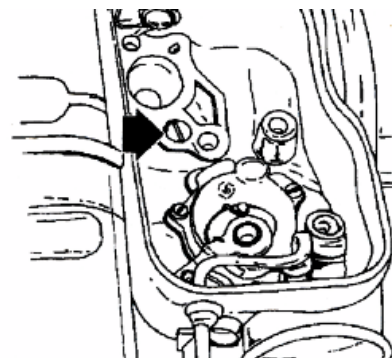


-
- Remove the main and idle jets and blow with compressed air.

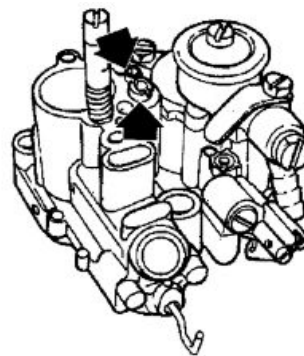


-
- Loosen the fixing screw and remove the float bowl.

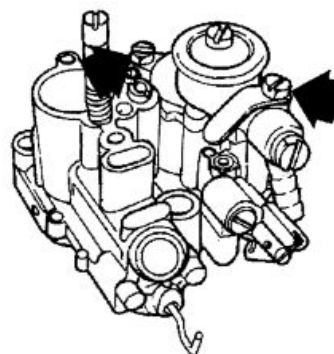


-
- Remove the starter jet and blow with compressed air.

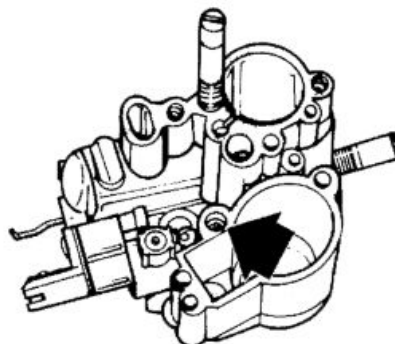

-
- Remove the float pin to release the float, and hence the conical needle.

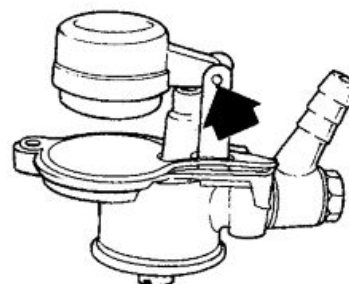

-
- Check the starter choke valve; replace if worn.

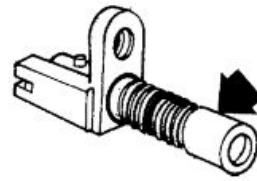


Refitting the carburettor

-
- Refit the components replacing all seals.


WARNING

PETROL IS HIGHLY EXPLOSIVE ALWAYS REPLACE THE GASKETS TO AVOID PETROL LEAKS

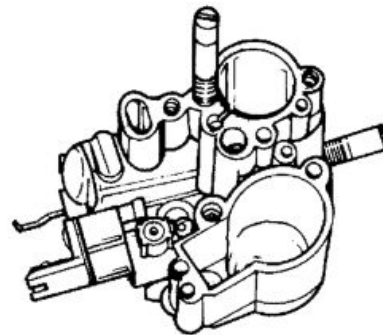


Manual Gear Shifter


-
- Remove the fasteners and the gear shifter.

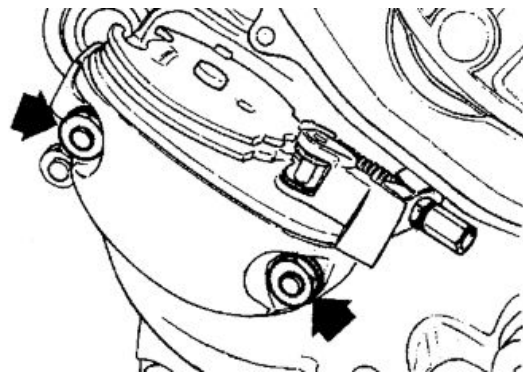


From the side opposite to that shown in the figure and with the aid of a puncher, remove the conical pin and extract the gear shifting lever.

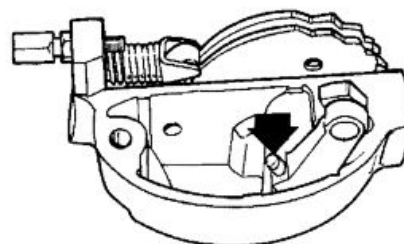


- Split the two half-crankcases.
- Using pliers for external split rings, remove the retaining ring and extract the gears.

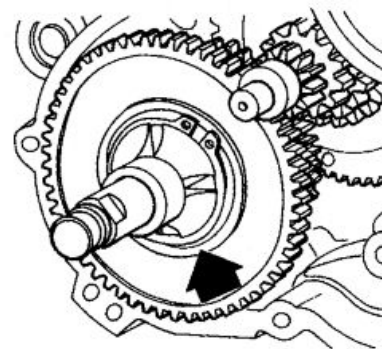


- Using a plastic mallet, remove the shaft.

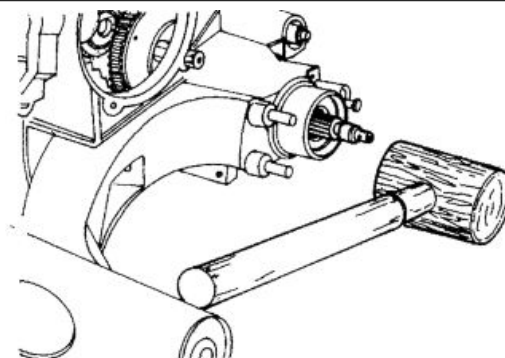


- Remove the multiple gear shaft lock nut.

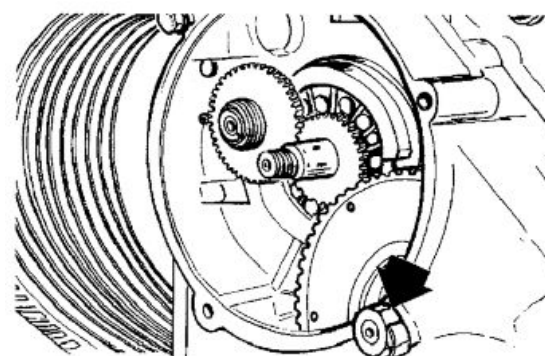


- Remove the multiple gear shaft using a mallet from the side opposite to that shown in the figure. Do not let the 21 rollers composing the bearing fall onto the ground.

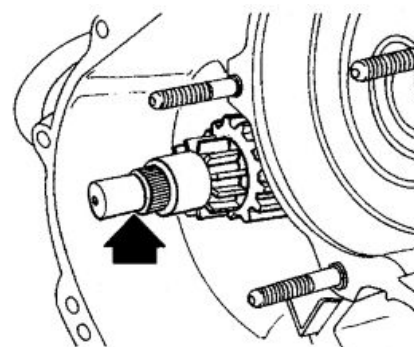

- After removing the internal oil seal and the external dust cover, remove the bearing retaining ring through the use of internal split ring pliers.
- Extract the roller bearing using a flat head puncher from the side opposite to that shown in the figure.

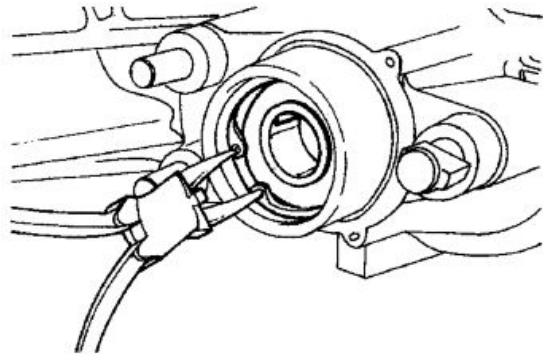

- After removing the retaining washer shown in the figure, remove the fastener underneath it, hence extract the even tension gear.
- Remove the rivet head and replace any faulty component.
- Refit the components using new rivets.

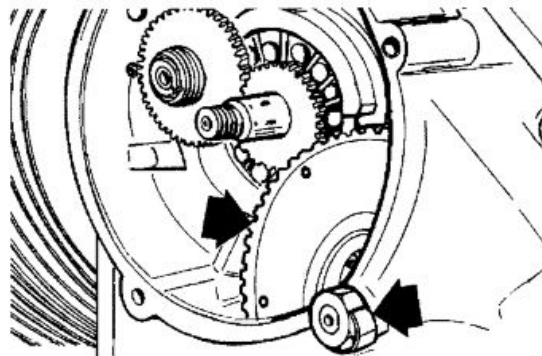


- Replace the trunnion if worn.

CAUTION


THE TRUNNION BUSHING HAS A LHS THREAD.

Locking torques (N*m)


Gear-box trunnion 15 ÷ 18

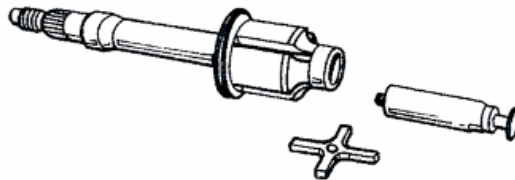

- Refit the trunnion «A» onto the gear shifter shaft «B» and tighten it to the prescribed torque (LHS thread).
- Prepare a tool «D» as shown in the figure and insert it into the groove machined on the shaft.
- Align the tool's protrusion «C» with the edge «F» of the bushing to be rounded.
- Using a hammer and a length of tube (internal diameter 17.5 mm), round the threaded end of the bushing on the trunnion.

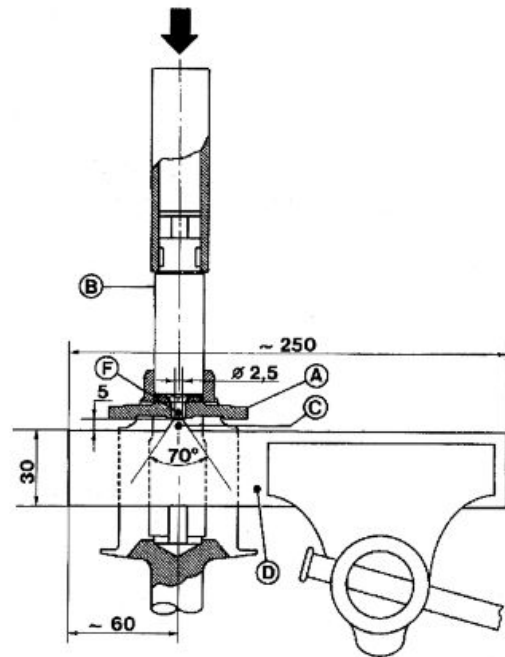

- Install the multiple gear onto its housing carefully positioning the 21 rollers, using the recommended grease to keep them in place during the reassembly.
- With the refitting operation concluded, tighten the shaft lock nut to the prescribed torque.

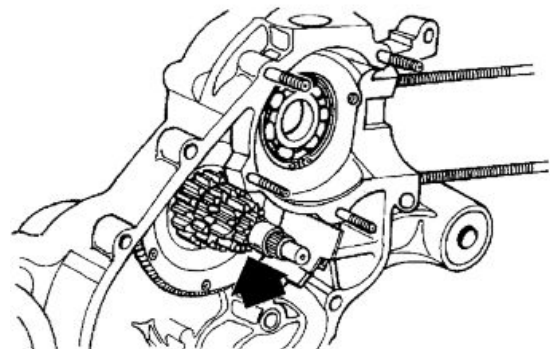

Recommended products


AGIP GREASE MU3 Grease for odometer transmission gear case

Soap-based lithium grease with NLGI 3; ISO-L-XBCHA3, DIN K3K-20

Locking torques (N*m)

Multi-gear pinion nut 30 ÷ 35

- Before proceeding by refitting the shifter shaft, it is necessary to check the axial play of the gear assembly.
- Install the gears onto the shaft and check the end play with the special feeler gauge.

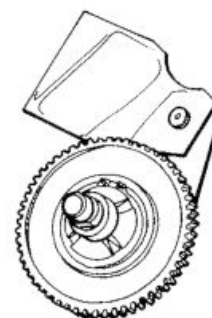

Specific tooling


060824Y Inspection probe

Characteristic


Axial play

0,20 ÷ 0,40 mm


- Using the special tool, proceed by removing the gear shaft.

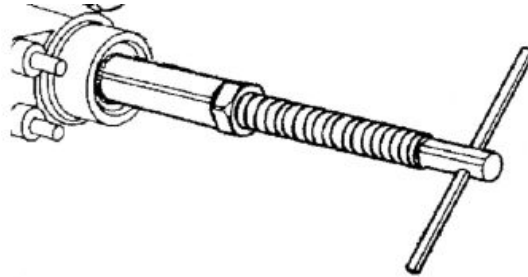**Specific tooling****008119Y009 Tube to assemble shafts and axles****See also**[Splitting the crankcase halves](#)**Clutch**

- Remove the 3 fixing screws and the clutch cover.

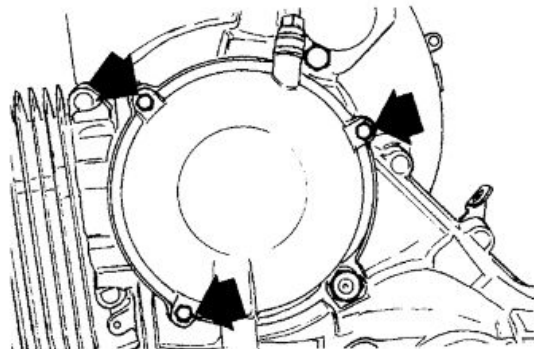

- With the aid of a screwdriver, remove the balance screw.

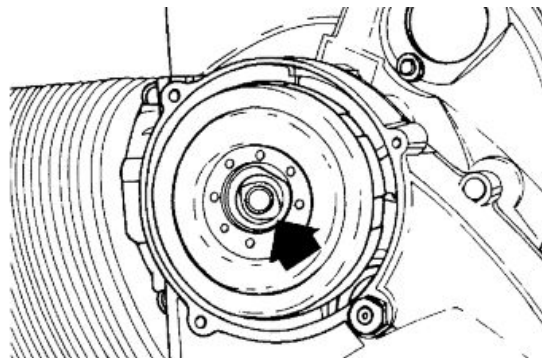


- Restrain the clutch using the special tool, as shown in the figure, then remove the locknut and the clutch assembly.

CAUTION


DURING THE OPERATIONS OF REMOVAL, DO NOT LET THE WOODRUFF KEY FALL INSIDE THE ENGINE.

Specific tooling

001729Y Clutch retaining tool

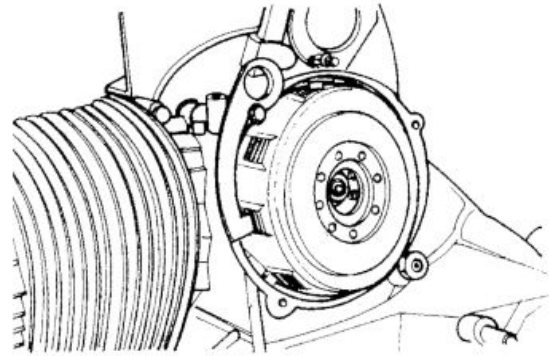


- Remove the mixer drive gear from its housing.

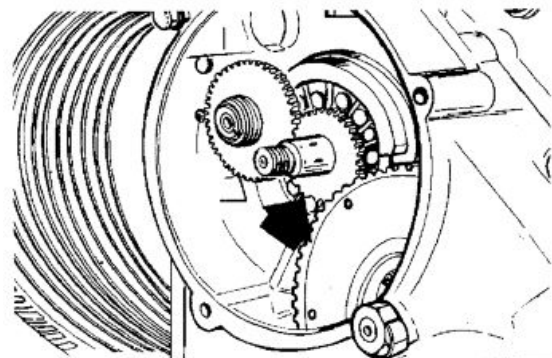


- Using the special tool, remove the clutch discs.

Specific tooling


020322Y Clutch removing/fitting tool

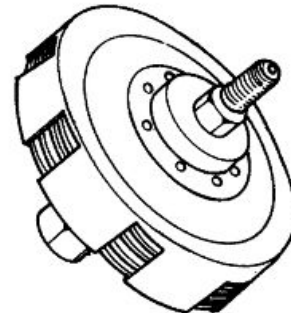


- Check the conditions of all components and the camber of the metal discs. A camber smaller than the prescribed one may cause slippage.
- Refit the clutch assembly components inverting the order followed for the disassembly.

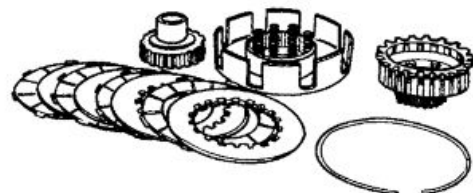


-
- Place the mixer drive gear with the rounded edge facing the crankcase bearing.

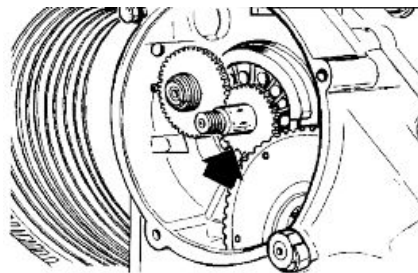

-
- Correctly position the woodruff key inside its housing.

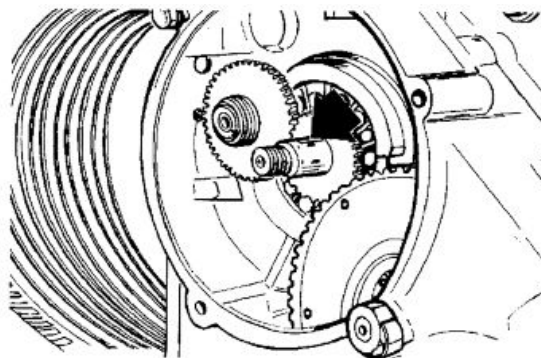

-
- Refit the clutch assembly onto the engine and tighten the locknut using the special retainer.
 - Refit the remaining components in following the procedures carried out from their removal in the reverse order.

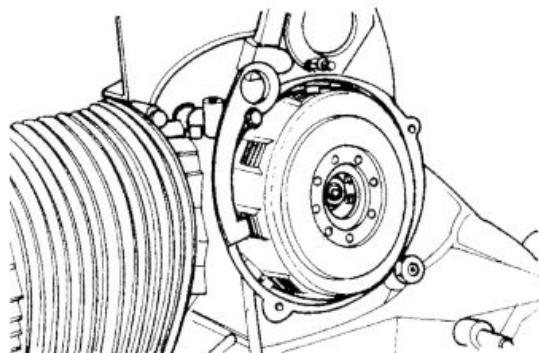

Specific tooling

001729Y Clutch retaining tool

Locking torques (N*m)

Clutch assy. fixing nut 40 ÷ 45

INDEX OF TOPICS

SUSPENSIONS

SUSP


Front

Front wheel hub overhaul


After removing the front brake calliper, remove the plastic cap shown in the figure.

Remove the pin and the locknut.

It is now possible to remove the wheel axle nut.

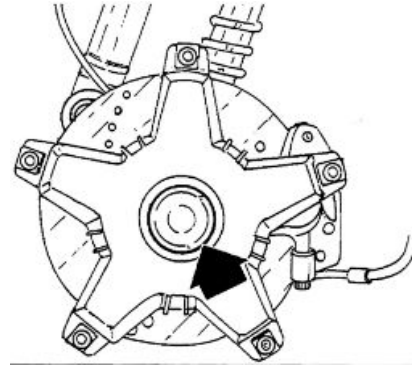


After removing the split ring on the outer side of the wheel hub, and the seal ring, remove the bearing using a length of pipe of adequate diameter and a mallet, as shown in the figure. Follow the same procedure to remove the roller cage on the opposite side.

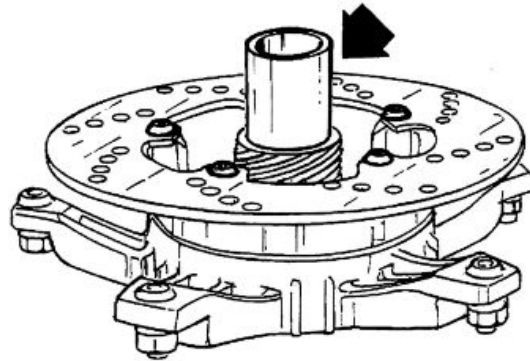

Handlebar

Removal

Remove the 2 rear view mirrors and their fixing ring nuts. Remove the handlebar cover as described in the «Bodywork» chapter and the speedometer.

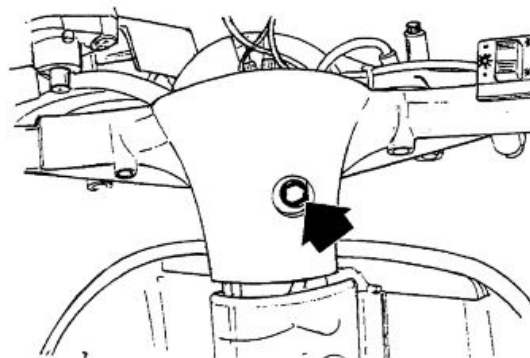

Refitting

Upon reassembly, tighten to the prescribed torque.


N.B.

* Safety tightenings

IN ORDER TO ENSURE THE CORRECT TIGHTENING TORQUE, LUBRICATE NUTS BEFORE ASSEMBLY.

Locking torques (N*m)

Handlebar fixing screw* 30÷44

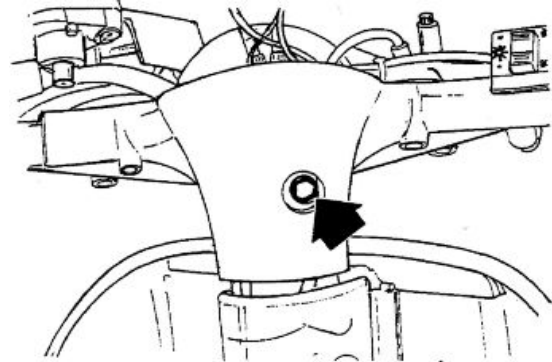


Steering column

Removal

- After removing the top housing, lean the vehicle on one side and extract the steering column, making sure of having removed the brake calliper.

Specific tooling

020055Y Wrench for steering tube ring nut

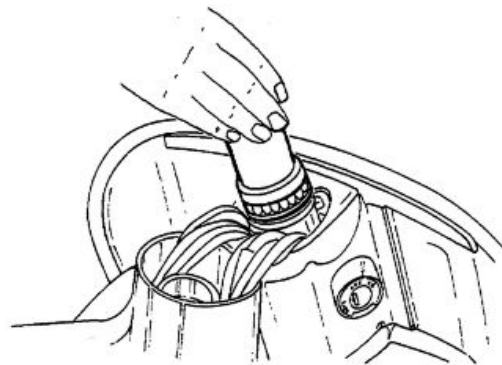

Overhaul


Servicing the front suspension-steering assembly, described below, deals mainly with replacing parts (pin- NADELLA roller bushings - sealing rings unit and dust guard) which connect the steering tube to the front wheel holder swinging hub.

N.B.

BEFORE PROCEEDING WITH THE DESCRIBED SERVICE, CHECK THAT THE STEERING TUBE AND THE WHEEL HOLDER HUB ARE IN EXCELLENT CONDITIONS: ONLY THEN IS THE SERVICE JUSTIFIABLE. MOREOVER, REMEMBER THE STEERING TUBE SHOULD BE REPLACED WITH A NEW ONE WHEN DEFORMED.

a = Ø 12 Punch

b = Sharp-edged end

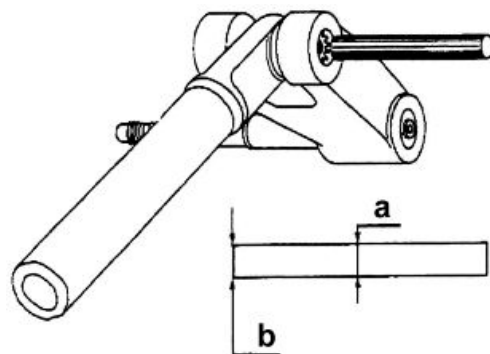


Use a suitable punch with the dimensions indicated on the figure; hit with a mallet until the wedging washer is crushed and then extract it with the help of a pointed end.

Repeat the operation for the second washer using the punch on the side opposite to the one shown in the figure.

Use the tool fitted with part 1 as shown in the figure and move the tool handgrip until the pin and the NADELLA are simultaneously ejected in the direction opposite the tool thrusting force.

After removing the pin and the first NADELLA, the swinging hub gets detached from the steering tube.

To remove the second NADELLA, use the tool fitted with part 2 instead of part 1, on the side opposite the one shown in the figure.

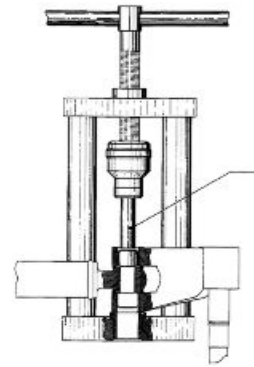

N.B.

DURING THE REMOVAL OPERATIONS DESCRIBED ABOVE, THE ROLLER BUSHINGS ARE DESTROYED WHEN THE EXTRACTOR IS USED. UPON REFITTING, IT IS THEREFORE NECESSARY TO USE NEW BUSHINGS AS WELL AS A NEW PIN, NEW SEALING RINGS AND DUST GUARDS.

Specific tooling

020021Y Front suspension service tool

Connect the swinging hub to the steering tube with the guiding pin.

- Use the tool fitted with part 3 on the stem and part 4 .

Lubricate the pin with recommended grease and insert it temporarily on the swinging hub, move the tool handgrip until part 3 is fully inserted on the steering tube.


After fitting the pin, insert the two spacers, slightly hitting them with the mallet.

N.B.

BEFORE PROCEEDING WITH THE DESCRIBED FITTING, PLACE THE TWO DUST GUARD RINGS ON THE SWINGING HUB AS SHOWN IN THE FIGURE.

Specific tooling

020021Y Front suspension service tool

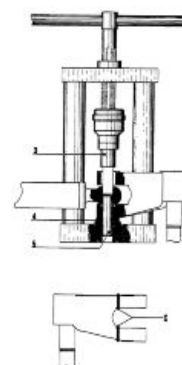

Recommended products

AGIP GREASE SM 2 Grease for odometer transmission gear case

Lithium grease with NLGI 2 molybdenum disulfide; ISO-L-XBCHB2, DIN KF2K-20


Insert the sealing ring on the pin and the roller bushing with its wedging washer at the same time.

- Remove the tool and the part 5 (guide), which has been partially ejected during the previous pin fitting phase, and leave part 4 always fitted.

- Replace part 3 with part 16 (on the stem).

- By moving the tool handgrip, push the wedging washer - roller bushing - seal ring unit, placing part 16 until it stops on the swinging hub.

- Repeat the above operation using the tool with part 16 and part 22, instead of part 4, always fitted to the stem, on the side opposite that indicated in the figure to fit the second wedging washer - roller bushing - sealing ring unit.

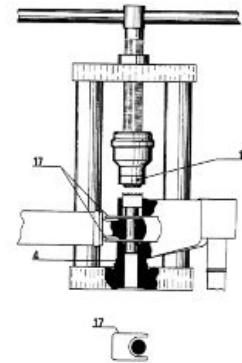

WARNING

BEFORE PROCEEDING WITH THE DESCRIBED PRE-FITTING, DIP THE SEALING RINGS IN MINERAL OIL AND THE "NADELLA" ROLLER BUSHINGS (PREVIOUSLY WASHED IN PURE PETROL OR NEUTRAL PETROLEUM TO ELIMINATE THE ANTIRUST PROTECTION), HALF-FILLED WITH GREASE.

Specific tooling

020021Y Front suspension service tool

Recommended products


AGIP GREASE MU3 Grease for odometer transmission gear case

Soap-based lithium grease with NLGI 3; ISO-L-XBCHA3, DIN K3K-20

- Use the tool fitted with part 20 on its stem and part 21 on the tool base as shown in the figure.

- By moving the tool handgrip, push the two NADELLA bushings until their internal bottoms make contact with the pin end.

- Use the tool fitted with parts 3 and 4 to fit the pin, and press moving the tool handgrip, until wedging the washers on the swinging hub.

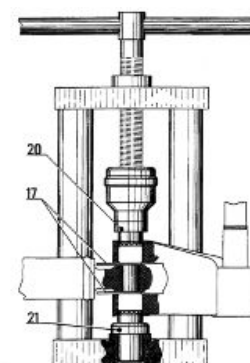

- Now, remove the two spacers (parts 17 and 16) and, once the space between the NADELLAs - steering tube and swinging hub - has been fully filled with grease, move the dust guard rings until they are placed in that space.
- By wedging the washers as described above, the front suspension unit refitting stage is finished.

Recommended products

AGIP GREASE MU3 Grease for odometer transmission gear case

Soap-based lithium grease with NLGI 3; ISO-L-XBCHA3, DIN K3K-20

To remove the bearing housings from the frame use the special tool shown in the figure.

Specific tooling

020004Y Punch for removing fifth wheels from headstock



- Using the special tool remove the bearing and dust ring housings from the steering column as shown in the picture.

- Proceed with mallet hits.

Specific tooling

020004Y Punch for removing fifth wheels from headstock



- Using the special tool, refit the dust ring and the bearing housing onto the steering column and push them as far as they go.

Specific tooling

006029Y Punch for fitting fifth wheel seat on steering tube



Refitting

- Grease bearings and housings.
- Tighten to the prescribed torque and rotate the spanner in an anti-clockwise direction by 80°-90°.

Specific tooling

020055Y Wrench for steering tube ring nut



Recommended products

AGIP GP 330 Grease (brake level, throttle twist-grip, gaer)

Calcium complex soap grease NLGI 2; ISO-L-XBCIB2

Locking torques (N*m)

Top steering housing 6÷7 (hence loosen by 80° - 90°) Upper steering ring nut 5÷6

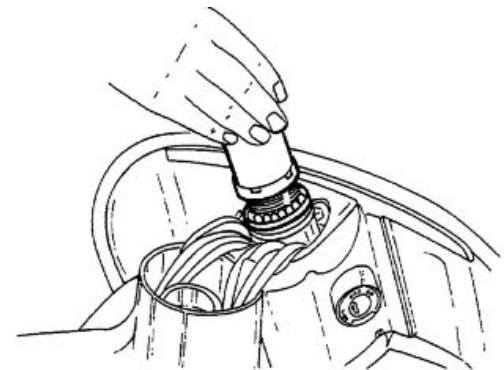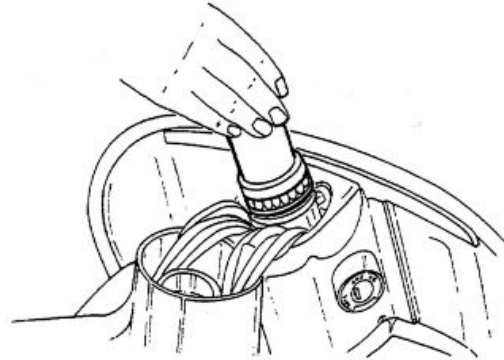


Front shock absorber

Removal

Remove the 2 fixings shown in the figure and the 2 fasteners on the shock-absorber support bracket located on the steering column.


Free the shock-absorber from the support bracket removing the top fixing.

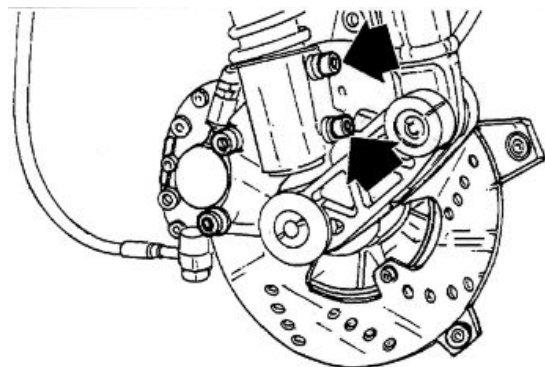

Shock-absorber - calliper bracket


Removal

Remove the split ring shown in the figure.
Remove the two shock-absorber fixing screw and the odo/speedometer cable holder.
Extract the bracket from the axle using a rubber mallet.

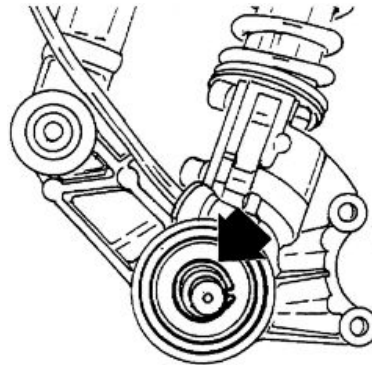

Overhaul


In the event of grease leaks through the wheel hub, the cause may be found in the sealing ring fitted onto the calliper bracket.
After removing the wheel hub, extract the ring shown in the figure and replace it with a new one.

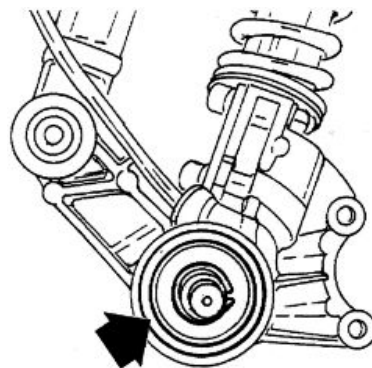

Rear

Removing the rear wheel

- After removing the spare wheel, remove the three fasteners shown in the figure.
- Remove the rear wheel by loosening the five fixing screws.

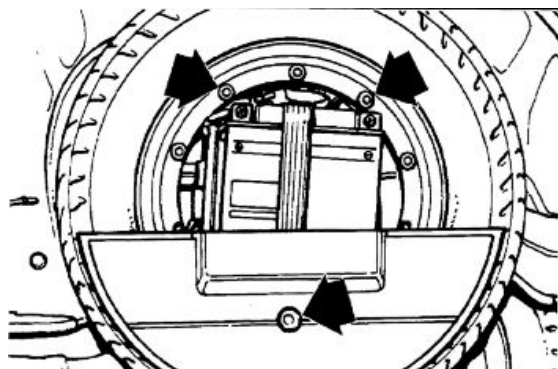

Refitting the rear wheel

- When refitting the rear wheel, tighten all fasteners at the prescribed torque following a crosswise sequence.

Locking torques (N*m)


Rim - hub fixing nuts (front-rear) 20 ÷ 27

Shock absorbers

Removal


For the rear shock-absorber replacement it is necessary to remove the engine - shock-absorber fixing bolt as shown in the figure.

Remove the gasoline and oil tanks, then remove the shock absorber upper fixing in the underseat compartment housing.

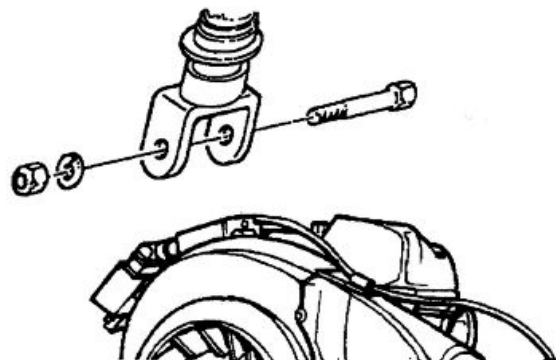

Centre-stand

Detach the return spring from the centre stand, remove the 4 fasteners shown in the figure.

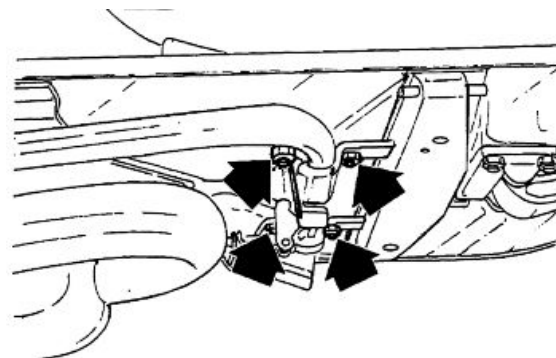

INDEX OF TOPICS


BRAKING SYSTEM

BRAK SYS

Front brake calliper

Removal

- Detach the brake hose from the calliper using a container to collect the fluid.
- Remove the fasteners shown in the figure.

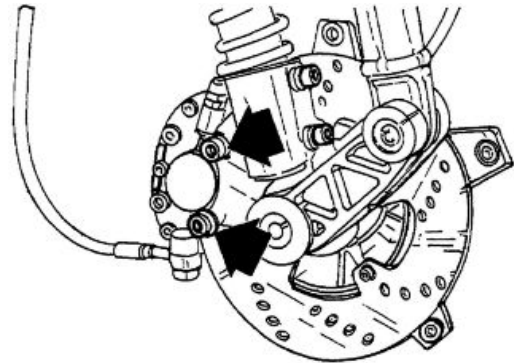

Refitting

- When refitting, tighten the nuts to the prescribed torque.
- Bleed the system.

N.B.

* Safety tightenings

IN ORDER TO ENSURE THE CORRECT TIGHTENING TORQUE, LUBRICATE NUTS BEFORE ASSEMBLY.


Locking torques (N*m)

Pipe - calliper fitting 15÷25 Calliper fixing screw* 20÷25

Front brake disc

Removal

- Remove the rear wheel by loosening the 5 fasteners.
- Remove the wheel hub.
- Loosen the 5 disc fasteners.

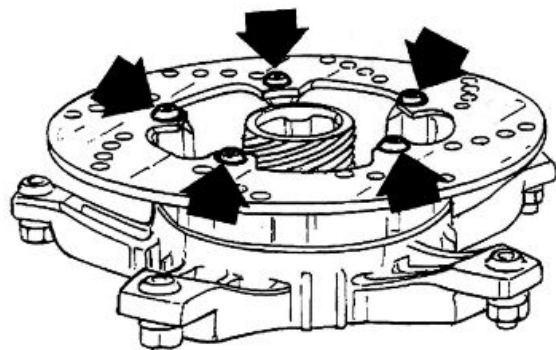

Refitting

- When refitting, correctly position the disc, observing the direction of rotation (see figure) and apply medium thread-lock.

N.B.

* Safety tightenings

IN ORDER TO ENSURE THE CORRECT TIGHTENING TORQUE, LUBRICATE NUTS BEFORE ASSEMBLY.

Recommended products

Loctite 243 Medium strength threadlock


Loctite 243 medium-strength threadlock

Locking torques (N*m)

Disc fixing screw* 5÷6

Disc Inspection

- Remove the wheel and check any possible disc's out-of-plane. The measured value must be less than 0.1 mm. If higher, replace the disc and repeat the check.
- If the problem is not solved check and, if necessary, replace the wheel hub.

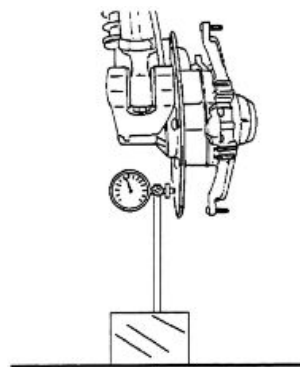


Specific tooling

020335Y Magnetic support for dial gauge

Front brake pads

Removal

- To facilitate this operation it is suggested that the front wheel is removed, remove the plastic cap and apply leverage with a screwdriver.
- Remove the external split ring from the pin, the spring and the pads themselves.
- The pads must be replaced if the thickness of the working material is less than 1.5 mm.

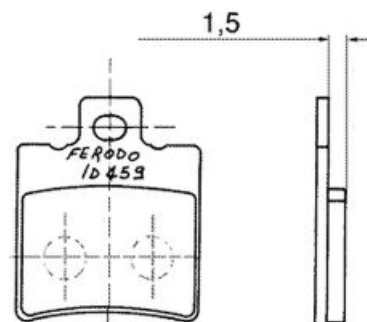

Refitting

- When refitting, operate in the opposite way, paying attention in positioning the spring with the arrow pointing upwards.

Fill

Front

- Once the bleeding valve is shut, top-up the circuit using fresh brake fluid.
- Loosen the bleed screw.
- Connect the special tool's tube to the bleed hole. To bleed the system, constantly refill the reservoir, while pumping out air with the Mityvac, until all air has been removed from the circuit, i.e. only fluid is pumped out of the system.
- Tighten the bleed screw.

N.B.

IF AIR CONTINUES TO COME OUT DURING PURGING, EXAMINE ALL THE FITTINGS: IF SAID FITTINGS DO NOT SHOW SIGNS OF BEING FAULTY, LOOK FOR THE AIR INPUT AMONG THE VARIOUS SEALS ON THE PUMP AND CALLIPER PISTONS.

CAUTION

- DURING THE OPERATIONS, THE VEHICLE MUST BE ON THE STAND AND LEVEL.

N.B.

DURING PURGING FREQUENTLY CHECK THE LEVEL TO PREVENT AIR GETTING INTO THE SYSTEM THROUGH THE PUMP.

WARNING

THE BRAKE FLUID IS HYGROSCOPIC, I.E. IT ABSORBS HUMIDITY FROM THE AIR. IF THE HUMIDITY LEVEL IN THE FLUID EXCEEDS A GIVEN VALUE, THE BRAKING PERFORMANCES MAY SERIOUSLY DETERIORATE. IT IS THEREFORE RECOMMENDED THAT FRESH FLUID IS TAKEN FROM NEW CONTAINERS. IN NORMAL CLIMATIC CONDITIONS, THE FLUID SHOULD BE REPLACED EVERY TWO YEARS. IF THE BRAKES ARE HIGHLY STRESSED, INCREASE THE FREQUENCY WITH WHICH THE FLUID IS REPLACED.

CAUTION

WHEN CARRYING OUT THE OPERATION, BRAKE FLUID MAY LEAK FROM BETWEEN THE BLEED SCREW AND ITS SEAT ON THE CALLIPER. CAREFULLY DRY THE CALLIPER AND DEGREASE THE DISC SHOULD THERE BE BRAKE FLUID ON IT.

Recommended products

AGIP BRAKE 4 Brake fluid

FMVSS DOT 4 Synthetic fluid


With the operation concluded, tighten the bleed screw to the prescribed torque.


Specific tooling

020329Y MityVac vacuum-operated pump

Locking torques (N*m)

Oil draining screw 10÷12

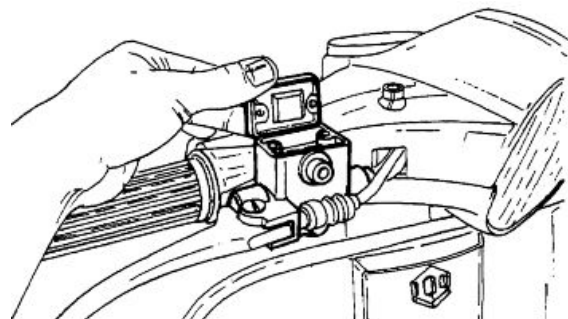


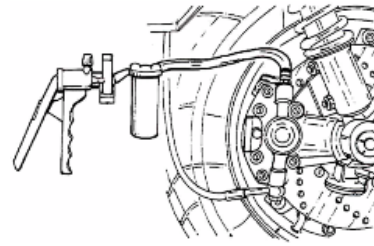

Front brake pump

Removal

- Loosen the two fasteners shown in the figure.
- Detach the hose, collecting the fluid inside a container.

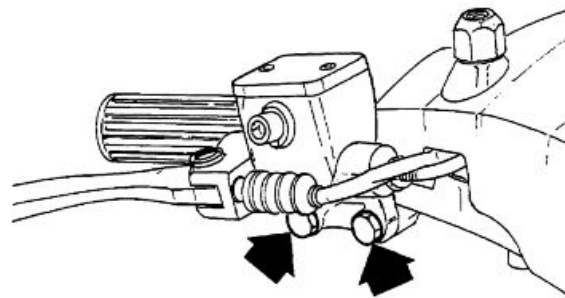

Refitting


- For refitting, perform the operation in the reverse order.
- Tighten the pipe to the prescribed torque and bleed the circuit.

Locking torques (N*m)


Reservoir - pipe fitting 8÷12

Rear drum brake

- Remove the rear wheel.
- Straighten the splint pin and remove the lock nut.

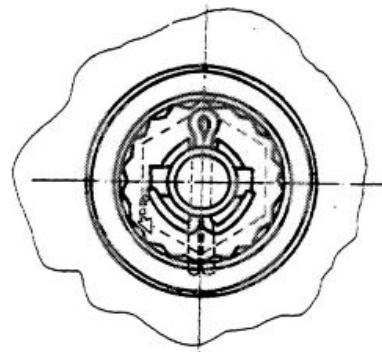

- After removing the hub, proceed as follows:
 1. Remove the shoe spring using the special pliers.
 2. Remove the two retainers shown in the figure.
 3. Remove the shoes using a lever.
 4. Fit the new shoes with the aid of a mallet.
 5. Attach the return spring using the special pliers.

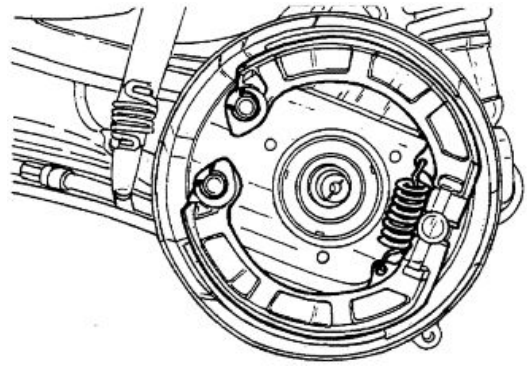

Specific tooling

020325Y Brake-shoe spring calliper


- Refit the components following the removal procedures in the reverse order, tightening the wheel nut to the prescribed torque.

WARNING

-ALWAYS USE NEW SPLIT PINS FOR REFITTING.

WARNING

- FOLD THE EDGES OF THE SPLIT PIN AS SHOWN IN ORDER TO AVOID BACKSLASH BETWEEN THE CAP AND THE WHEEL AXLE.

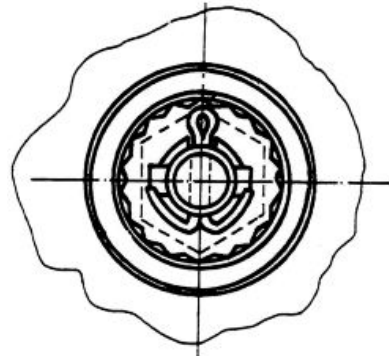


Locking torques (N*m)

Wheel axle nut 90±110


Rear Brake Pedal

After loosening the brake fixing on the rear wheel, remove the 3 fasteners indicate in the figure. Remove the rubber from the pedal and detach the electrical wiring.

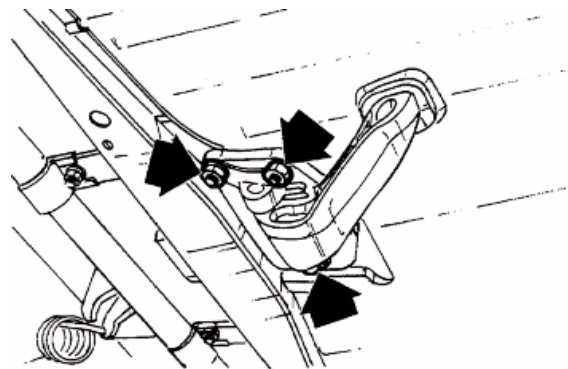

After this operation it is possible to remove the fore brake cable retainer, removing the splint pin and its pin.

It is also possible to replace the stop switch by acting upon its fixing.

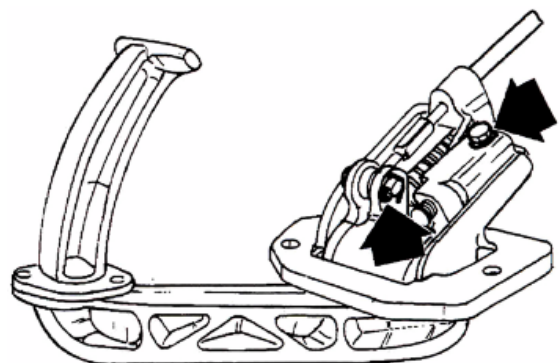


INDEX OF TOPICS

CHASSIS

CHAS

Seat


Remove the 3 fasteners shown in the figure.

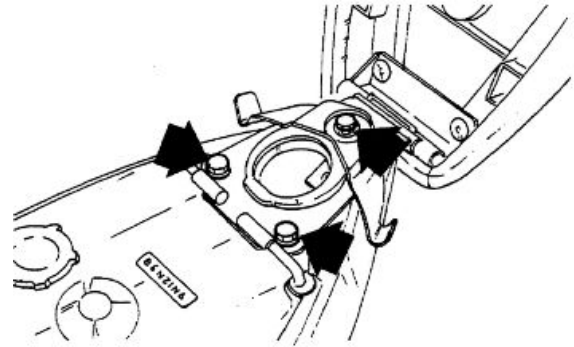

Rear handlebar cover

After removing the rear-view mirrors, the attachments and their seals, remove the four fasteners shown in the figure, detach the electrical wiring and the odo/speedometer cable to replace the dashboard assembly.


Once the handlebar is removed act upon the two lips on the dashboard.

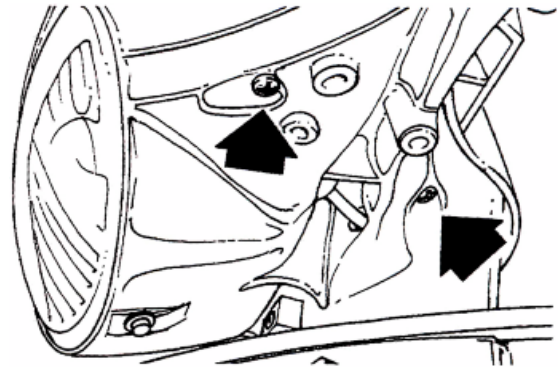


Headlight assy.

After removing the handlebar cover, remove the 2 fasteners shown in the figure and the headlight adjusting screw underneath the handlebar.

Detach the wirings. To replace the bulbs simply release the springs holding back the socket and replace any blown bulb.

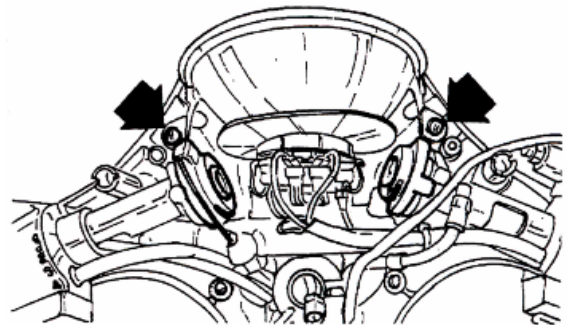

- Remove the 2 fasteners for each turn signal light.

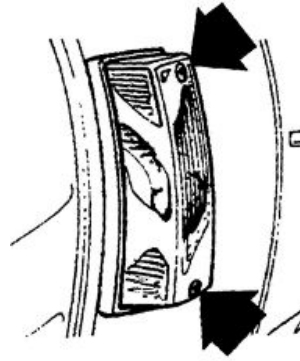


Removing the ignition key-switch when on *off*

To remove the ignition key-switch when in the «ON» position, i.e. steering lock disengage and ignition earthed, proceed as follows:

- Remove the three handlebar fixing screws and the handlebar cover.
- Insert a small screwdriver inside the hole shown in the figure (from underneath the lock body) and push until releasing the securing tongue; hence extract body and master cylinder.

The refitting operations of the lock body and the new master cylinder (on the outer lock body) are as follows:

- Carefully clean the body from any impurity (if the cylinder has been drilled), using compressed air.
- Position the body in its housing after fitting the retaining spring «E».
- Insert the cylinder assembly, with key and tongue «F» facing downwards, halfway inside the lock body, ensuring that during this operation, they is in the «ON» position (the only position that allows the insertion of the cylinder); at the point turn the key leftwards and push as far as the cylinder will go.
- Check the assembly via the key excursion in the three positions and proceed by refitting the handlebar cover.

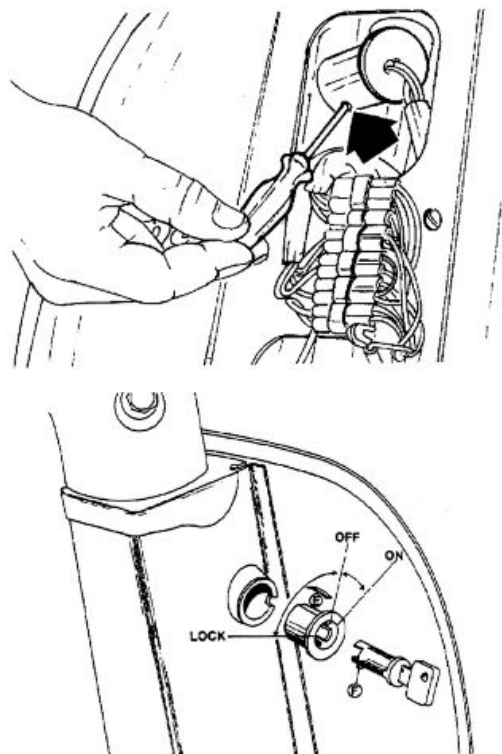


Replace the seat and glove-box cylinders. To replace these follow the operations described for the removal of the cylinder when the ignition key-switch is in the «LOCK» position. If the locks have been left open however, extract the cylinder by pushing lip «F» shown in the figure after having carefully cleaned the housing. Then insert the new cylinder. Bear in mind that for the replacement of the cylinder on the seat lock, it is necessary to remove the lock assembly, acting upon the three screws.

Removing the ignition key-switch when on *lock*


Should it be necessary to replace the steering lock cylinder when the keys have gone missing, proceed as follows:

Cylinder removal: in the event that the key-switch is in the «LOCK» position, it is necessary to **proceed by drilling the cylinder** with the aid of a $\varnothing 8$ mm at least 30 mm long: this allows to release (or destroy) the internal retaining device of the drilled cylinder. Hence extract the body and any residues so to be able to use the body for refitting.

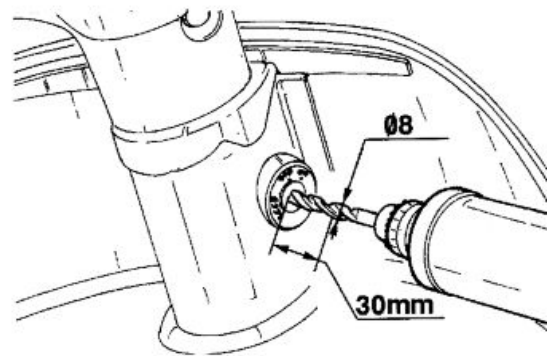


Taillight assy.

- Remove the 2 fixings shown in the figure and replace the blown bulbs.
- Replace, if necessary, the taillight lens.
- To replace the taillight assy., remove the lens, detach the wiring and remove the 2 fasteners from underneath the frame.

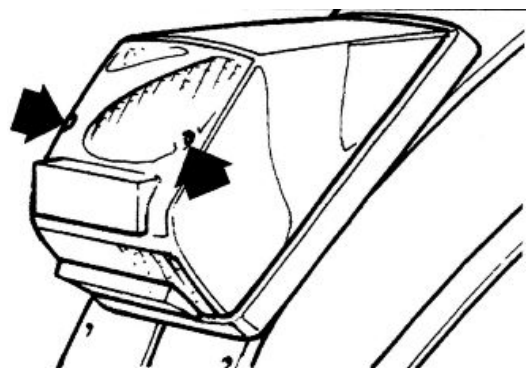


-
- Remove the 2 fasteners for each turn signal light.

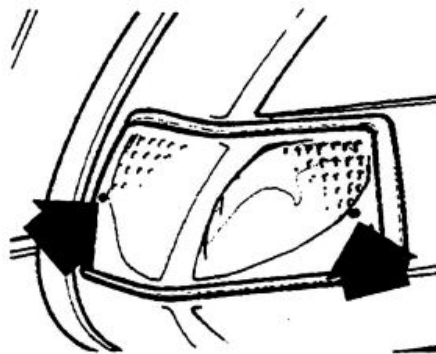

Fuel tank

After removing the seat, detach the electrical connection of the fuel level sensor. Remove the 2 remaining fixings to free the fuel tank assembly. Lift both tanks thus detaching the hoses with the fuel tap shut to separate the fuel-oil tanks. Remove the tank filler cap and insert the special tool through the tube. Proceed by loosening the nut and the acting upon ring «B» until releasing the oil tank

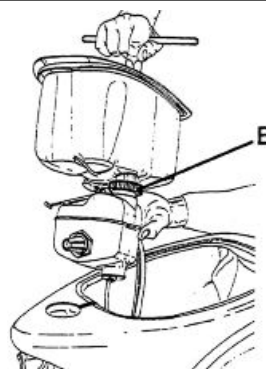


Specific tooling

020321Y Carburetor float removing tool

002850y Oil tank spanner


002973y Fuel tap spanner

Remove the tank filler cap and insert the spanner thus loosening nut «D», hence extract the fuel tap.

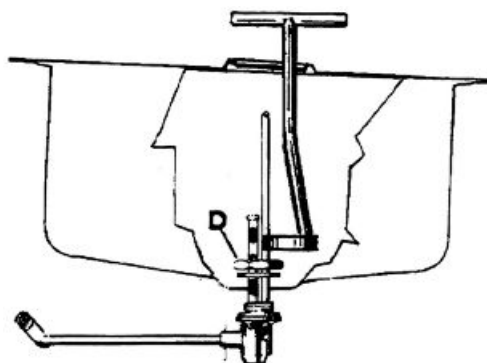


Front mudguard

- Remove the 2 fixings from underneath the mud-guard.

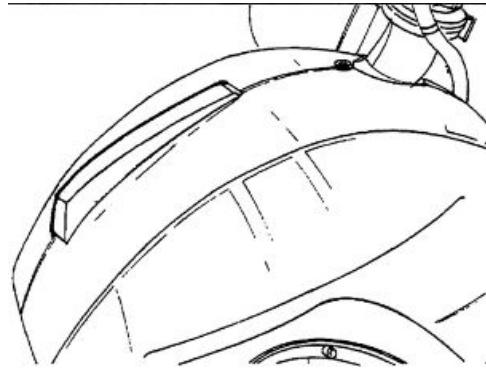


- After removing the handlebar and the steering column assembly, remove the 3 fasteners shown in the figure.

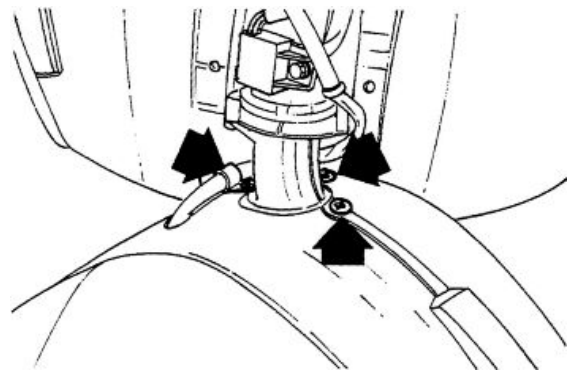

Top-case


Front

- Remove the 2 fixings shown in the figure and the 2 top fasteners from inside the glove-box.
- Remove the glove-box assembly.

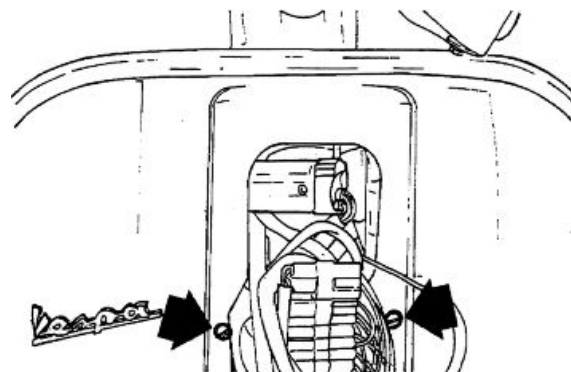


Front central cover

After removing the steering column cover, remove the horn and the grid fixings.
Replace the grid.

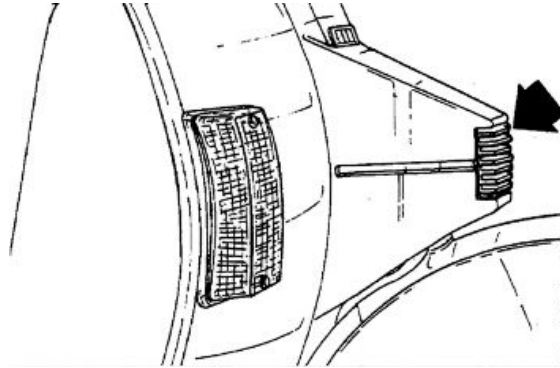

Side Cowlings

Lift the seat and act upon either one of the two levers, according to which cowling must be removed (RHS or LHS).

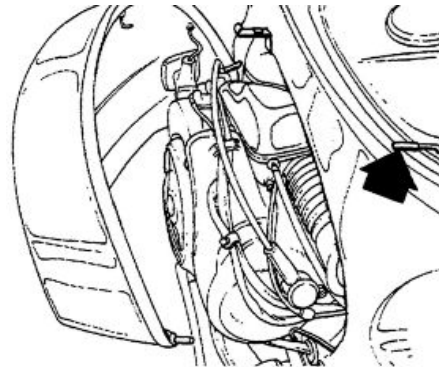

INDEX OF TOPICS

PRE-DELIVERY

PRE DE

Carry out the listed tests before delivering the vehicle.

WARNING

BE VERY CAREFUL WHEN HANDLING FUEL.

Aesthetic inspection

- Paint
 - Plastic joints
 - Damages
 - Dirt
-

Tightening torques inspection

- All tighten torques summarized in pages 1 - 5.
 - External covers screws.
-

Electrical system

- Fill the battery with acid, and charge with appropriate charger.
- Ignition key-switch.
- Low-beam light, high-beam light, warning lights, side-light.
- Headlight adjustment.
- Taillight.
- Stop light (eventually front and rear lights).
- Turn signal lights and warning lights.
- Dashboard illumination.
- Horn.
- Starter button.

CAUTION

TO ENSURE MAXIMUM PERFORMANCE, THE BATTERY MUST BE CHARGED BEFORE USE. INADEQUATE CHARGING OF THE BATTERY WITH A LOW LEVEL OF ELECTROLYTE BEFORE IT IS FIRST USED SHORTENS BATTERY LIFE.

WARNING

BEFORE RECHARGING THE BATTERY, REMOVE THE CAPS OF EACH CELL. KEEP THE BATTERY AWAY FROM NAKED FLAMES OR SPARKS WHILE IT IS CHARGED. REMOVE THE BATTERY FROM THE SCOOTER, DISCONNECTING THE NEGATIVE TERMINAL FIRST.

CAUTION

WHEN INSTALLING THE BATTERY, ATTACH THE POSITIVE LEAD FIRST AND THEN THE NEGATIVE LEAD.

- BATTERY ELECTROLYTE IS TOXIC AND IT MAY CAUSE SERIOUS BURNS. IT CONTAINS SULPHURIC ACID. AVOID CONTACT WITH EYES, SKIN AND CLOTHING.

IN CASE OF CONTACT WITH EYES OR SKIN, RINSE WITH ABUNDANT WATER FOR ABOUT 15 MINUTES AND SEEK MEDICAL ATTENTION AT ONCE.

IF IT IS SWALLOWED, IMMEDIATELY DRINK LARGE QUANTITIES OF WATER OR VEGETABLE OIL. SEEK IMMEDIATE MEDICAL ATTENTION.

THE BATTERIES PRODUCE EXPLOSIVE GAS; KEEP THEM AWAY FROM NAKED FLAMES, SPARKS AND CIGARETTES. VENTILATE THE AREA WHEN RECHARGING INDOORS. ALWAYS WEAR EYE PROTECTION WHEN WORKING IN THE PROXIMITY OF BATTERIES. KEEP OUT OF THE REACH OF CHILDREN

CAUTION

NEVER USE FUSES WITH A CAPACITY HIGHER THAN THE RECOMMENDED CAPACITY. USING A FUSE OF UNSUITABLE RATING MAY SERIOUSLY DAMAGE THE VEHICLE OR EVEN CAUSE A FIRE.

Levels check

- Brake fluid.
 - Gear-box.
 - Oil tank.
-

Road test

- Cold start.
 - Speedometer check.
 - Throttle check.
 - Riding stability.
 - Front and rear brake efficiency.
 - Front and rear shock-absorbers.
 - Unusual noises.
 - Hot engine restart.
 - Leakages (after trial run).
-

Functional inspection

Other

- Tire pressure.
- All locks.
- Rear-view mirrors and accessory fitting.
- Tooling kit, owner manual, warranty certificate and customer service card.

CAUTION

CHECK THE INFLATING PRESSURES WHEN THE TIRES ARE AT AMBIENT TEMPERATURE.

CAUTION

NOT EXCEED THE RECOMMENDED INFLATING PRESSURES AS THE TIRES MAY BURST.


- Brake lever excursion.
 - Throttle excursion and adjustment.
 - Homogeneous steering turning.
-

INDEX OF TOPICS

TIME

TIME


Engine

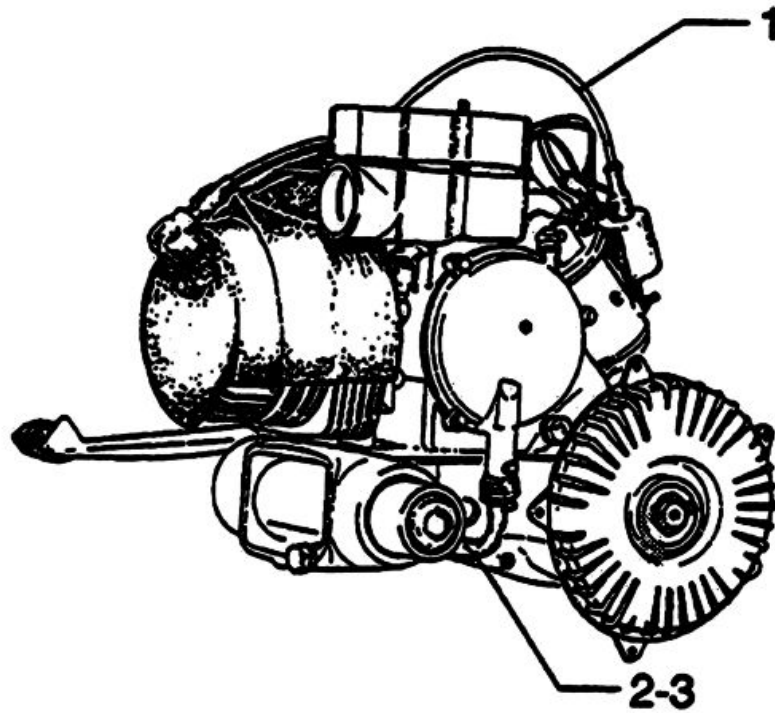


ENGINE

	Code	Action	Duration
1	001001	Engine from the frame - removal and refitting	
2	003064	Engine oil - replacement	
3	003057	Engine retainer - Tighten nuts	

Crankshaft

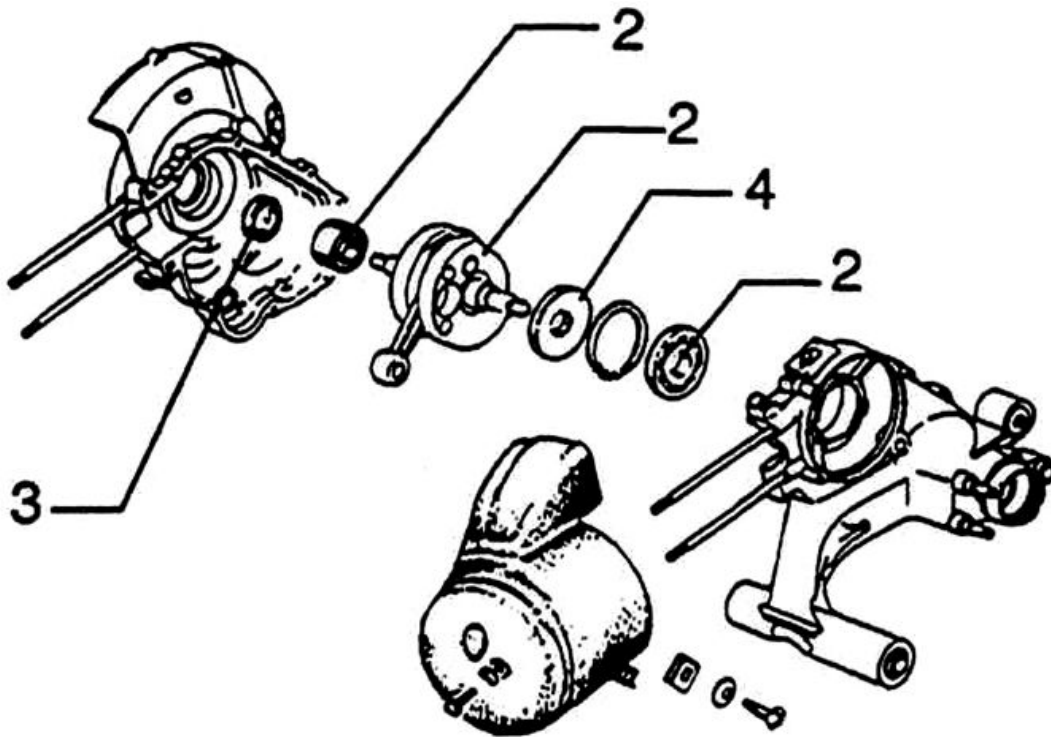**ENGINE SHROUD - CRANKCASE BEARINGS**


	Code	Action	Duration
1	001117	Crankshaft - Replacement	
2	001118	Crankcase bearings - Replacement	
3	001099	Oil seal, flywheel side - Replacement	
4	001100	Clutch-side oil seal - Replacement	

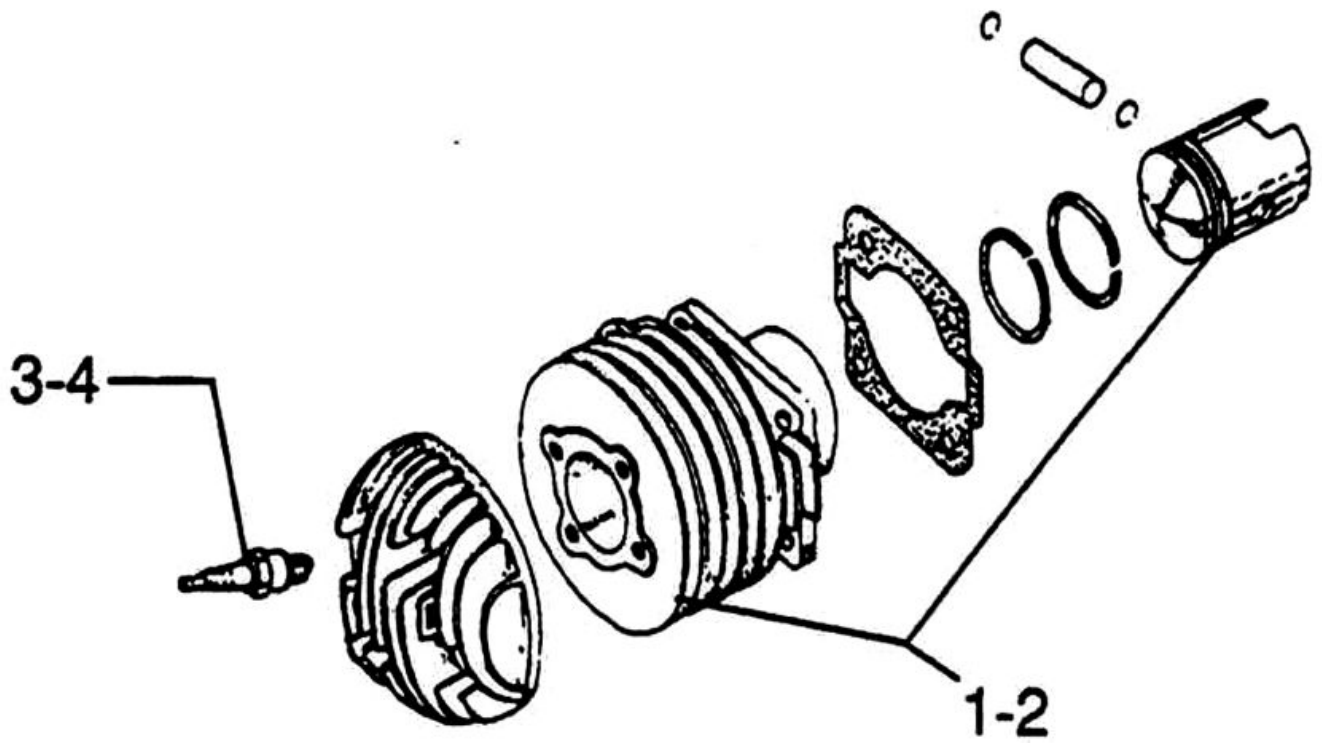

WRIST PIN PISTON CYLINDER ASSY

	Code	Action	Duration
1	001002	Cylinder/piston - Replacement	
2	001107	Cylinder/Piston - Overhaul/Cleaning	
3	001093	Spark plug - Replacement	
4	001094	Spark plug cap - Replacement	


Flywheel cover

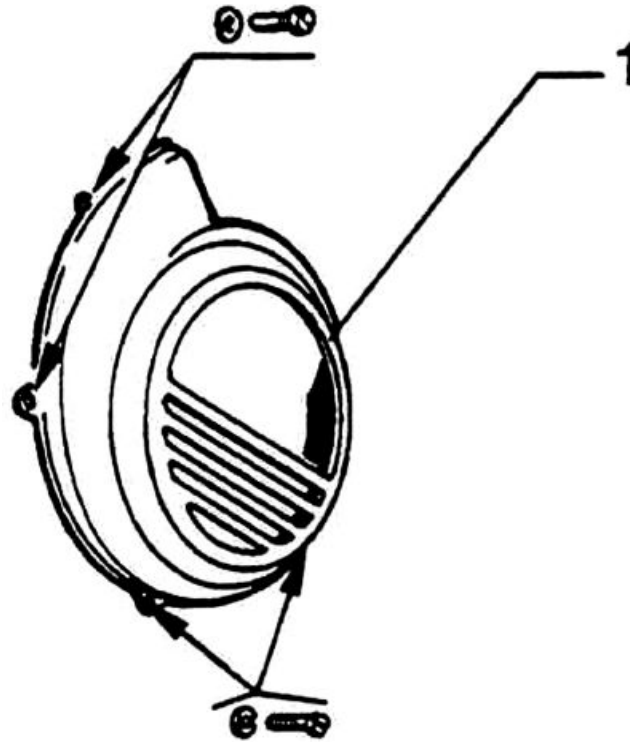

FAN COVER

	Code	Action	Duration
1	001087	Flywheel cover - Replacement	


Oil pump

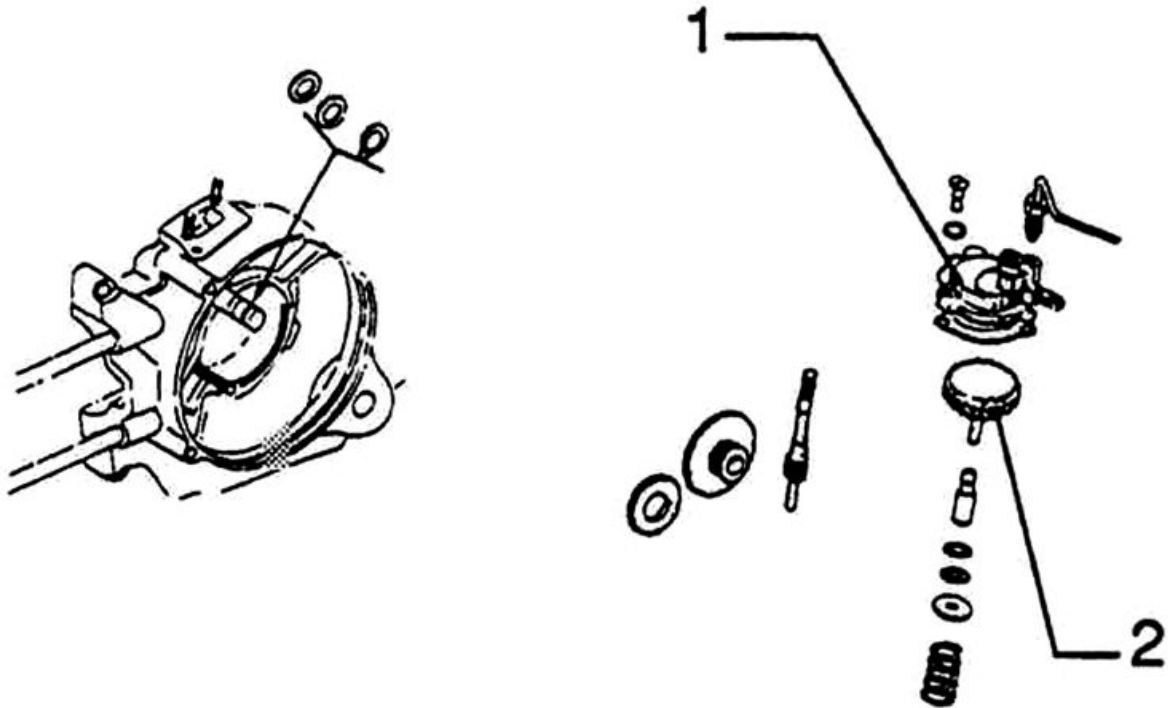

AUTOMATIC MIXER


	Code	Action	Duration
1	001018	Mixer - Replacement	
2	001028	Oil pump drive shaft - Replacement	

Starter motor

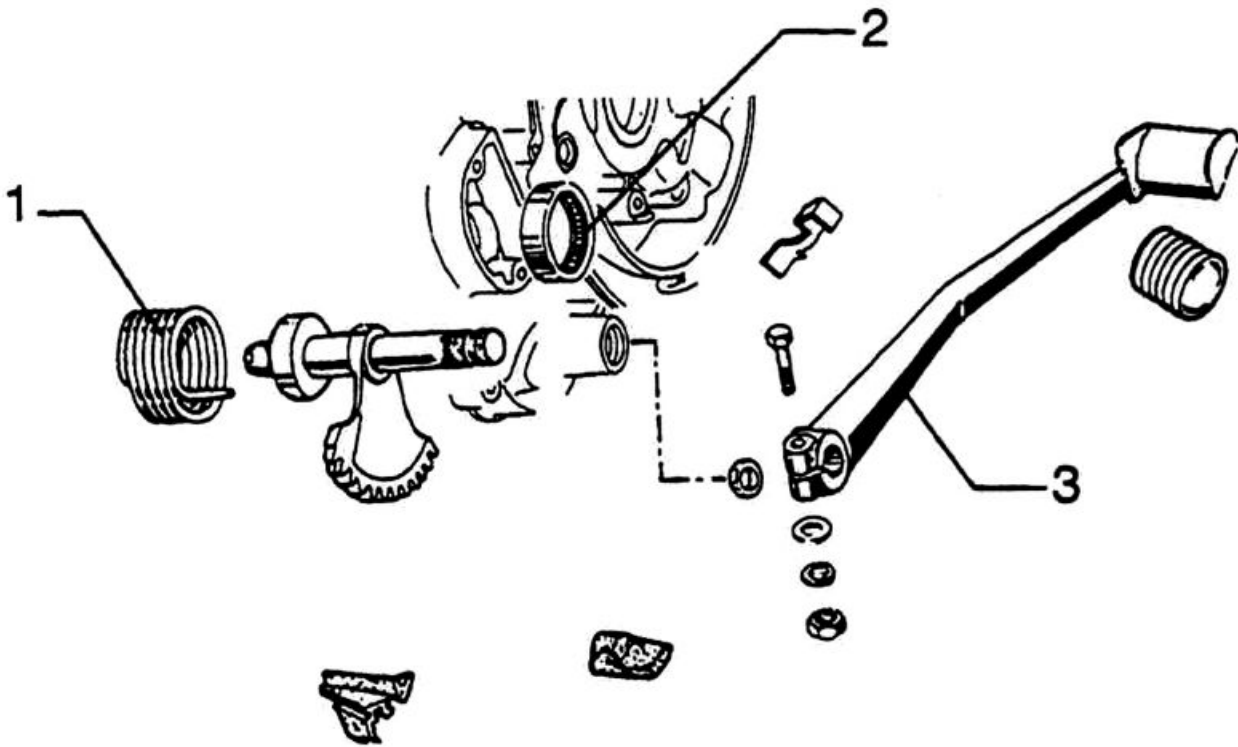

KICK-START LEVER

	Code	Action	Duration
1	008008	Kick-starter gear spring - Replacement	
2	001120	Crankcase bearings - Replacements	
3	001084	Starter lever - Replacement	

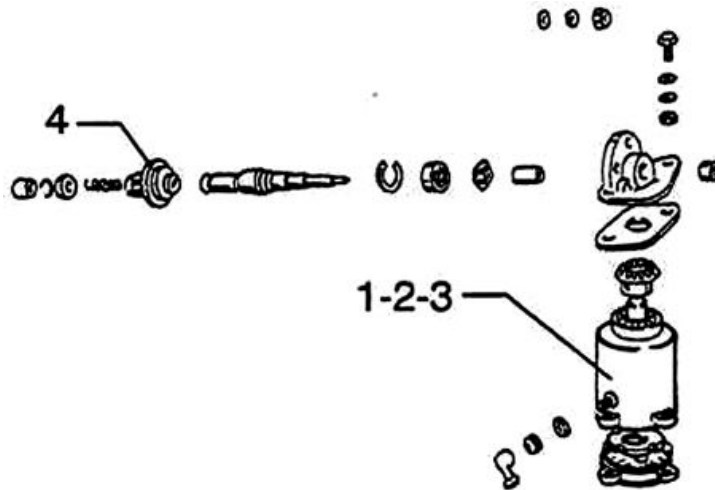


STARTER MOTOR

	Code	Action	Duration
1	001020	Starter motor - change	
2	001039	Starter motor brushes - Replacement	
3	001038	Starter motor - Overhaul	

	Code	Action	Duration
4	001017	Starter motor shaft - Replacement	


Flywheel magneto

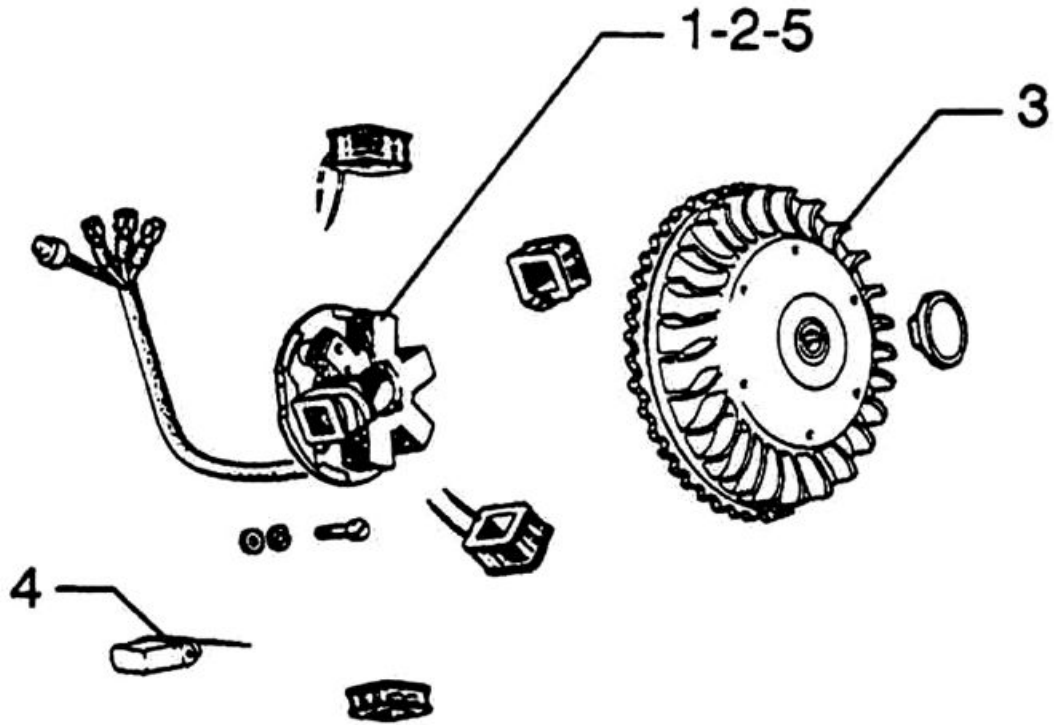

FLYWHEEL MAGNETO

	Code	Action	Duration
1	001067	Stator - Removal and refitting	
2	001004	Stator - Overhaul	
3	001058	Flywheel - Replacement	
4	001059	Pick-up - Replacement	
5	003052	Ignition timing	


Carburettor

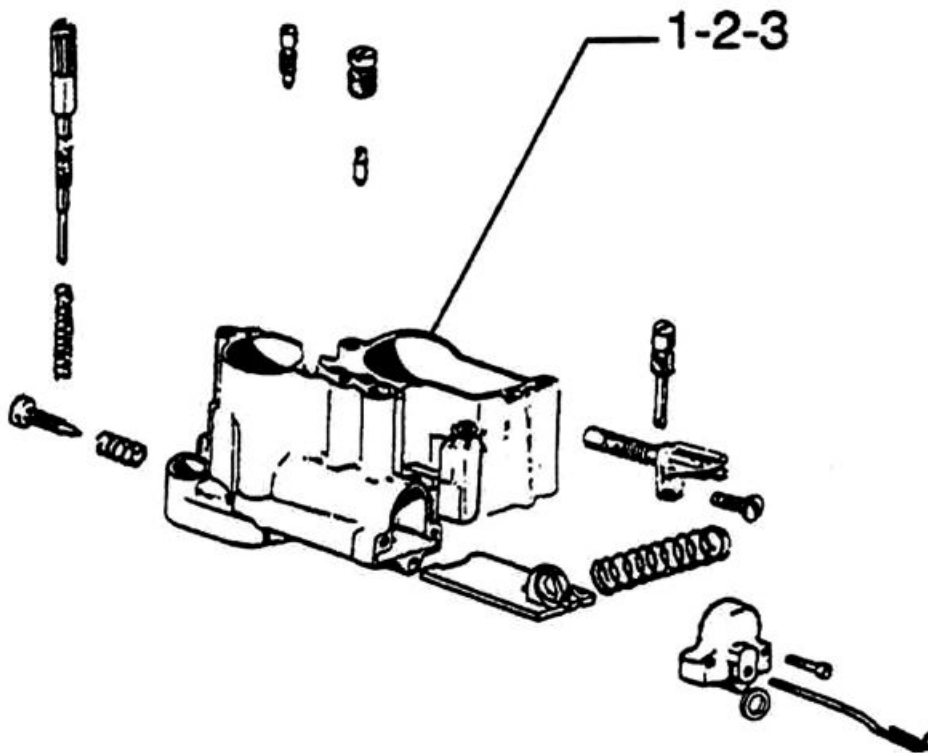

CARBURETTOR

	Code	Action	Duration
1	001063	Carburettor - Replacement	
2	001008	Carburatore - Revisione	
3	003058	Carburettor - Adjustment	


Exhaust pipe

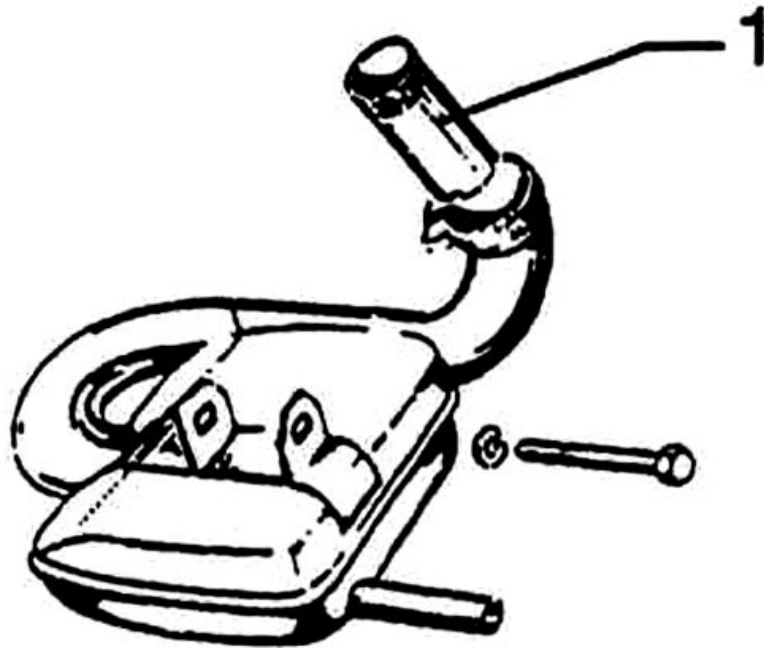

EXHAUST PIPE


	Code	Action	Duration
1	001009	Exhaust pipe - Replacement	

Air cleaner

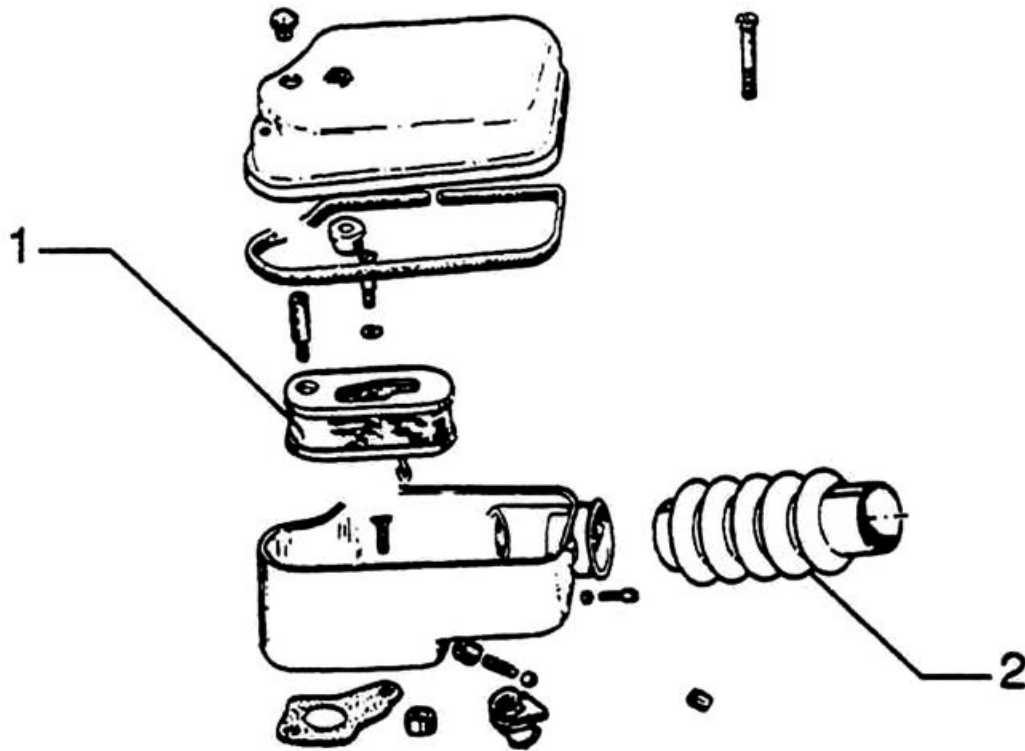**AIR CLEANER**

	Code	Action	Duration
1	001014	Air filter - Replacement	
2	001027	Air-cleaner/frame bellow - Replacement	


Frame

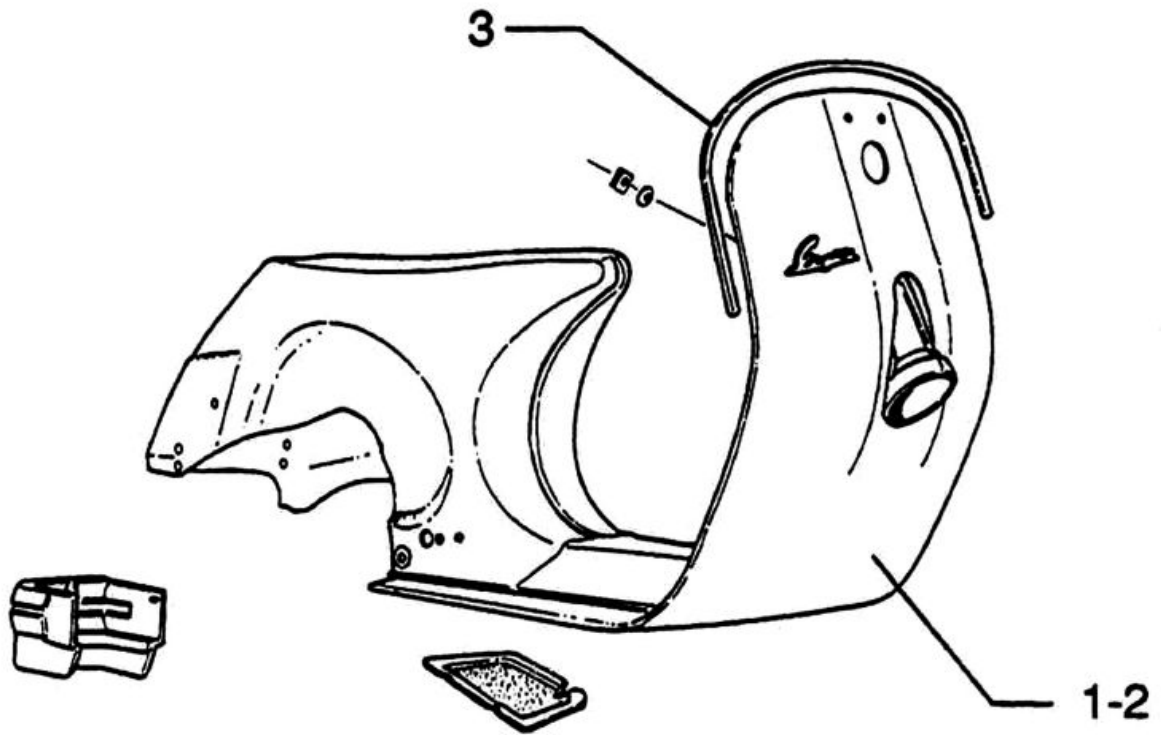

FRAME

	Code	Action	Duration
1	004001	Frame - Replacement	
2	006001	Frame - Painting	
3	004023	Shield rim - Replacement	


Centre-stand

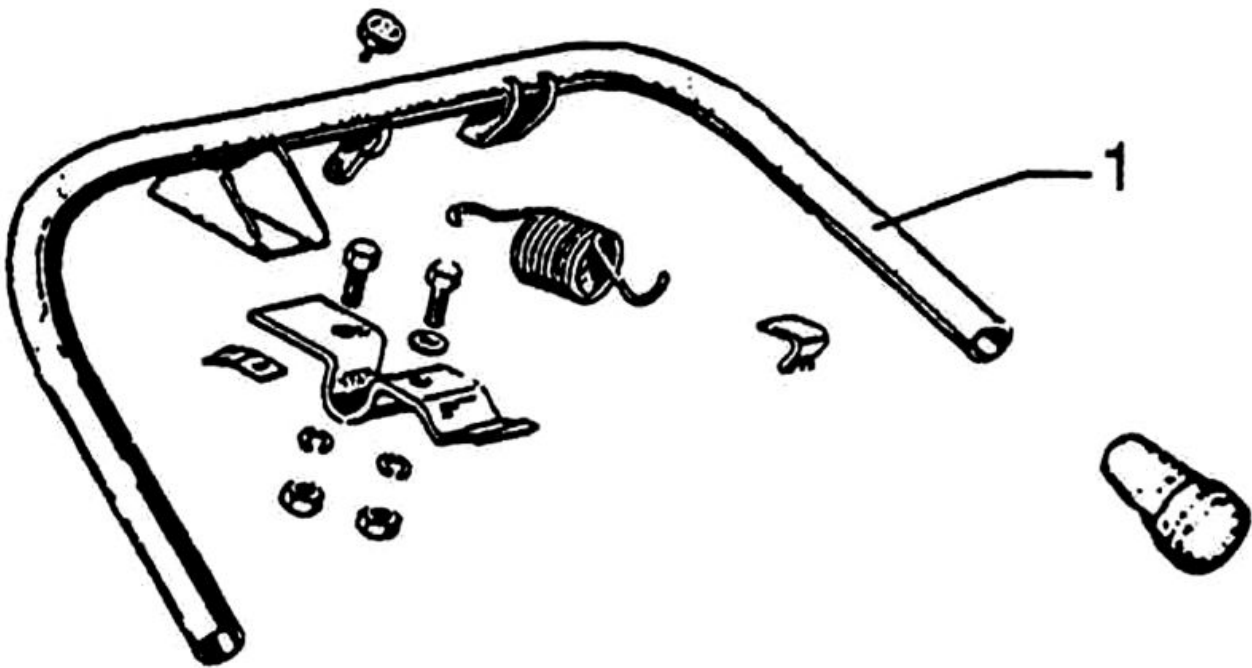

CENTRE-STAND

	Code	Action	Duration
1	004004	Centre-stand - Replacement	


Legshield spoiler

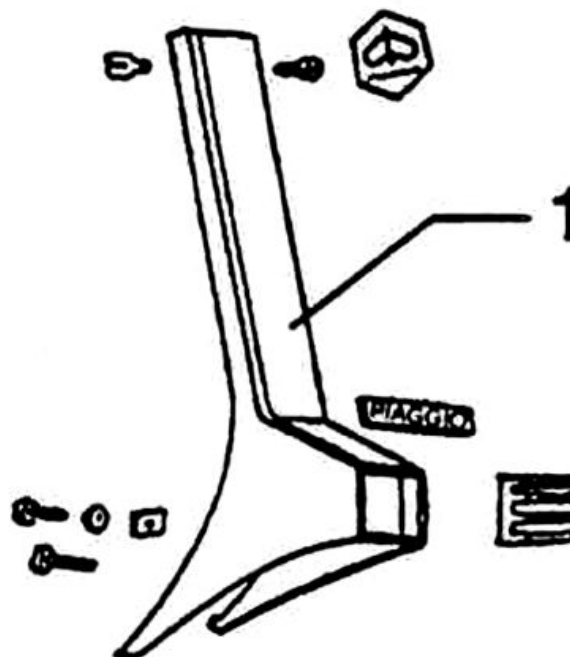

STEERING COLUMN FAIRING


	Code	Action	Duration
1	004024	Steering column fairing - Replacement	

Side fairings

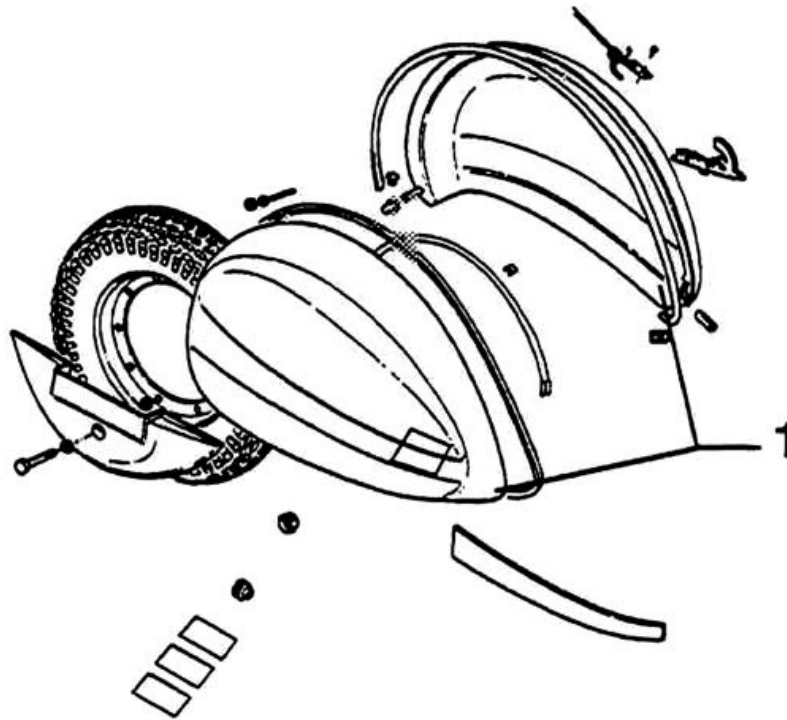

WHEEL SIDE FAIRINGS


	Code	Action	Duration
1	006005	Side fairings - Painting	

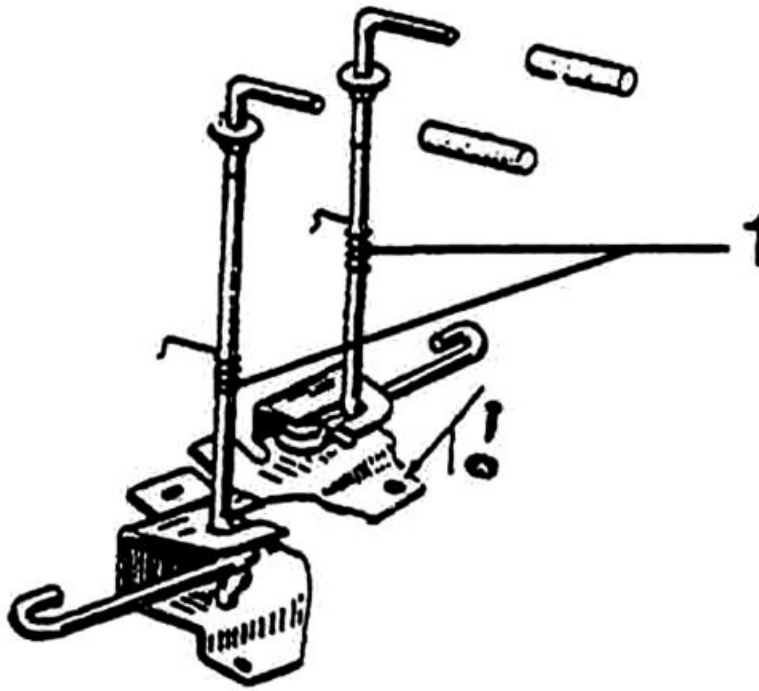

SIDE FAIRING LOCKS

	Code	Action	Duration
1	004025	Side fairing locks - Replacement	


Footrests

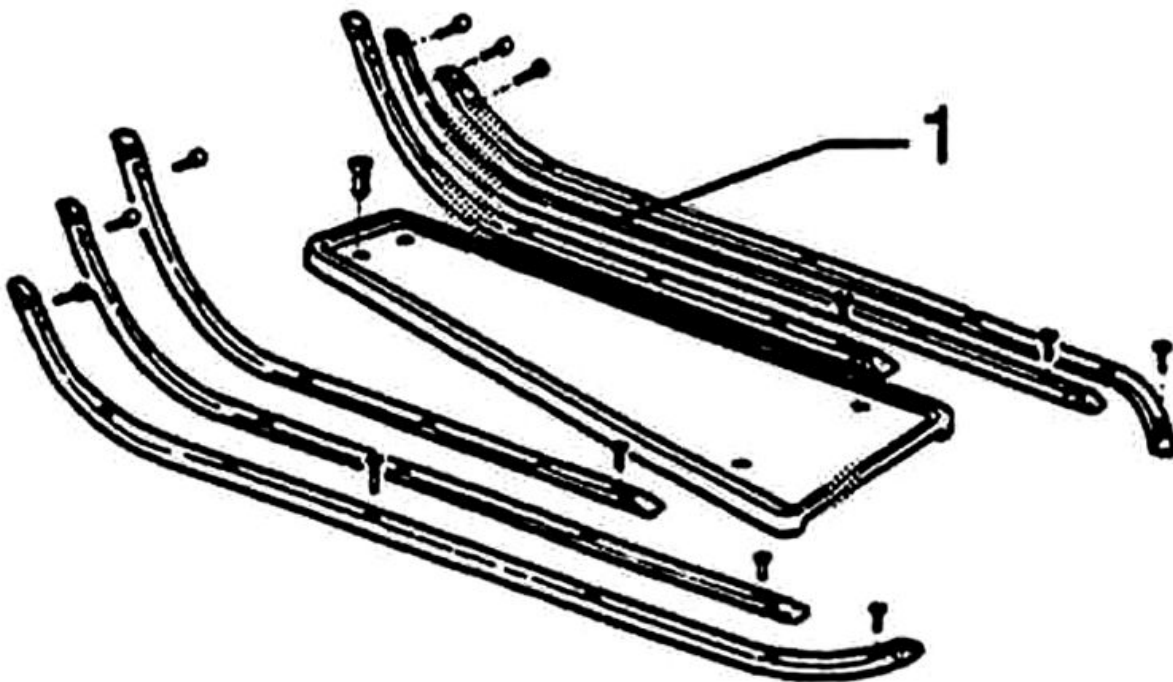

FOOTRESTS


	Code	Action	Duration
1	004015	Footrests - Replacement	

Rear cover

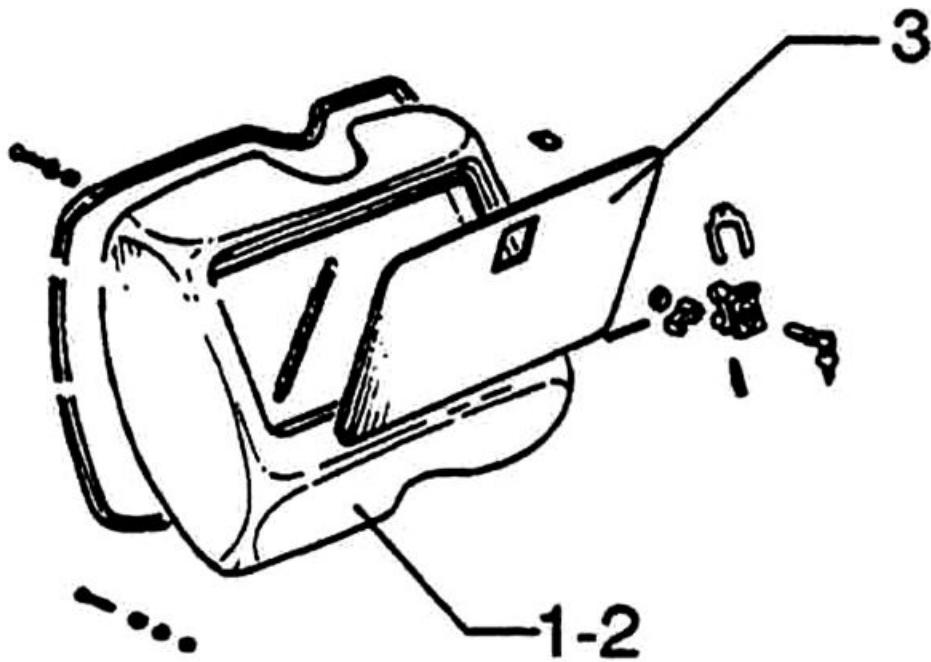


GLOVE-BOX

	Code	Action	Duration
1	004083	Glove box - Replacement	
2	006019	Glove-box - Painting	
3	004081	Glove-box door - Replacement	

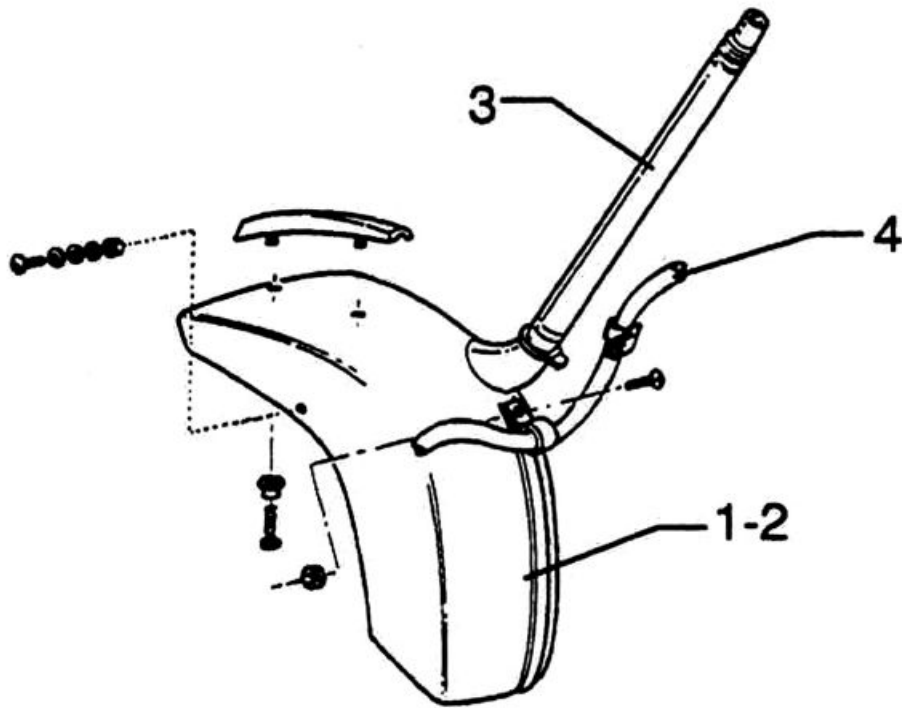Mudguard**FRONT MUDGUARD**


	Code	Action	Duration
1	004002	Front mudguard - Replacement	
2	006003	Mudguard - Painting	
3	003045	Steering tube - Replacement	

Fuel tank

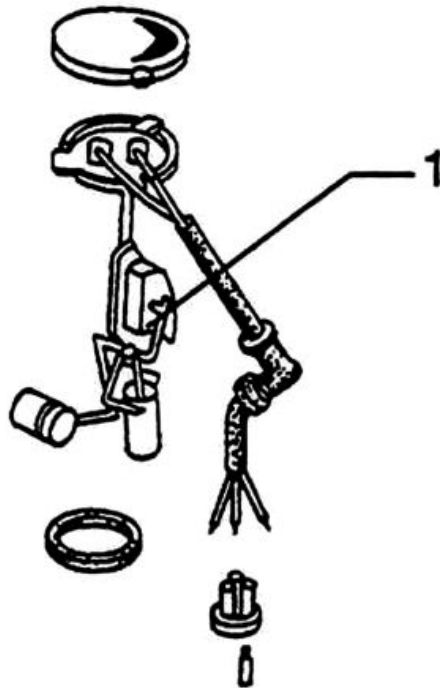


FUEL LEVEL SENSOR

	Code	Action	Duration
1	005010	Fuel tank float - Replacement	

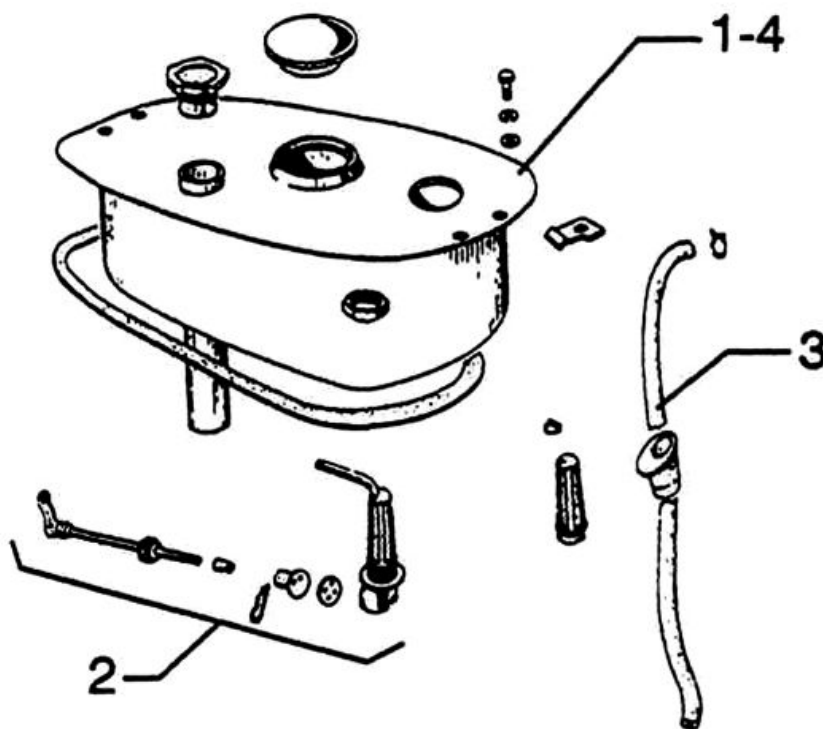


FUEL TANK

	Code	Action	Duration
1	004005	Fuel tank - Replacement	
2	004007	Fuel tap - Replacement	
3	004110	Fuel tank hose - Replacement	
4	006024	Fuel tank - Painting	

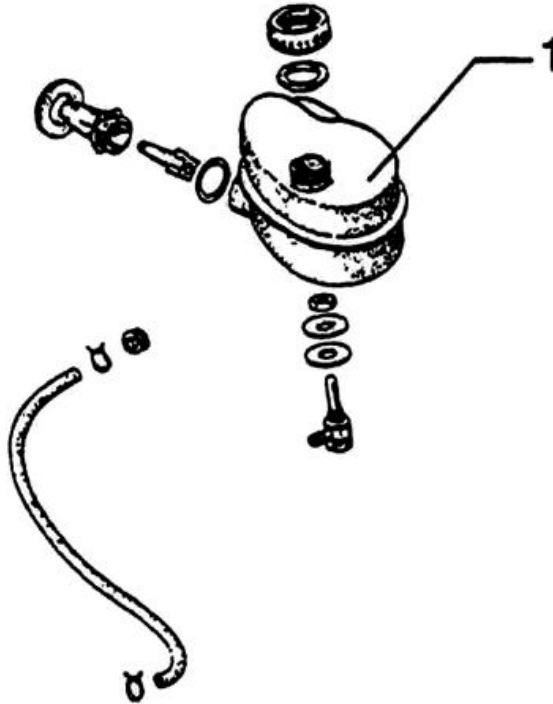Tank oil**OIL TANK**

	Code	Action	Duration
1	004017	Oil tank - Replacement	


Rear shock-absorber

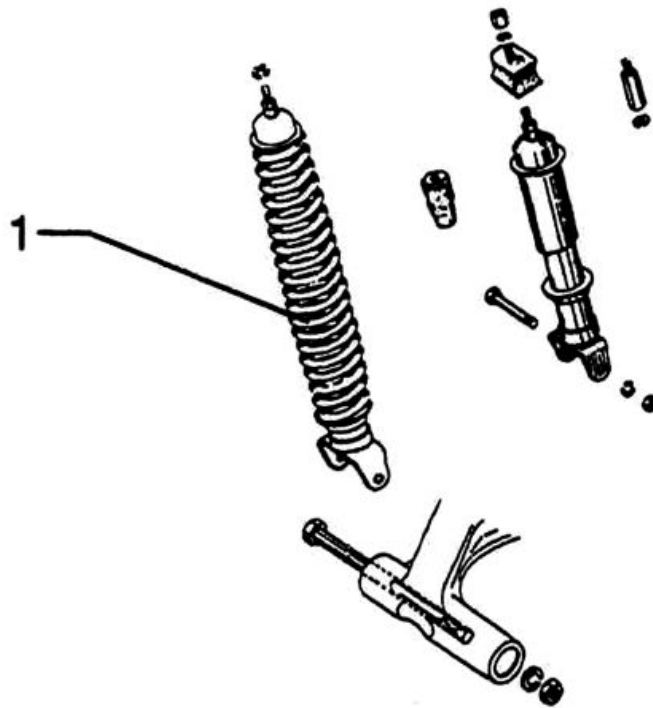

REAR SHOCK-ABSORBER

	Code	Action	Duration
1	003007	Rear shock-absorber - Removal and refitting	


Steering column bearings

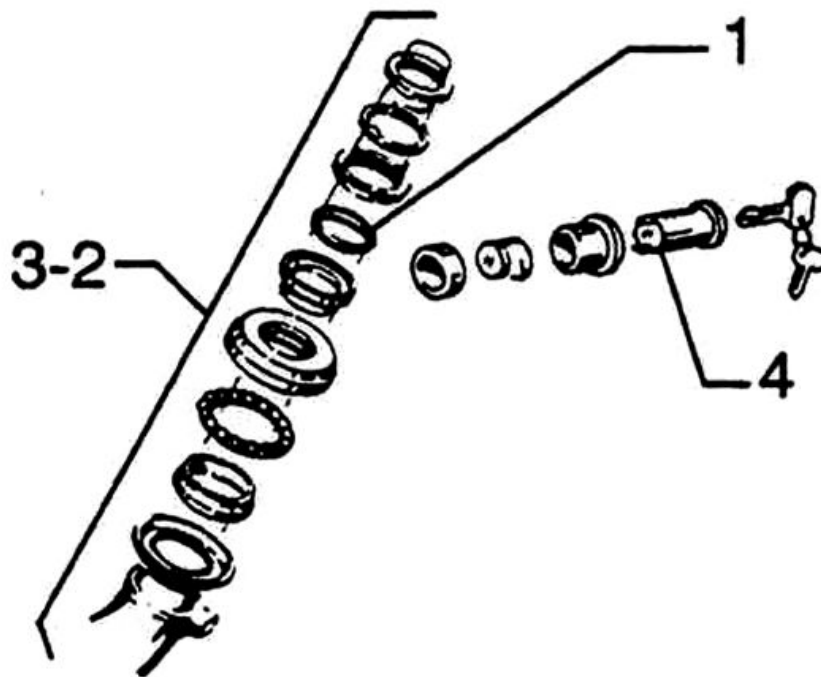

STEERING COLUMN BEARINGS


	Code	Action	Duration
1	003002	Steering bearings - Replacement	
2	004119	Steering support bearing - Replacement	
3	003073	Steering play - Adjustment	
4	004010	Steering lock - Replacement	

Handlebar components

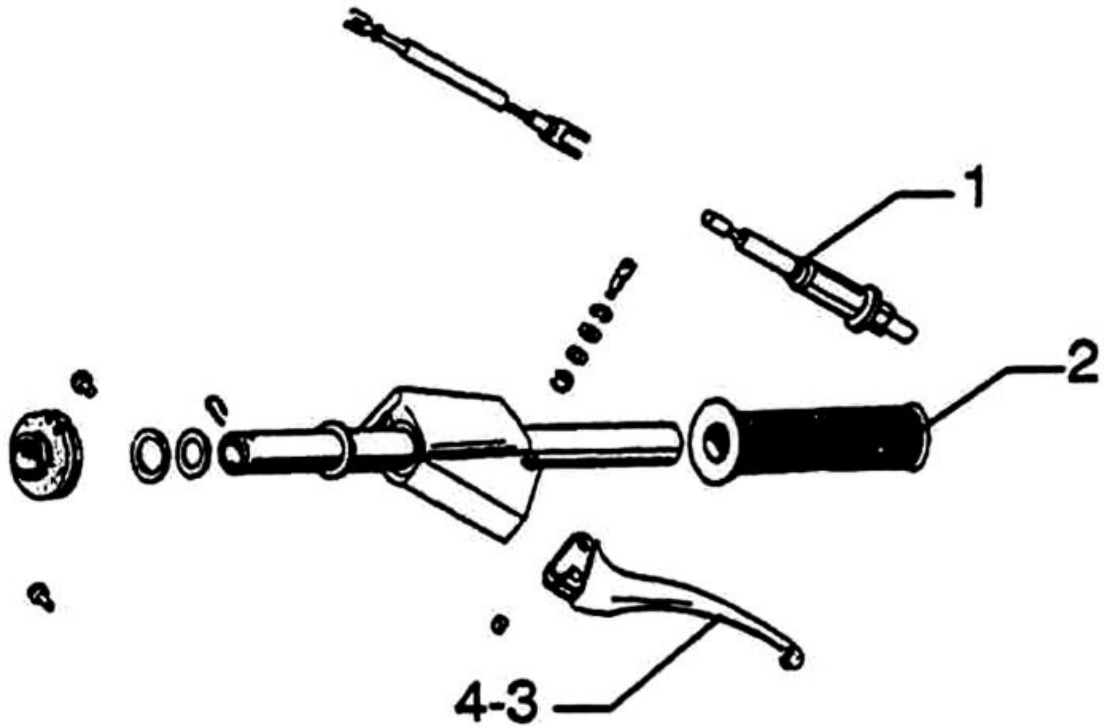

GEAR-SHIFTER TWIST-GRIP

	Code	Action	Duration
1	005062	Neutral switch - Replacement	
2	002071	Left hand grip - Replacement	
3	002037	Brake or clutch lever - Replacement	
4	001035	Clutch lever - Replacement	

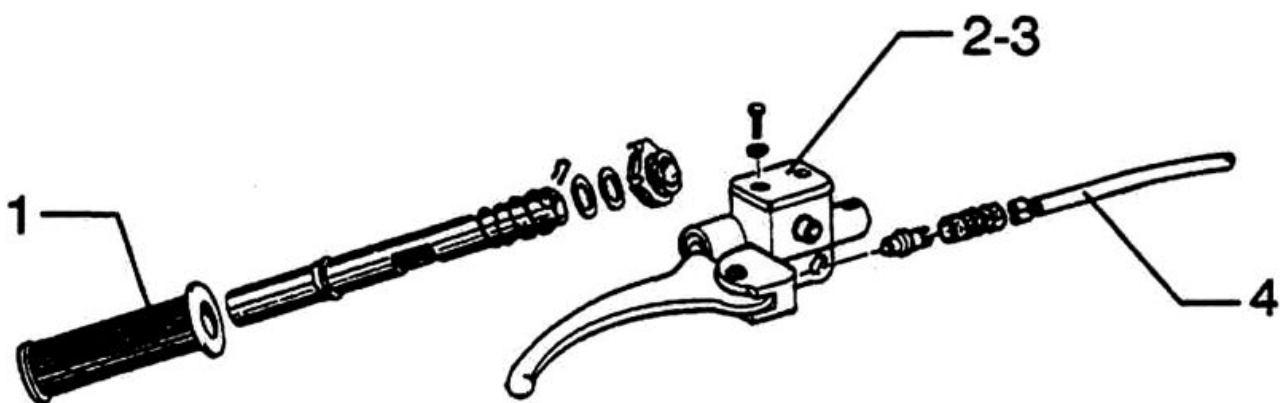


HANDLEBAR COMPONENTS AND BRAKE FLUID PUMP

	Code	Action	Duration
1	002059	RHS twist-grip - Replacement	
2	002024	Front brake pump - Removal and re-fitting	
3	002047	Front brake fluid - Replacement and circuit bleeding	

	Code	Action	Duration
4	002021	Front brake hose - Removal and re-fitting	


Seat

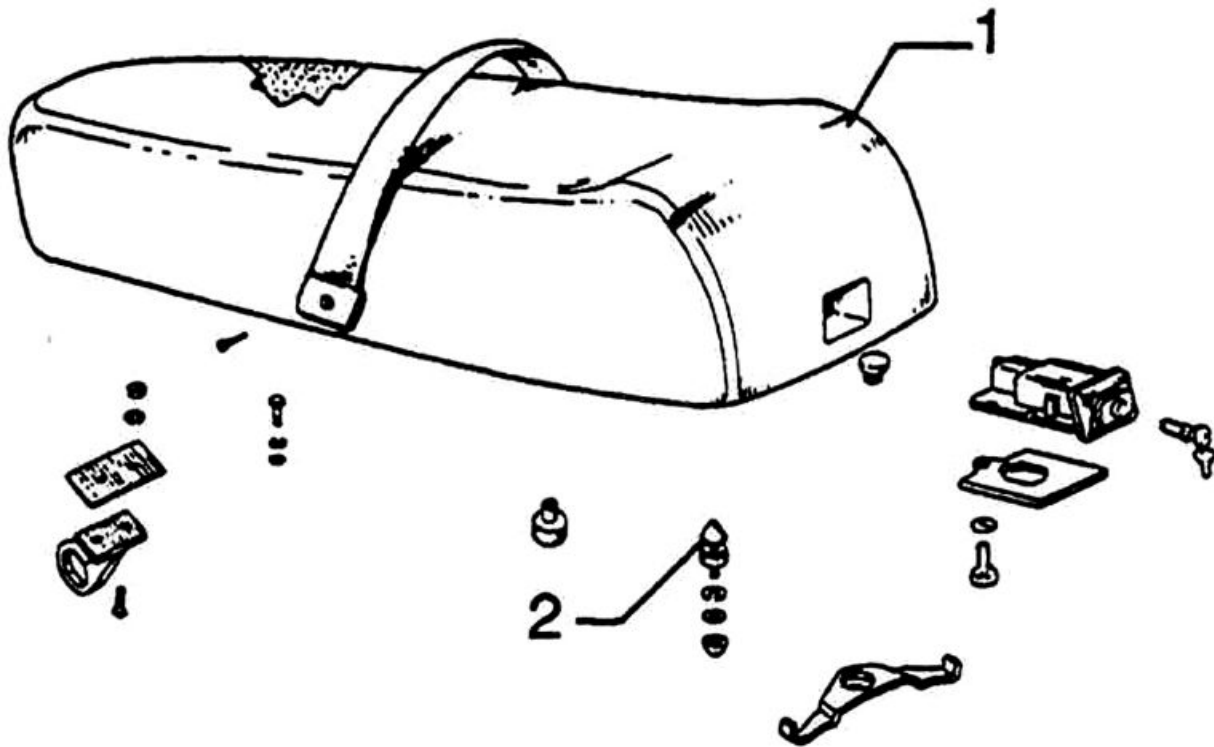

SEAT

	Code	Action	Duration
1	004003	Saddle - Replacement	
2	004054	Saddle lock catch - Replacement	


Instrument panel

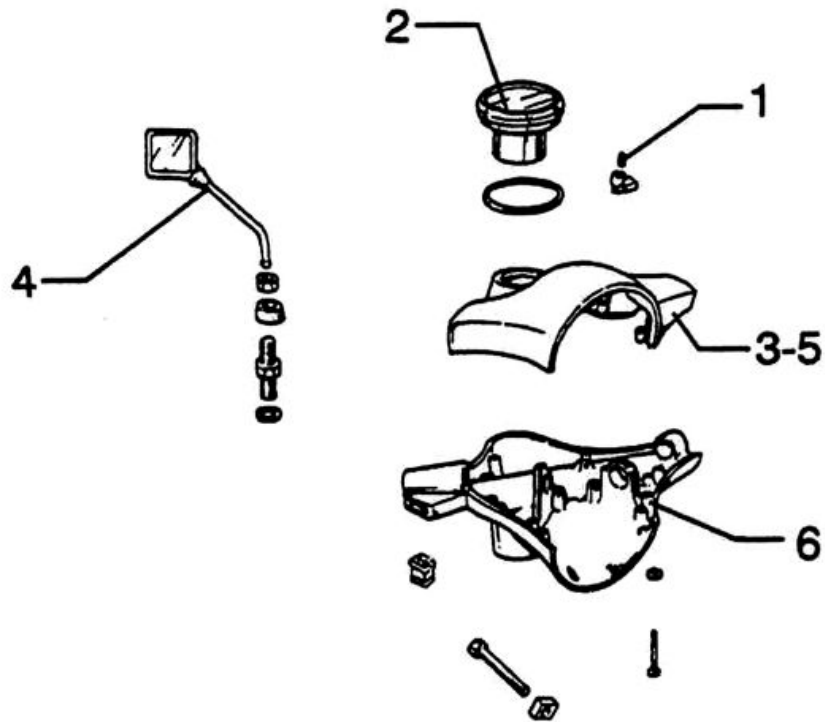

HANDLEBAR COVERS AND DASHBOARD


	Code	Action	Duration
1	005038	Dashboard warning/telltale lights - Replacement	
2	005014	Odometer - Replacement	
3	006010	Top handlebar cover - Painting	
4	004066	Rear-view mirror - Replacement	
5	003001	Top handlebar cover - Removal and Refitting	
6	006011	Lower handlebar cover - Painting	

Turn signal lights

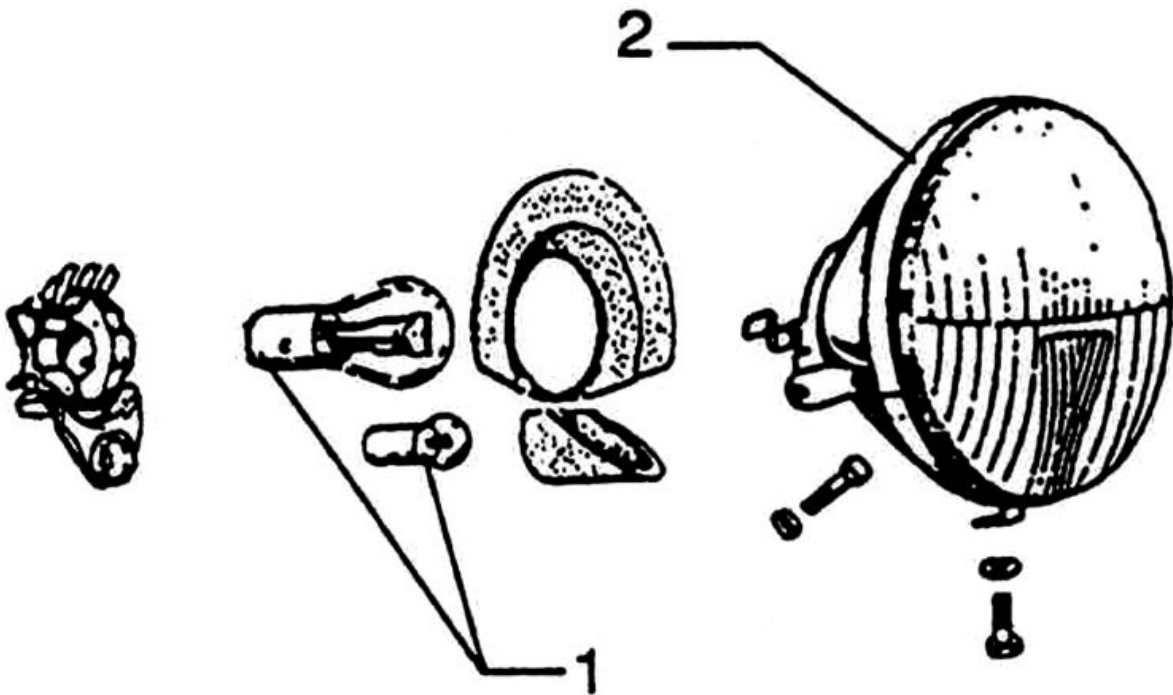


HEADLIGHT

	Code	Action	Duration
1	005008	Headlight bulbs - Replacement	
2	005002	Front light - Replacement	

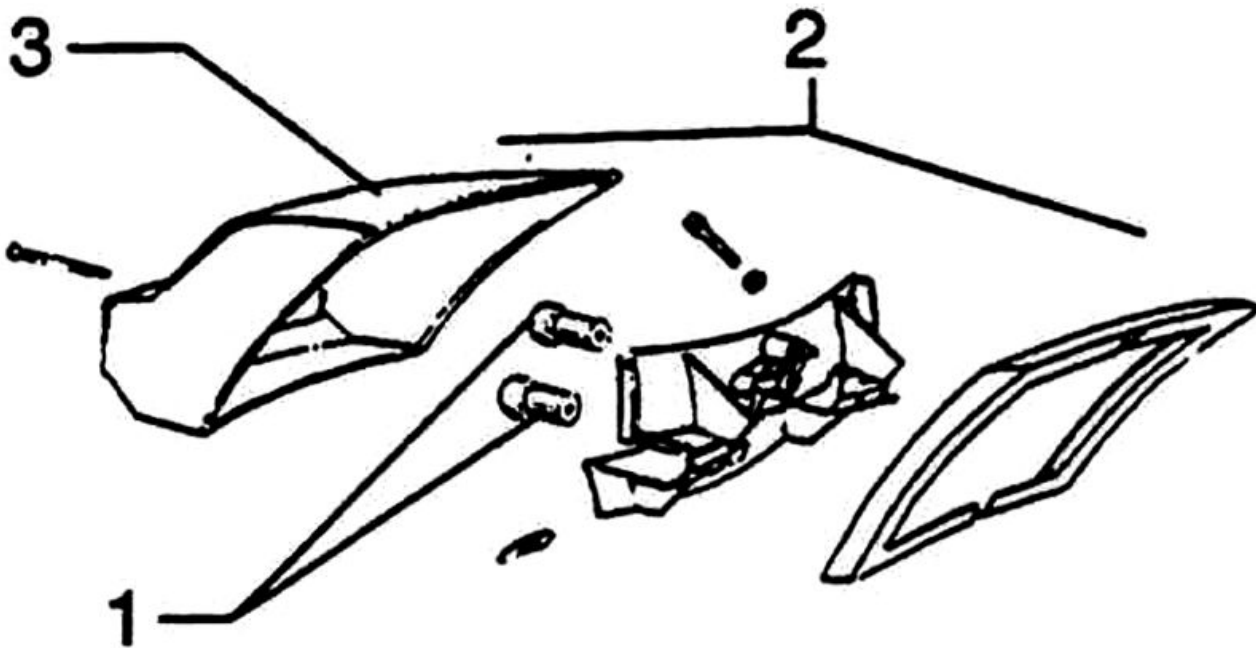

TAILLIGHT


	Code	Action	Duration
1	005066	Rear light bulbs - Replacement	
2	005005	Taillight - change	
3	005028	Rear light assembly glass - Replacement	

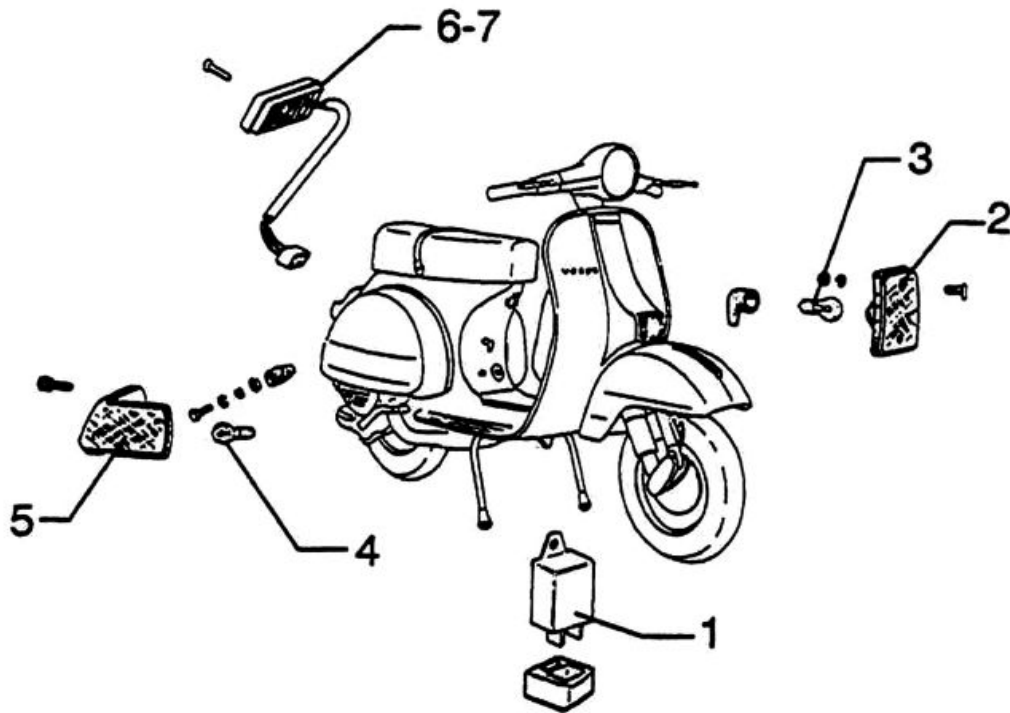

TURN SIGNAL LIGHTS

	Code	Action	Duration
1	005011	Starter relay - Replacement	
2	005012	Front turn signal light - Replacement	
3	005067	Front turn indicator bulb - Replacement	
4	005068	Rear turn indicator bulb - Replacement	
5	005022	Rear turn signal light- Replacement	
6	005006	Turn signals switch - Replacement	
7	005039	Headlight switch - Replacement	

Front wheel

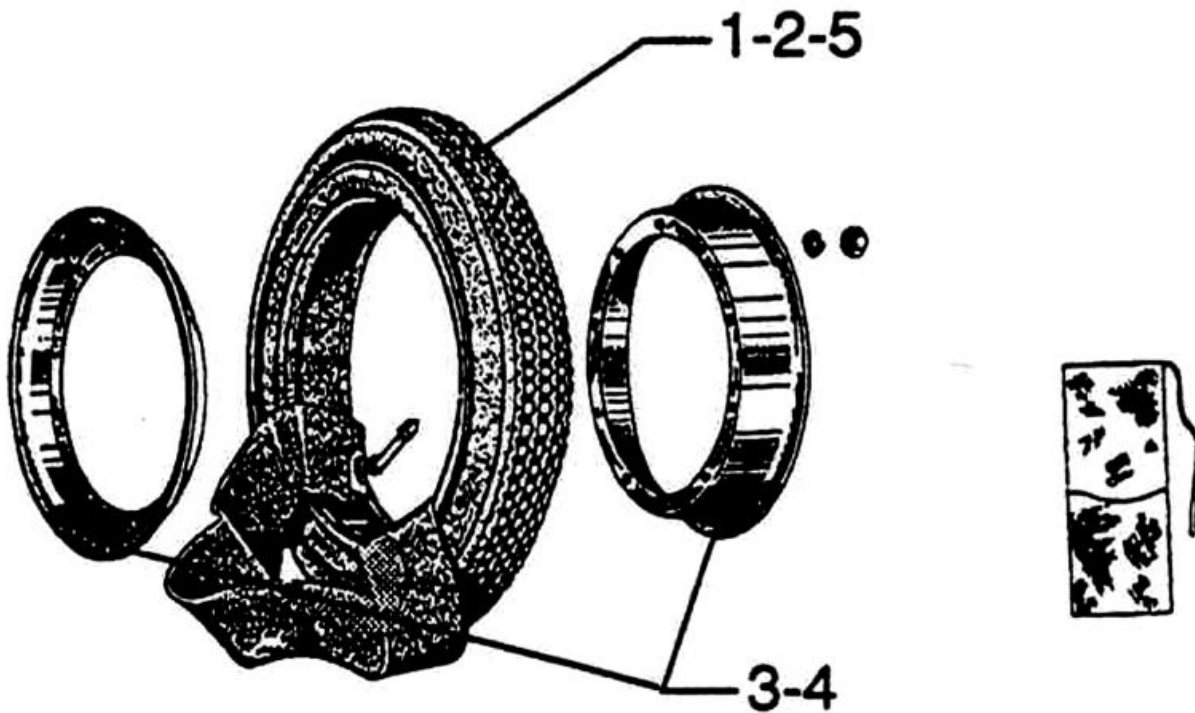

WHEEL

	Code	Action	Duration
1	004123	Front wheel - Replacement	
2	003047	Front tyre - replace	
3	003037	Front wheel rim - Removal and Re-fitting	
4	006018	Wheel rim - Paintwork	
5	003063	Tyre pressure - Check	


Grease tone wheel or drive


Please take note that the code has been introduced:

900001 - Tone wheel / drive greasing - 15'.


Never mistake the codes 002011 (movement sensor replacement) and 005089 (tone wheel replacement) in the event of noise of the indicated components. The grease recommended is TUTELA MRM 2 (soap-based lithium grease with Molybdenum disulphide).

In the following points we indicate with an arrow the area to be greased (1 - Drive, 2 - Tone wheel)

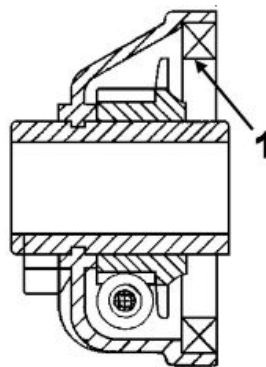

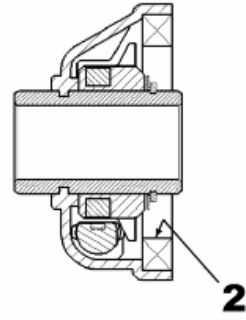


Electric devices

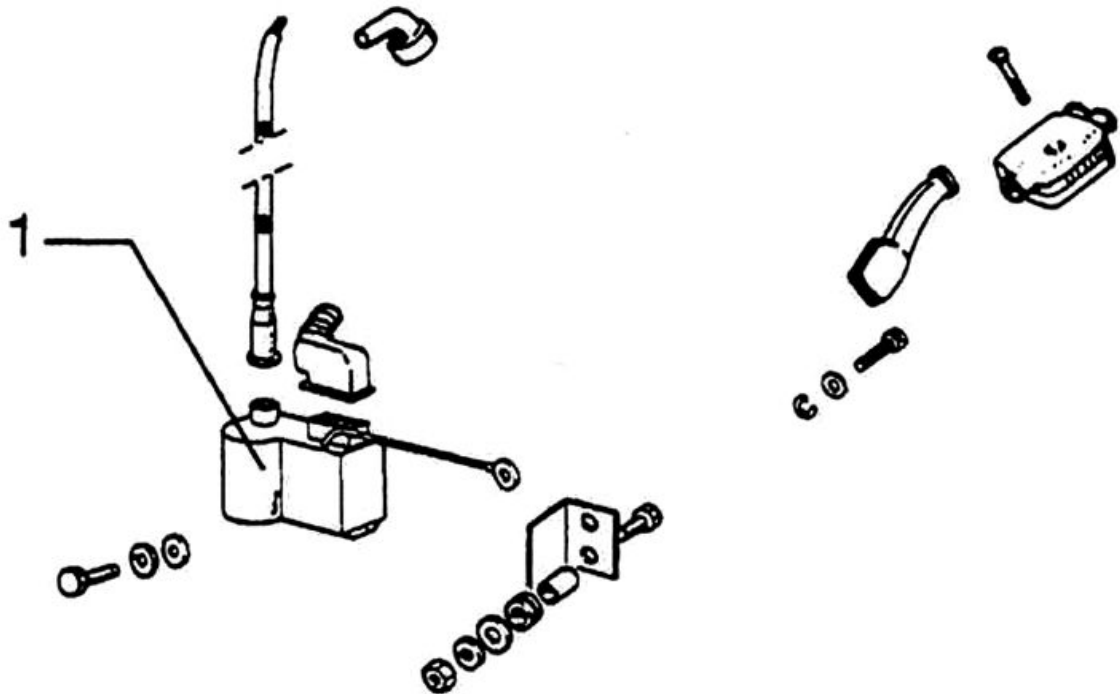


ECU - CDI

	Code	Action	Duration
1	001023	CPU - Replacement	

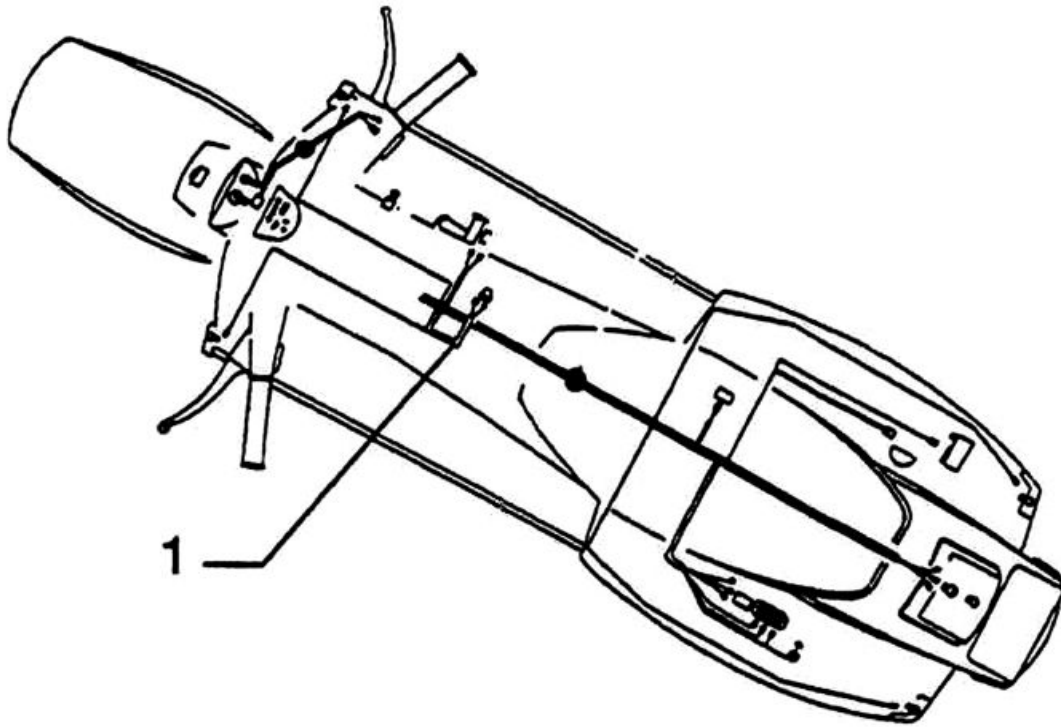


ELECTRICAL CONNECTIONS

	Code	Action	Duration
1	005001	Electric circuit - Replacement and Refitting	

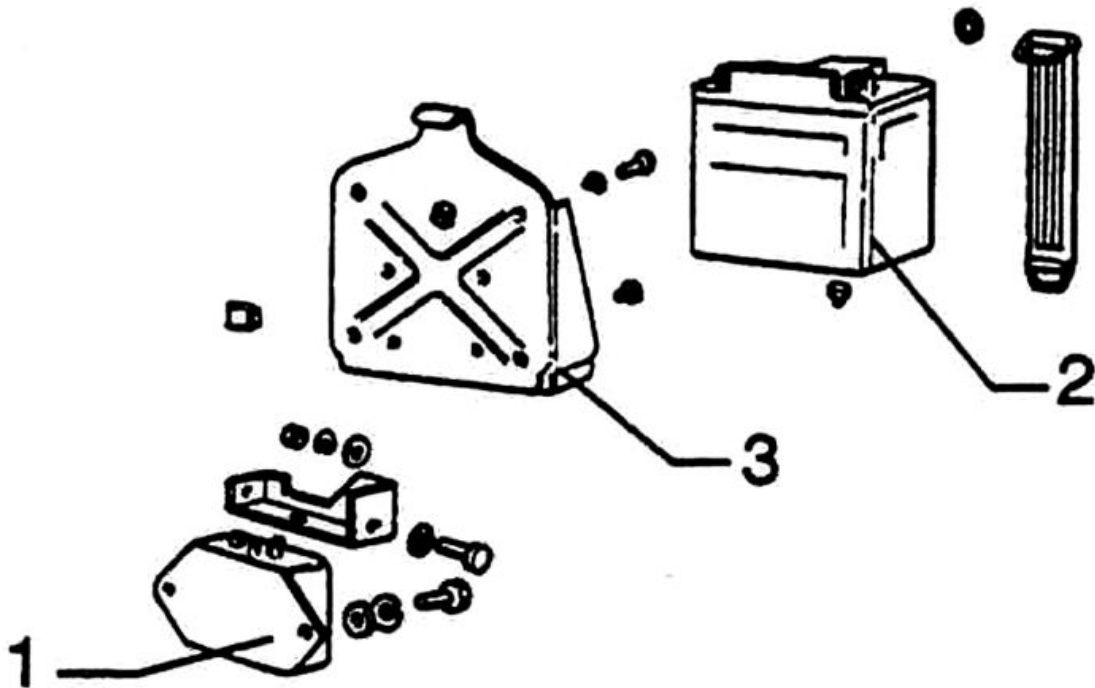


BATTERY - VOLTAGE REGULATOR

	Code	Action	Duration
1	005009	Voltage regulator - Replacement	
2	005007	Battery - Replacement	
3	004071	Battery compartment - Replacement	

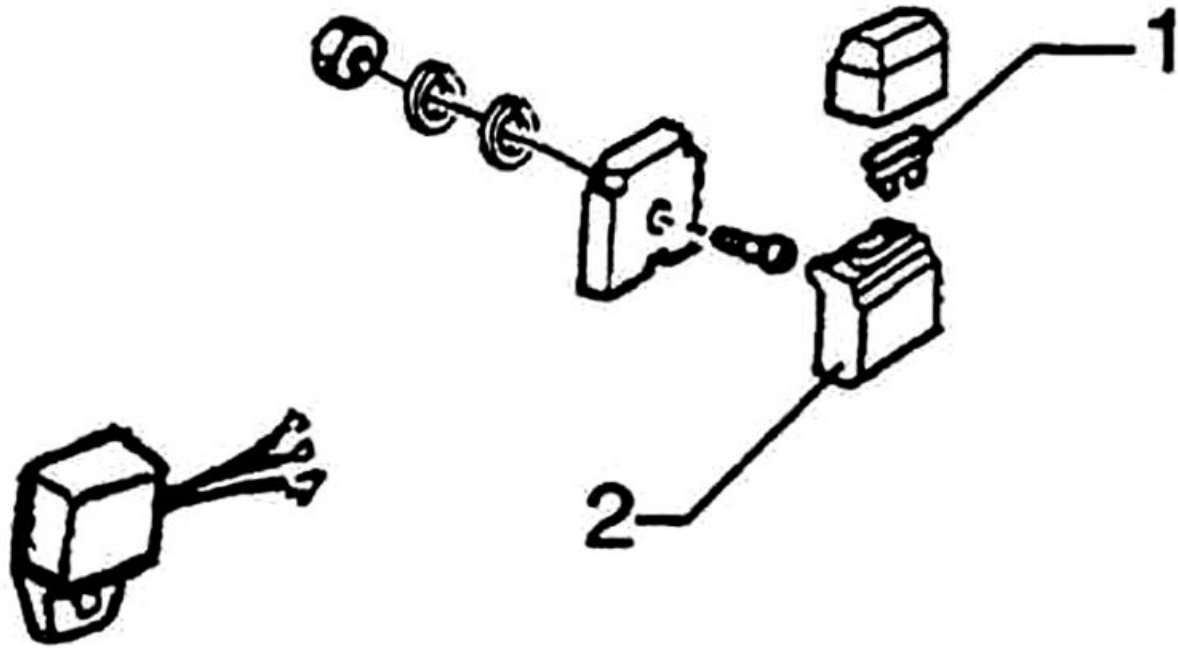


ELECTRICAL DEVICES

	Code	Action	Duration
1	005024	Battery fuse - Replacement	
2	005025	Battery fuse holder - Replacement	

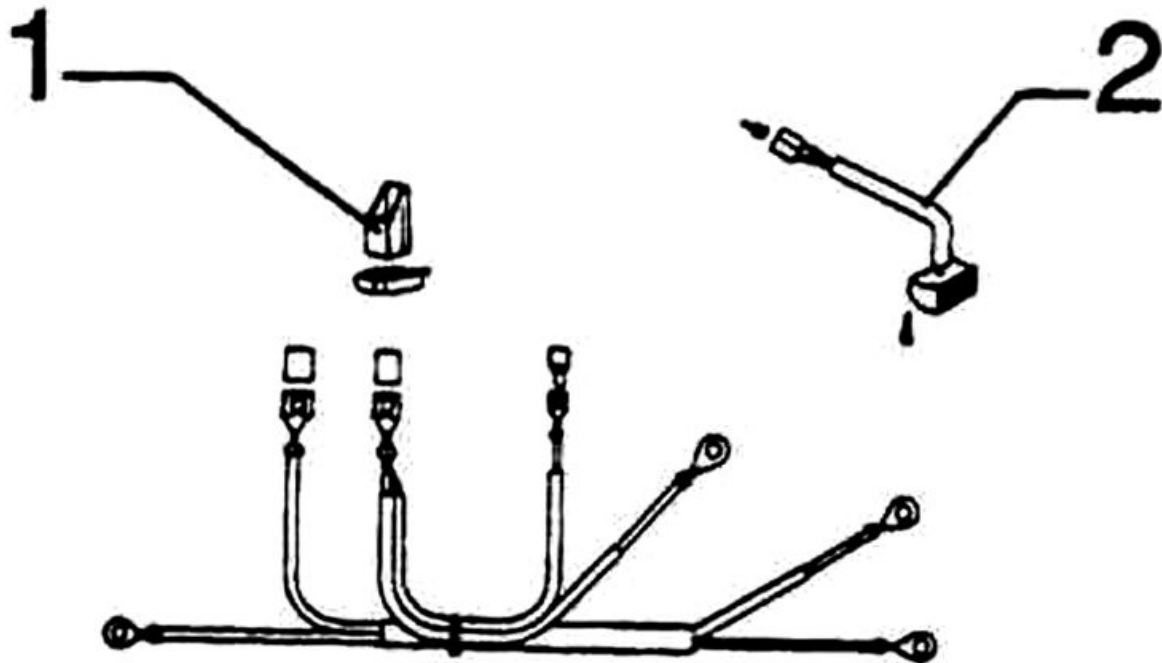

ELECTRICAL DEVICES


	Code	Action	Duration
1	005013	Electronic blinker - Replacement	
2	005045	Starter motor wire harness - Replacement	

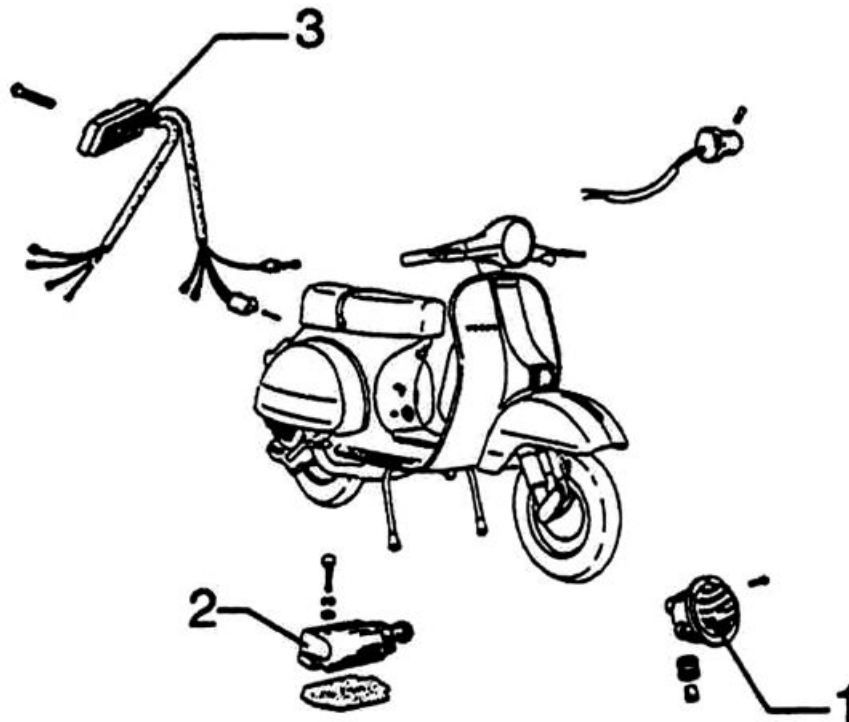

ELECTRICAL DEVICES


	Code	Action	Duration
1	005003	Horn - Replacement	
2	005017	Stop light switch - Replacement	
3	005069	Left switch - Replacement	

Transmissions

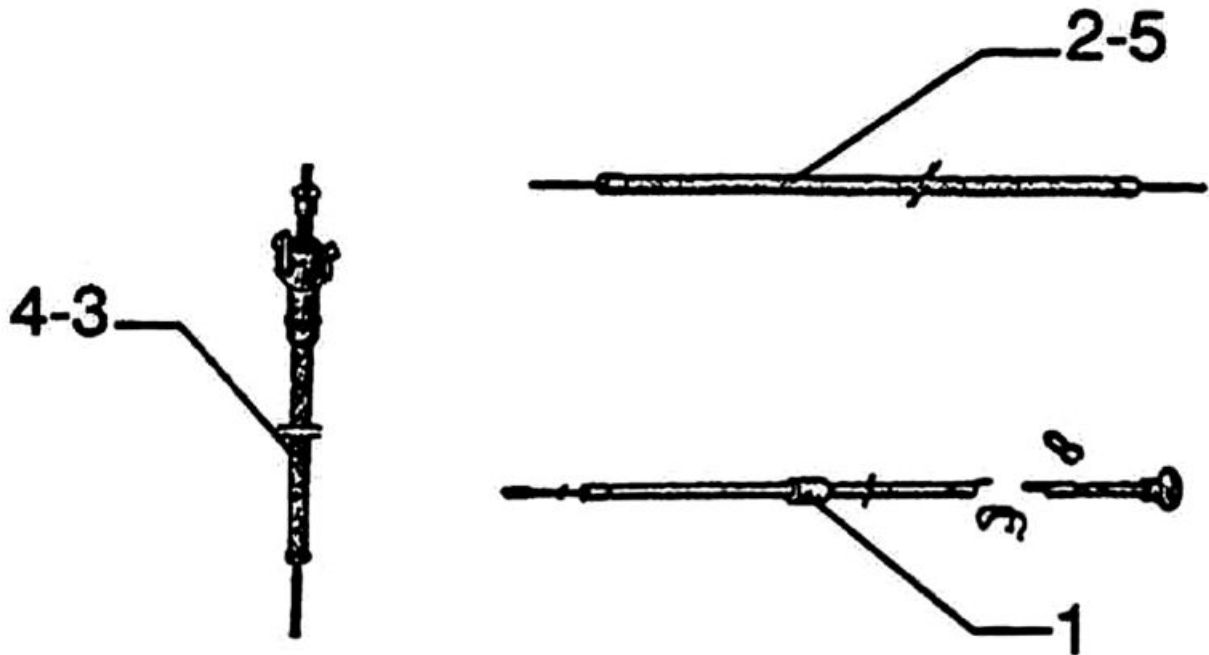

CABLES


	Code	Action	Duration
1	002008	Choke cable - Replacement	
2	002056	Gear shifter cable assy. - Replacement	
3	002051	Odo/Speedometer cable assy. - Replacement	
4	002049	Odometer cable - Replacement	
5	002046	Gear shifter cable - Replacement	

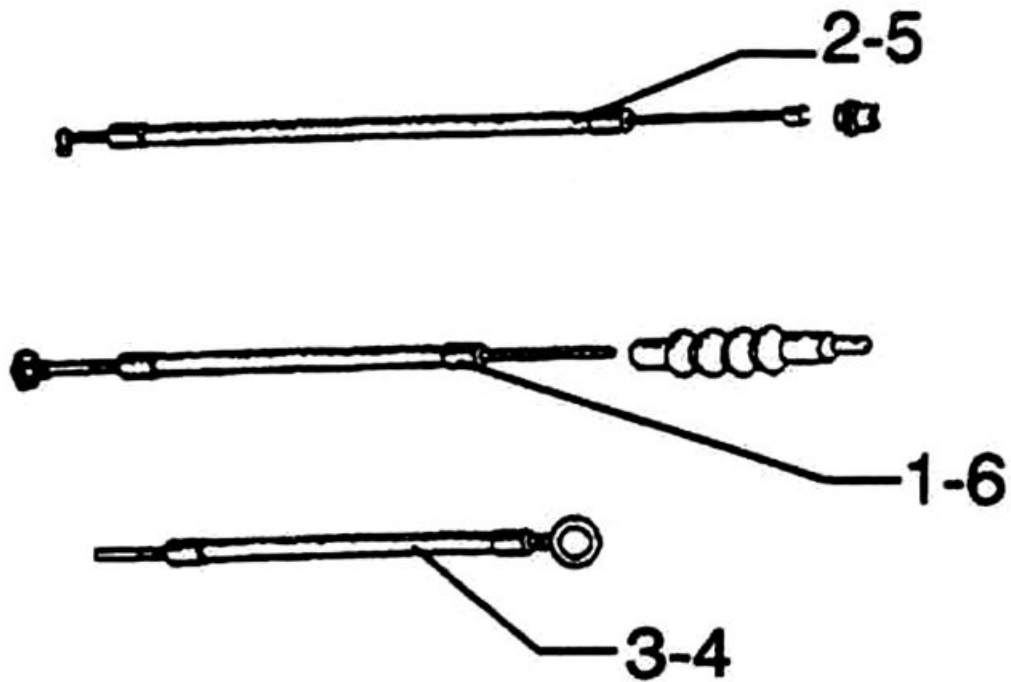

CABLES

	Code	Action	Duration
1	002055	Clutch cable assy. - Replacement	
2	002063	Throttle cable assy. - Replacement	
3	002053	Rear brake transmission complete - replacement	
4	003060	Rear brake cable - Adjustment	
5	003061	Accelerator transmission - Adjustment	
6	002045	Clutch cable - Replacement	


Brake callipers

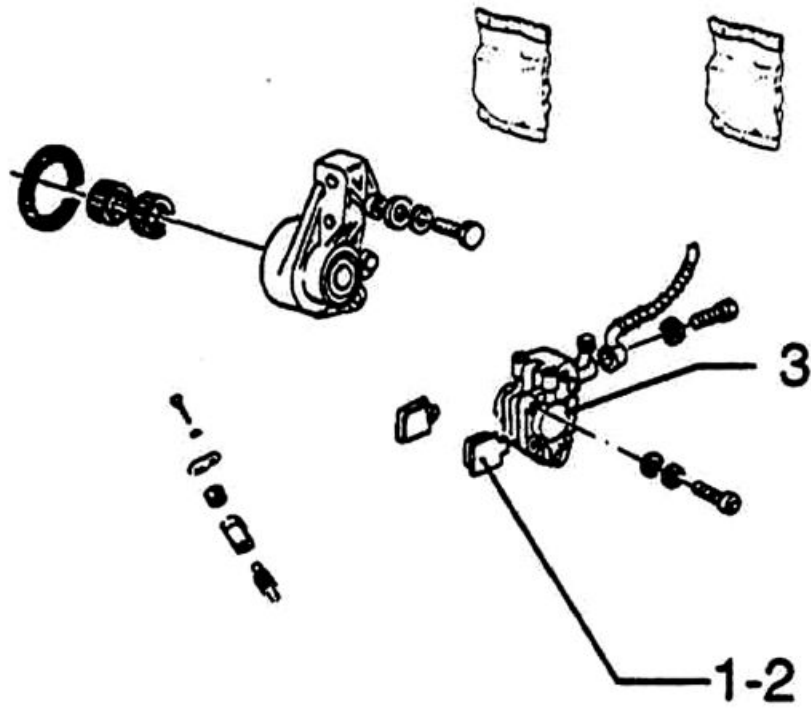

BRAKE CALLIPERS

	Code	Action	Duration
1	003070	Front brake pads - Wear check	
2	002007	Front brake pads - Removal and re-fitting	
3	002039	Front brake calliper - Removal and refitting	


Steering column

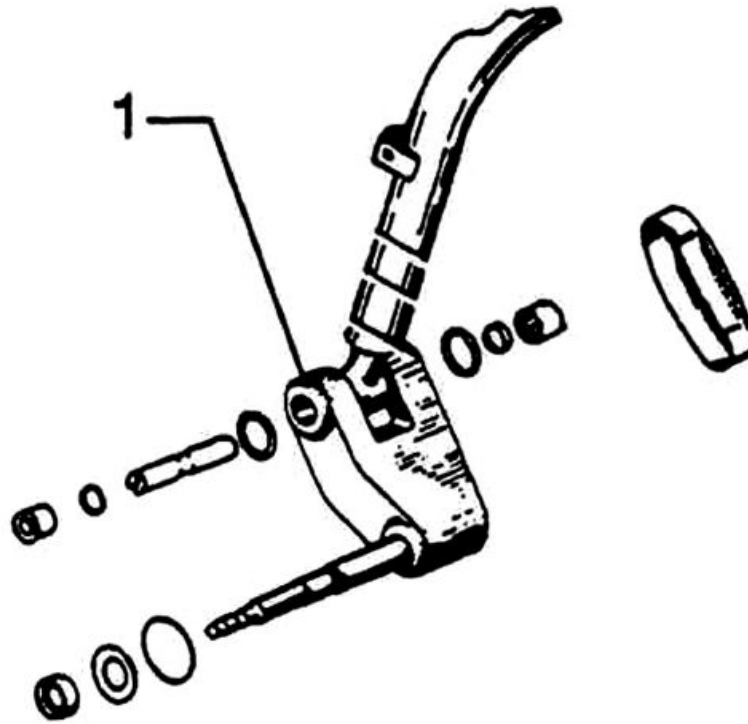

STEERING COLUMN



	Code	Action	Duration
1	003010	Front suspension - Service	

	Code	Action	Duration
3	003040	Front wheel bearings - Replacement	

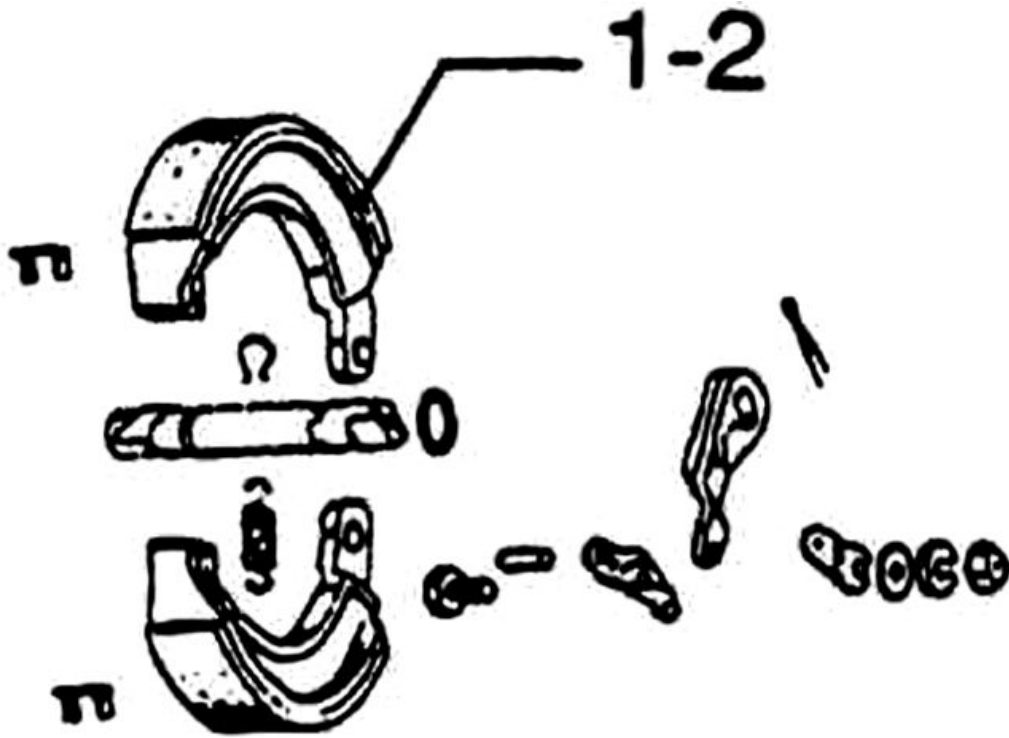


REAR BRAKE SHOES

	Code	Action	Duration
1	002002	Rear brake shoe(s) - Replacement	
2	003071	Rear brake shoe(s) - Wear check	

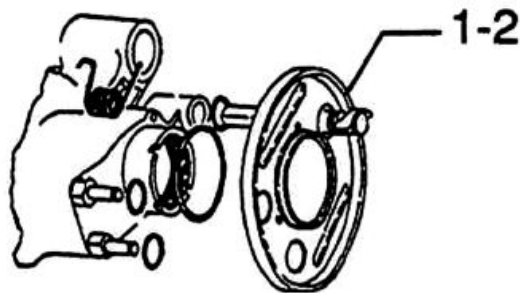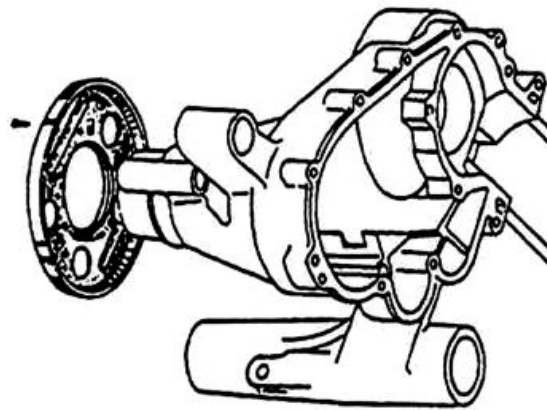

SHOE PLATE


	Code	Action	Duration
1	002016	Rear brake shoe plate - Replacement	
2	003012	Brake shoe plate - Removal and Re-fitting	

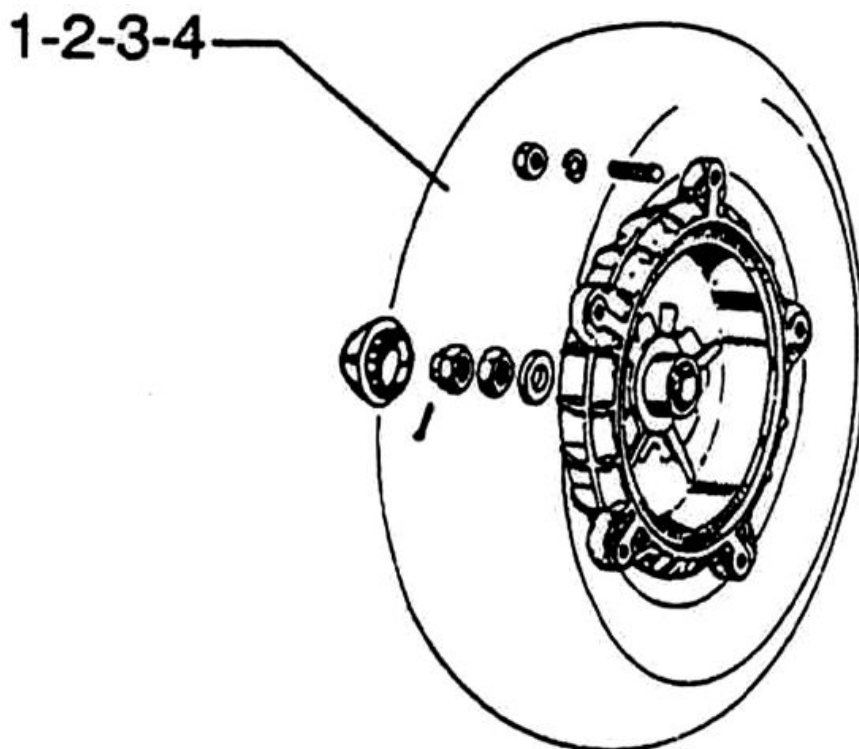

REAR BRAKE DRUM

	Code	Action	Duration
1	002010	Rear brake drum - Replacement	
2	001016	Rear wheel - Replacement	
3	004026	Handlebar cover - Replacement	
4	001071	Rear wheel rim - Removal and refitting	


Clutch cover

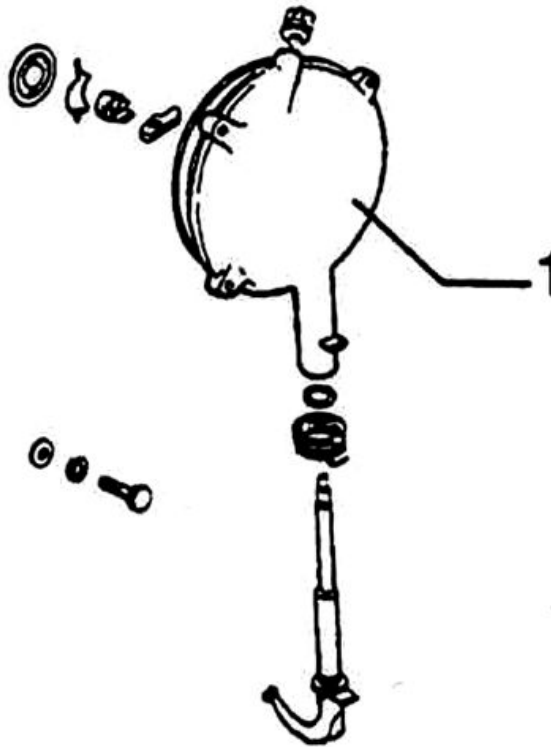

CLUTCH COVER

	Code	Action	Duration
1	001073	Clutch cover - Removal and refitting	


Clutch

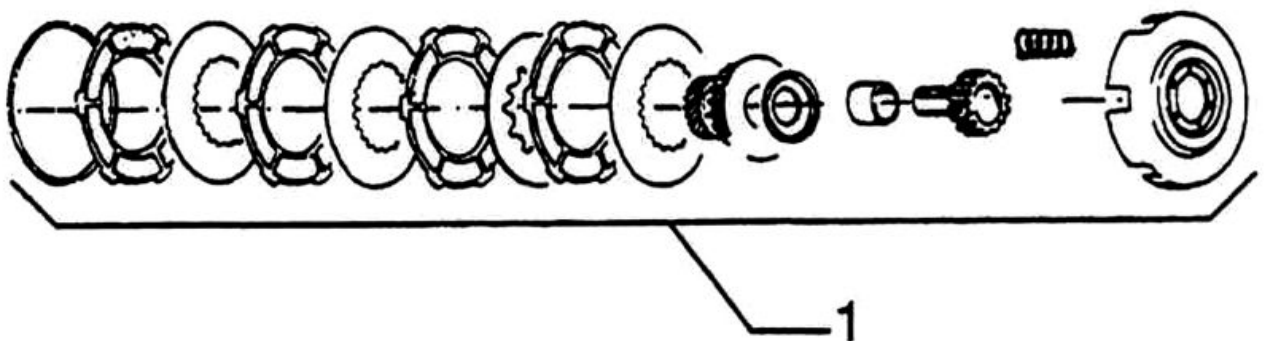

CLUTCH

	Code	Action	Duration
1	001022	Clutch - Removal	

Gear-box

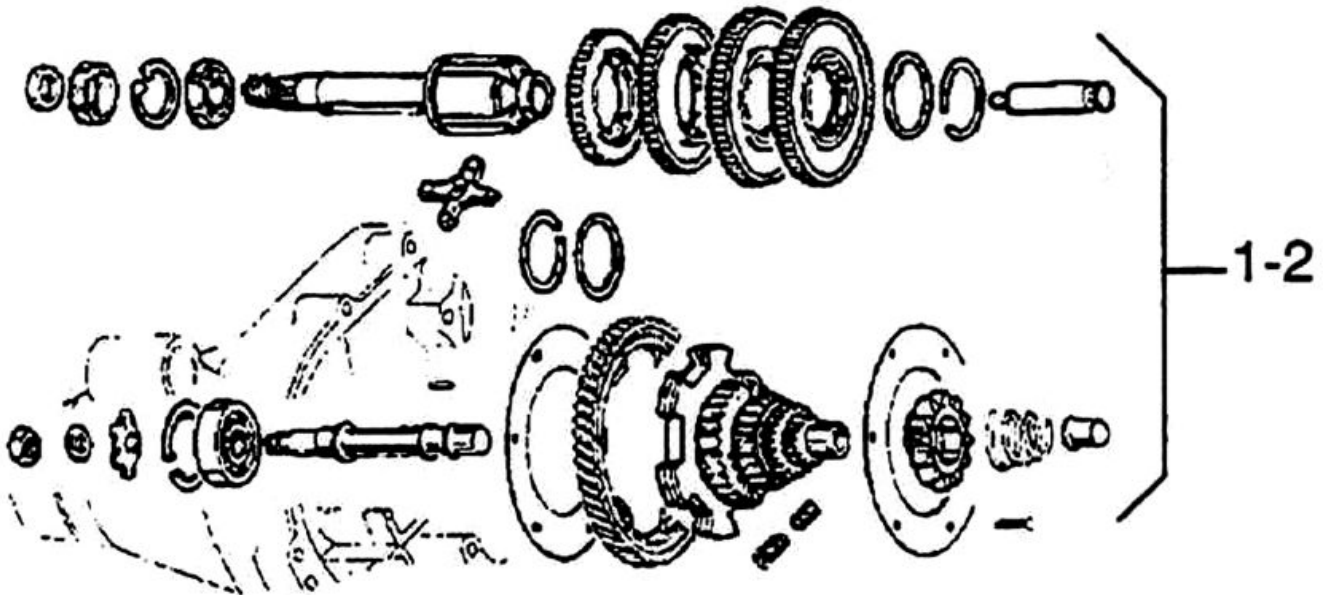


GEAR-BOX

	Code	Action	Duration
1	001119	Gearbox components - Replacement	
2	001025	Gearbox - Overhaul	

Gear shifter

GEAR SHIFTER

	Code	Action	Duration
1	001029	Gear shifter - Overhaul	

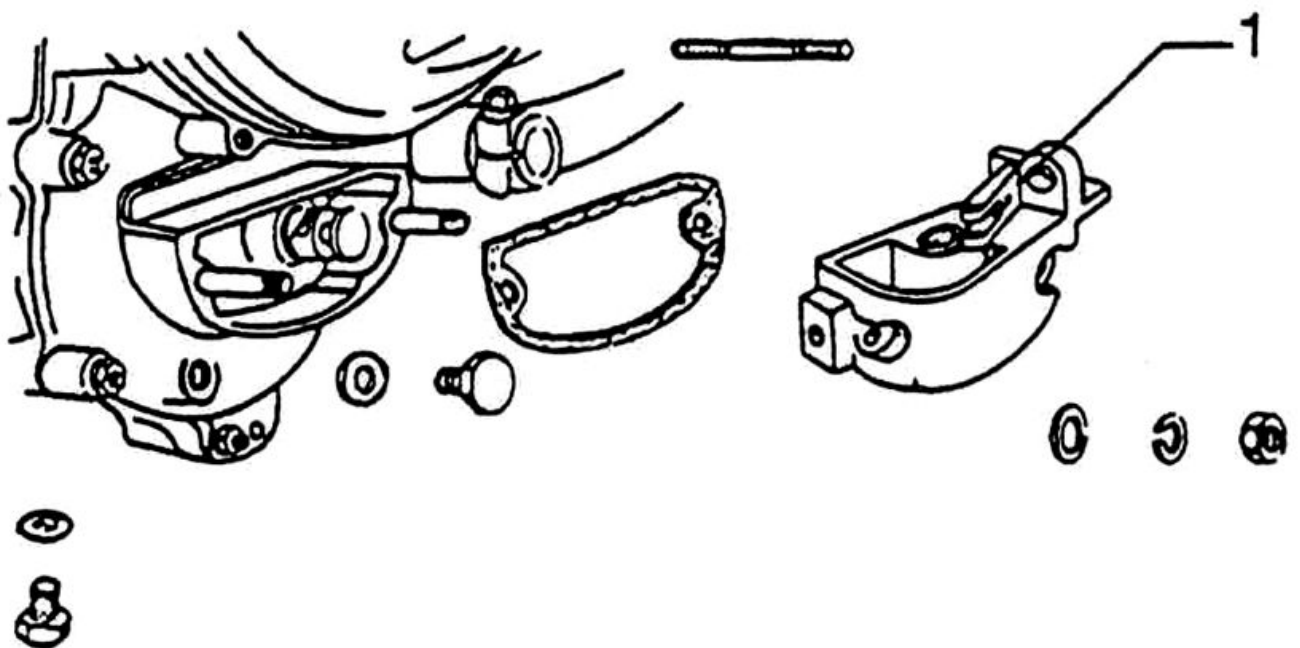

GEAR SHIFTER FASTENERS

	Code	Action	Duration
1	001077	Gear shifter components - Removal and refitting	

A

Air filter: 29

B

Battery: 38, 46

Brake: 81, 82, 84, 85, 129

Brake fluid:

C

Carburettor: 10, 28, 61, 62, 64, 104

F

Fuel: 62, 90, 113

Fuses: 45

H

Headlight: 30, 87

Horn:

I

Instrument panel: 119

M

Maintenance: 7, 24

S

Shock absorbers: 79

Spark plug: 29

T

Tank: 90, 113, 114

Transmission: 9

Tyres: 10